

MEDIA-NAV EVOLUTION



User precautions

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. Always comply with the laws of the country in which you are travelling.



Precautions when operating the system

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation

- Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
- Depending on the geographical area, the "map" may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning material damage

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign bodies into the player.
- Do not use products containing alcohol and/or spray fluids on the area.

Precautions when using the phone

- There are laws which govern the use of phones in vehicles. The use of hands-free phones is not permitted in all driving conditions: all drivers must remain in control of their driving;
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).



The description of the models given in this manual is based on the specifications at the time of writing. **This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where they are sold. This manual may also contain information about functions to be introduced later in the model year. The screens shown in the user manual are not contractual.**

Depending on the make and model of your telephone, some functions may be partially or completely incompatible with your vehicle's multimedia system.

For more details, please consult an Authorised Dealer.

CONTENTS

General information	4	4x4 info	76
General description	4	Settings	77
Introduction to the controls	7	System settings	77
Switching on, off	17	Updating the system and maps	79
Operate and use	18	Operating faults	84
Volume.....	20		
Navigation	21		
Enter a destination.....	21		
Navigation settings	27		
Reading a map	31		
The navigation system.....	34		
Guidance	35		
Map settings	41		
Managing the favourites	42		
Audio/Multimedia	44		
Auxiliary audio sources.....	44		
Listen to the radio	47		
Video.....	51		
Audio setting	53		
Phone	54		
Pair and connect a phone.....	54		
Call management	58		
Using voice recognition	61		
Apps	64		
Android Auto™, CarPlay™	64		
Vehicle	67		
Eco driving.....	67		
Reversing camera	68		
Multi-view camera.....	71		
Remote engine start-up	73		

GENERAL DESCRIPTION

1

Introduction

Your vehicle's multimedia system performs the following functions:

- radioRDS;
- radioDAB;
- management of auxiliary audio sources;
- hands-free telephone;
- voice recognition;
- navigation assistance;
- road traffic information;
- information on areas for particular care;
- parking assistance (rear view camera or multi-view camera);
- remote engine start-up programming;
- information on the incline of the vehicle (4x4 information);
- information on your driving style and driving advice in order to optimise your fuel consumption.

Radio functions

The multimedia system can be used to listen to FM (frequency modulation), DAB (digital audio) and AM (amplitude modulation) radio stations.

The DAB system allows better sound reproduction and access to text information about the current programme etc.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency message(s).

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways to connect your portable audio player, depending on the type of device you have:

- 3.5 mm Jack socket;
- USB audio;
- Bluetooth® connection.

For more information on the list of compatible devices, please contact an authorised dealer or visit the manufacturer's website if available.

Hands-free phone function

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- send/receive/suspend a call;
- consult the list of contacts from the phone memory;
- access the call logs for calls which have come through the system;
- dial emergency numbers.

Telephone compatibility

Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible phones, contact an authorised dealer or visit the manufacturer's website if available.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

Remote engine start-up function

When fitted, this function lets you programme the engine to start remotely, in order to heat or ventilate the passenger compartment up to 24 hours before using the vehicle.

Eco driving

(availability depends on the vehicle)

GENERAL DESCRIPTION

The "Driving Eco" menu displays an overall score that reflects your driving style in real-time.

Navigation assistance function

The navigation system automatically calculates the geographical position of the vehicle by receiving GPS signals.

It suggests a route to your chosen destination using its road map. Finally, it indicates the route to take, step by step, using the display screen and voice messages.


traffic information

This function keeps you informed about traffic conditions in real time.

Road safety alerts or alert points

This service allows you to receive alerts in real time, such as excess speed alerts or the position of road safety alert areas.

Displays

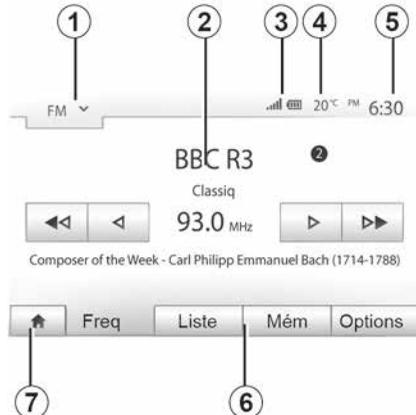

Menu screen

1. Mode selection area.

Displays the selected mode. When the mode selection area is touched, a drop-down menu will appear.

2. Table of contents area.

Shows the contents of a menu item and related information.

3. Telephone information area.

If the Bluetooth® system is activated, the reception and battery level of the connected device will be displayed.



4. Exterior temperature.

5. Time area.

6. Menu area:

- display subordinate menu of mode;
- shows current menu as highlighted.

7. Area Home or return to navigation.

Depending on the mode you are in, this area displays:

- the "Home" button: to return to the home menu;
- the "Back" button: to return to the previous screen;
- the "Flag" button: to return to the navigation screen.

GENERAL DESCRIPTION

1



8. Mode standby and clock display

9. Remote engine start selection area.

Navigation screen

Availability depends on the country and/or regulation in place.

10. Map mode (2D/3D and 2D North).

11. Name of the next street to take on your route.

12. Current audio information.

13. Options for route and map setting.


14. Voice guidance ON/OFF.

15. Traffic information.

INTRODUCTION TO THE CONTROLS

System panels

Screen selections are made by touching the desired selection on the screen.

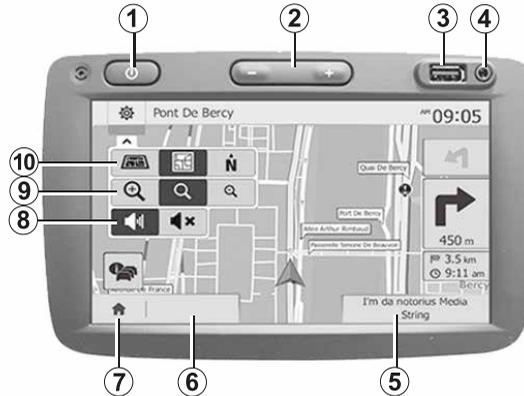

INTRODUCTION TO THE CONTROLS


1



INTRODUCTION TO THE CONTROLS


System panels

Screen selections are made by touching the desired selection on the screen.

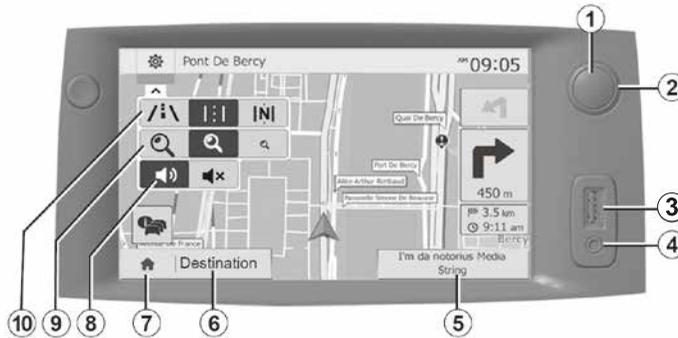







INTRODUCTION TO THE CONTROLS

1

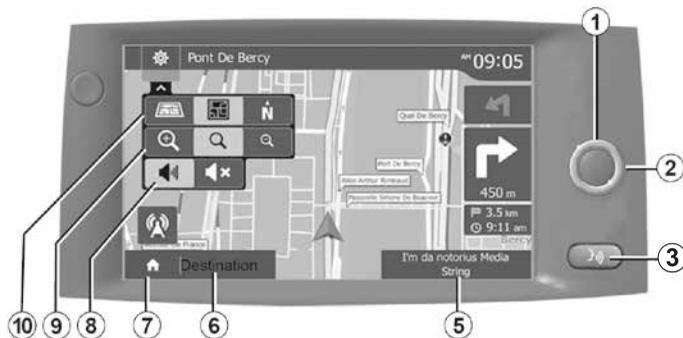






INTRODUCTION TO THE CONTROLS

Steering column controls

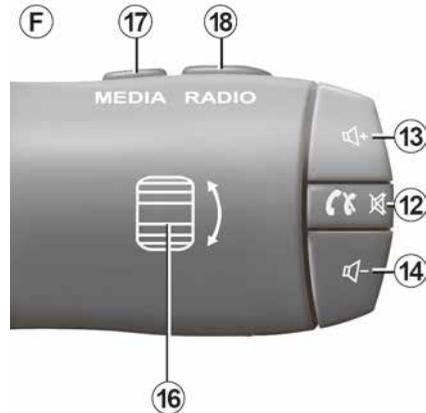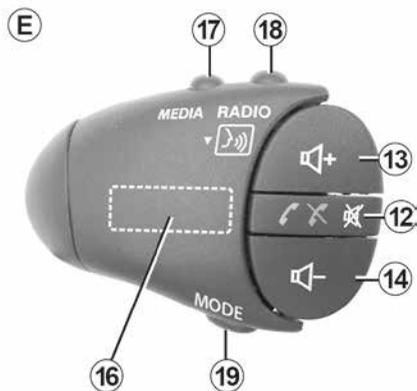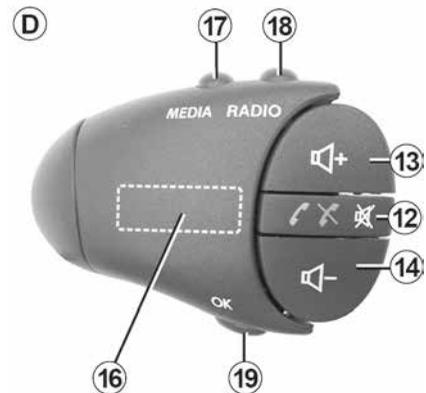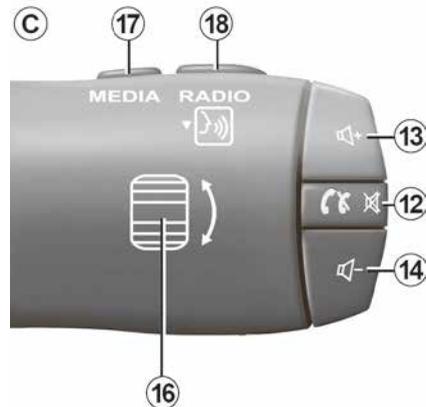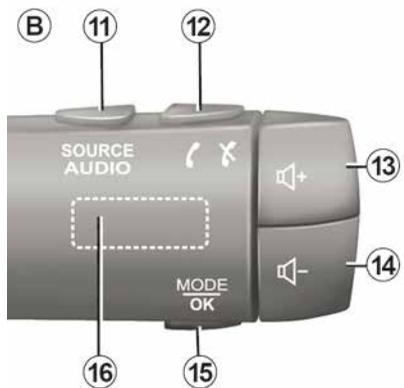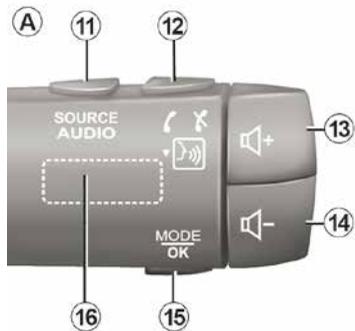


INTRODUCTION TO THE CONTROLS




1

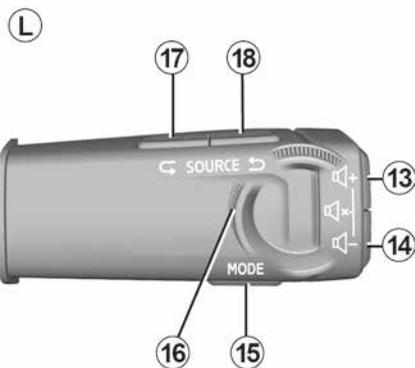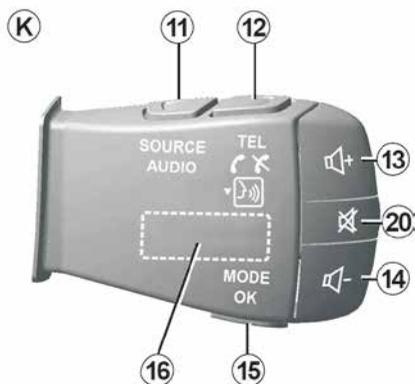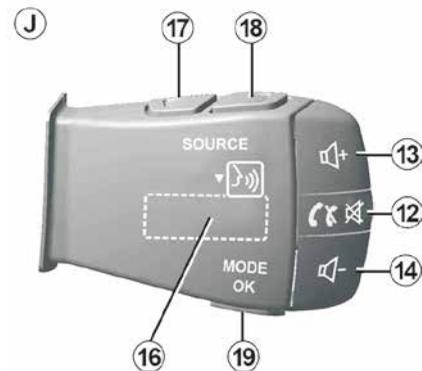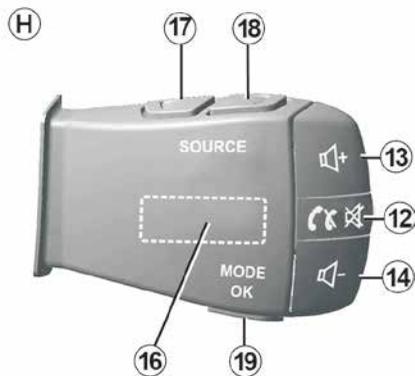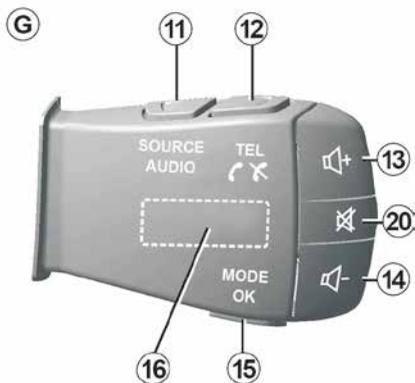

Steering column controls

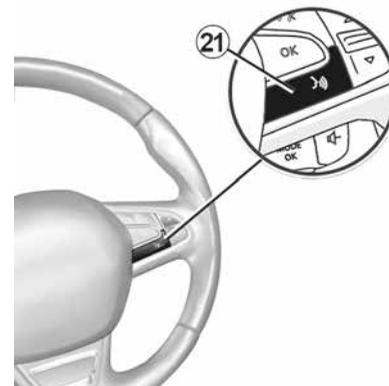

INTRODUCTION TO THE CONTROLS

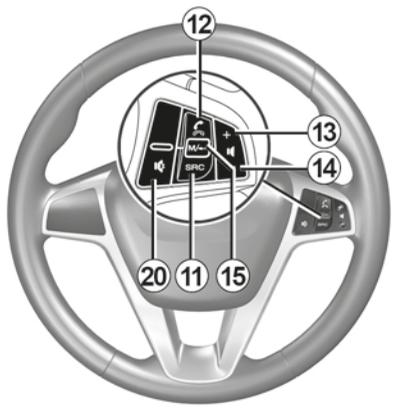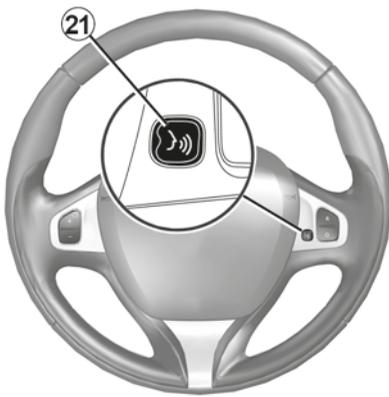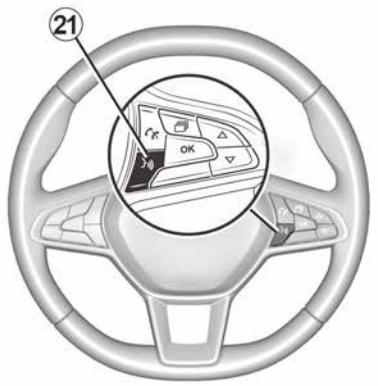

INTRODUCTION TO THE CONTROLS

1

Functions

	Function
1	Brief press: standby screen On/Off. Press and hold: restart the system.
2, 13, 14	Adjust the volume.
3	USB connection, or activate/deactivate your smartphone voice recognition, if the phone is connected to the multimedia system (depending on equipment).
4	3.5 mm Jack socket.
5	Access the media currently playing (FM / AM / DAB / USB / Bluetooth® / AUX).
6	Access the "Navigation" menu.
7	Access the "Home" menu.
	Phone or auxiliary sources: exit the current window to return to the navigation screen (current) or to the previous screen.
8	Mute/unmute the voice guidance.
9	Change the map zoom.
10	Change the map view mode (2D/3D/2D North).
11	Select the audio source (FM / AM / DAB / USB / Bluetooth® / AUX).

INTRODUCTION TO THE CONTROLS

	Function
12	<p>When receiving a call:</p> <ul style="list-style-type: none"> – Press briefly: to answer the call; – Long press: reject the call. <p>Brief press during a call: end call.</p> <p>When listening to an audio source: mute/unmute the "MUTE" sound (only for controls C, D, E, F, H and J).</p> <p>Brief press: access the "Tel." menu (only for controls A, B, G and K).</p> <p>Brief press: activate/deactivate your smartphone voice recognition (only for controls A and K).</p>
13	Increase the volume of the audio source currently in use.
14	Decrease the volume of the audio source currently in use.
13+14	"MUTE/UNMUTE" the sound (only for controls A , B and L).
15, 19	<p>Radio: change the radio station mode ("Frequency", "List", "Preset").</p> <p>USB/Portable digital audio player media source: change the play mode for the media currently playing ("Main" or "List").</p>
16	<p>Rear dial:</p> <ul style="list-style-type: none"> – Radio: change radio mode (Frequency/List/Preset); – Media: previous/next track. <p>Brief press: confirm an action (only for control C).</p>
17	Change media (CD/ USB/ AUX).


INTRODUCTION TO THE CONTROLS

1

	Function
18	Brief press: change radio mode (FM/AM/DAB). Press and hold: activate/deactivate your smartphone voice recognition (only for control C , E and J).
20	Radio mute on/off. Pause/play an audio track. Interrupt the voice recognition voice synthesizer.
21	Activate/deactivate voice recognition on your smartphone if it is connected to the multimedia system.

SWITCHING ON, OFF

Switching on

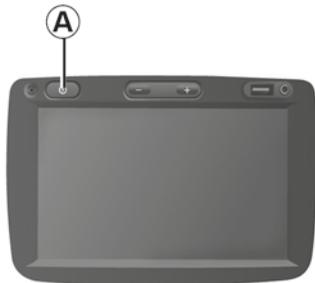

The multimedia system switches on automatically when the ignition is switched on. In other cases, press button **A** to switch on the multimedia system.

With the ignition off, you can use the system for twenty minutes. Press button **A** to make the multimedia system operate for about twenty more minutes.

i For safety reasons, if the temperature is too low or too high inside the vehicle, the multimedia system will not start or will switch off automatically. Wait a few moments for the temperature to return to a more suitable level for the multimedia system to operate properly.

Switching off



The multimedia system may take a few minutes to update and deactivate after the ignition is switched off, depending on the applications in operation.

Press and hold the **A** button (until a black screen appears) to restart the multimedia system.

Standby screen



The standby screen mode allows the display screen to be switched off. When in standby clock mode, the radio or guidance system does not operate. The standby screen displays the time and exterior temperature. Briefly press **A** to activate/deactivate the standby screen.

OPERATE AND USE

1

Multimedia screen 1



Briefly press:

- Item selection;
- Item execution (Media playing screen).

From the "Media", "Play" menu, pressing the next button switches to the next title.



Press and hold:

- saving an item (radio station for example).

From the "Radio", "Freq." menu, press and hold the preset number stores the radio station that is currently playing.

- Fast scroll.

When touching with long presses the list down buttons, scroll (per page) with acceleration.

- Fast forward/rewind (Media playing screen).

From the "Media", "Play" menu, press and hold the "Fast forward/rewind" button to fast forward/rewind the track playing.


Back to previous menu "Welcome"



The system goes directly to the "Welcome" menu if you press and hold **2** or briefly press **3** wherever you are in the system.

OPERATE AND USE

Audio: using the steering column controls

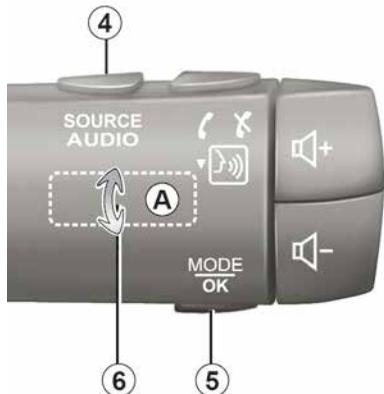


Press button **5** to change the radio station search mode.

Rotate wheel **6** to change the station (movement **A**).

Press **4** to change the source (USB, AUX, AM, FM, DAB and Bluetooth®).

Using an alphabetical keyboard

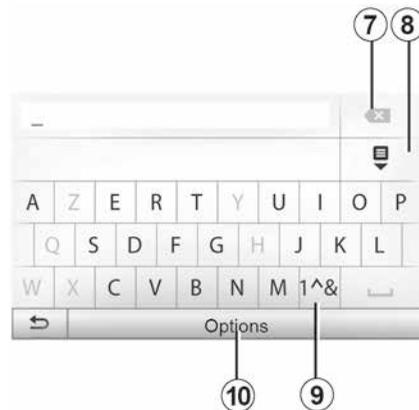

When entering a heading using an alphabetical keyboard, choose each letter using the keypad.

When choosing each letter, the system will remove the brightness of certain letters to help entering them.

Press **7** to delete the last character entered.

Press **8** to display the list of results.

Press **9** to use numbers or symbols.

Press **10** to change the keyboard configuration.

VOLUME

1

Volume

Adjust the sound level when listening to the different sources, messages, ringtones and phone communications:

- by turning or pressing button **1** on the front panel of the multimedia system;
- by pressing control **13** or **14** on the steering column control.

To adjust this function → **53**.

The radio source being listened to is interrupted when "TA" traffic information, news bulletins or a warning message is received.

Note: the volume set during playback is not stored for the next system restart.



Set the volume to a reasonable level so that outside noise can be heard.

Mute

To mute the sound, press button **21** on the steering wheel control or button **3** on the multimedia panel (depending on equipment) or on the steering wheel **12** (only for controls **C**, **D**, **E**, **F**, **H** and **J**) or simultaneously press but-

tons **13** and **14** on the steering wheel control (only for controls **A**, **B** and **L**).

The "MUTE" icon is displayed at the top of the screen to indicate that the sound is deactivated.

To resume the current audio source, briefly press button **21** on the steering wheel control or button **3** on the multimedia panel (depending on equipment) or on the steering wheel **12** (only for controls **C**, **D**, **E**, **F**, **H** and **J**) or simultaneously press buttons **13** and **14** on the steering wheel control (only for controls **A**, **B** and **L**).

This function is deactivated automatically when the volume control is used or when a news or road traffic bulletin is broadcast.

Volume adjustment according to speed

When this function is activated, the audio and navigation volume will vary according to the vehicle speed.

To activate and adjust this function → **53**.

ENTER A DESTINATION

Destination menu

Press "Welcome", "NAV", "Destination" to access the destination menu.

The destination menu offers several methods to enter a destination:

- Enter an address (complete or partial);
- Select an address from "Points of Interest";
- Select a destination from the previous destinations;
- Select an address from the Favourites;
- Select a destination on the map;
- Select a latitude and longitude.

Entering an address

To enter an address, press **1**.

This item allows you to enter all or part of the complete address: country, city, street and number.

Note: only addresses known to the system through the digital map are authorised.



At the time of the first use:

- press "Country";
- enter the name of the country required using the keypad.

When entering the address the system will remove the brightness of certain letters to help enter the address.

The system may suggest several country lists by pressing **2**. Select the required country in the lists.

Do the same for "Town/Suburb", Street, "Side street" and "House number".



Note:

- "Side street" and "House number" can be activated once you have selected "Street";
- when entering the street, it is not necessary to specify the type of road (street, avenue, boulevard etc.);
- the system stores previously entered address in its memory. Once you have entered a destination by address, that address will be displayed when the device is next used.

ENTER A DESTINATION

Select from the "Points of interest" (POI)



You can select your destination from the points of interest.

You can find a place in different ways:

- using the quick search feature, you can quickly find a nearby place by its name;
- using the preset search feature, you can find frequently searched types of places with only a few touches on the screen;
- you can search for a place by its category.

Quick search for points of interest

The quick search feature lets you quickly find a point of interest.

Press the map somewhere to search for points of interest. Depending on your position, one or more **3** points will be displayed on the screen.

Press **4** and then "Places of interest around cursor" to show the list of points of interest with names and distance from the place selected.

Search for points of interest using preset categories

The preset search feature lets you quickly find the most frequently selected types of places.

Press "Welcome", "NAV", "Destination", "Points of Interest" to access the pre-programmed categories.



Categories (service station/charging station/car park/restaurant)

– If an active route exists, Points of Interest Petrol station, "Charging station" and "Restaurant" are searched for along the route. Point of interest "Parking" is searched around the destination.

– If there is no active route (no destination selected), these points are searched around the current position.

– If the current position is not available either (no GPS signal), they are searched around the last known position.



Search for points of interest by category

You can search for points of interest by category and subcategory.

ENTER A DESTINATION

Press "Welcome", "NAV", "Destination", "Points of Interest", "Customised search".

Select the area around which the place should be searched for:

- press "In a town" to search for a place in a selected town/district (the list of results will be ordered according to the distance from the centre of the selected town);
- press "Along the route" to search along the active route rather than around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for nearby service stations, charging stations or restaurants (the result list will be ranked by the length of the necessary detour);
- press "Around my location" to search around your current position or, if this is not available, around the last known position (the result list will be ordered according to the distance from this position);
- press "Vicinity of the destination" to search for a place around the destination on the active route (the list of results will be ordered according to the distance from the destination).

Selecting a destination from the previous destinations



Press **5** to find a destination you have previously defined.


Selecting an address from the Favourites

You can find a destination in your favourite destinations. To utilise this function more effectively, we recommend that you save destinations to which you often travel in advance.

Firstly, save the favourite destinations by searching for the address → **42**.

Press "Welcome", "NAV", "Destination", "Favourites" to display the list of favourite destinations.

Selecting a destination on the map

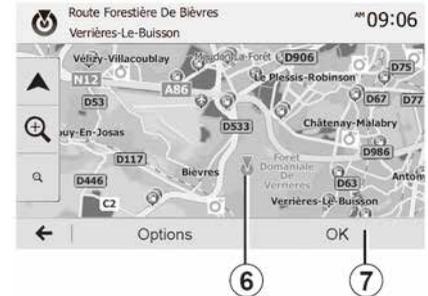


Use this function to search for a destination by browsing through the map:

- press "Welcome", "NAV", "Destination", "Search on map" to select the destination on the map;
- Then press on the location on the map that you want to select as your destination. Point **6** is displayed;
- press "**7**" to confirm.

ENTER A DESTINATION

Entering the coordinate of the destination

2

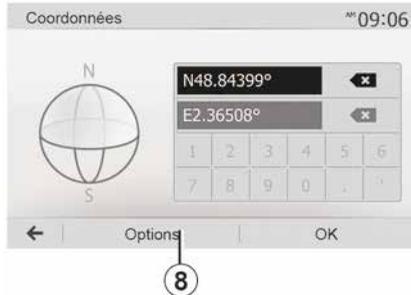

This allows you to search for a destination by entering its coordinates.

Press "Welcome", "NAV", "Destination", "Coordinates".

You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.

Press **8** and then UTM to enter the coordinates in UTM format.

Sorting the list



The result of searching a destination by point of interest, history and favourites can be sorted by name and distance. If an active route exists, they can be sorted by detour. Press **9** to display the map on the screen.

Finding a destination by names

In case of selecting a destination by point of interest, history or favourites, you can search for destination in the list by their names. Press "Search" and enter the name using the keypad.

Confirming the destination



There are several possible options before confirming a destination:

- « OK » ;
- « Options ».

A 10 second countdown will start. If you perform no action during this time, guidance will begin automatically.

« OK »

– If there is no active route (destination is not selected), press **10** to confirm the destination as a new route.

ENTER A DESTINATION




– If an active route exists, you can select the destination as a new route or stage. Press **10** and then "New Route" or "Waypoint".

« Options »

Before the 10 second countdown ends, the following choices will appear on the screen:

"Other routes"

Press **11** to change or modify the route.

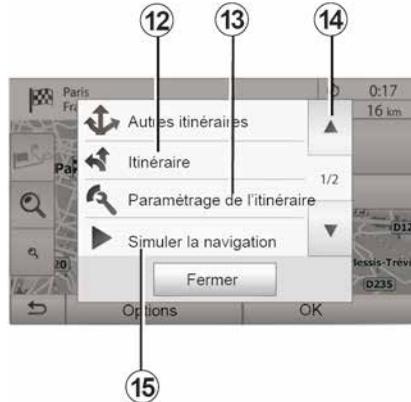

« Route »


Press **12** to view a breakdown of your route ➔ **35**.

"Configuring a route"

Press **13** to adjust your route depending on the desired roads and route mode.

"Simulate Navigation"

Press **15** to view of simulation of the route you have selected ➔ **35**.

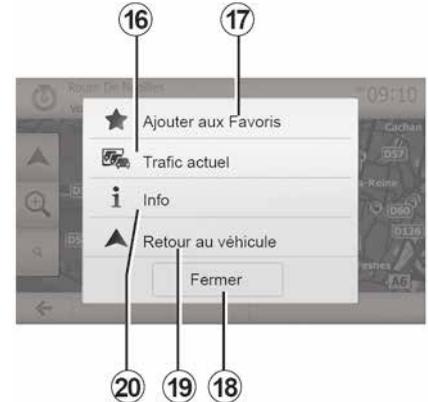

"Current traffic"

This function enables you to obtain information on traffic incidents over the course of your trip, or in your immediate vicinity. To access it, press **14** and then select "Current traffic".

« Options »

At the end of the 10 second countdown, the following choices appear on the screen:

"Add as Favourite"

Press **17** to save the selected destination in your favourite destinations.

"Current traffic"

Press **16** to obtain information about traffic incidents flagged on your route or in your immediate vicinity.

ENTER A DESTINATION

"Info"

Press **20** to view the address, latitude, longitude and telephone number of a point of interest (only activated after selecting a point of interest).

For electric vehicles, you can access additional information about the charging station:

- distance to and address of the station;
- the charging type (free, on subscription, etc.);
- the number of charging sockets (available and total);
- the type of charging terminal;
- ...

"Return to vehicle"

Press **19** to return to the current vehicle position.

Note: to close the "Options" window, press **18**.

NAVIGATION SETTINGS

"Warnings"

This item allows you to set up warnings.

Warning in the event of excess speed

Maps may contain information about the speed limits of the road segments. The system is able to warn you if you exceed the current limit.



This information may not be available for your region, or may not be fully correct for all roads on the map. The following warning types are available:

- Beep: you receive a non-verbal warning when you exceed the speed limit;
 - Visual warning: the current speed limit is displayed and flashes in red on the map when you exceed it.
- Press "ON" or "OFF" to activate or deactivate the warning.

Speed limit always visible

Activate or deactivate the speed limit display for the section of road by pressing "ON" or "OFF".

Alert point warnings

When the driver crosses the increased care area, a visual warning signal appears on the screen, along with a beep. These hazardous areas are sections of road on which drivers should take extra care. They can be permanent or temporary. You can activate or deactivate this function.

Pre-alert distance

You can choose a distance from a number of choices, to give the distance at which you wish to be notified of a hazardous area.



In certain countries it is illegal to download and activate the warning areas and this could lead to prosecution.

"Configuring a route"



This function allows you to set how routes will be calculated.

« Route calculation »

This system offers three criteria for calculating a route:

- "Fast": gives a quick route if you can travel at or near the speed limit on all roads;
- "Short": gives a short route to minimise the distance to travel;

NAVIGATION SETTINGS

2



– "Eco": this mode produces a compromise between fast and short routing modes. If you can save a certain distance by travelling for slightly longer time in exchange, it will do just that. The resulting route might be shorter than the fast variant, but not significantly slower.

"Motorways"

You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.

"Toll roads"

You can authorise or refuse authorisation for roads requiring the purchase of special authorisation for a certain period.

"Toll roads"

28 - Navigation

You can authorise or refuse authorisation for the use of toll roads.

"Ferries"

You can authorise or refuse authorisation for all types of ferries, boats and trains.

"Carpooling"

This function enables you to view roads only intended for two drivers sharing.

"Off-road tracks"

You can authorise or refuse authorisation for the use of off-road tracks.



For safety reasons, carry out these operations when the vehicle is stationary.

"Map Settings"



→ 41.

"Language Setting"

This function allows you to change the language of voice guidance → 35 manually.

NAVIGATION SETTINGS


"Data format"



This function allows you to change the format of coordinate.

This system offers three types of format.

GPS

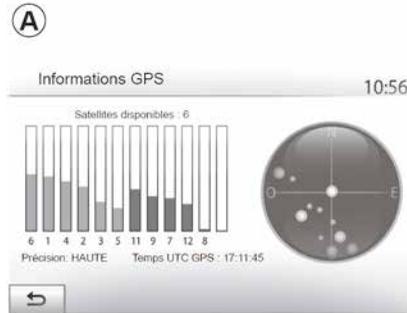

This function allows you to check the status of GPS satellites.

Press "GPS" to see the GPS information (screen **A**).



Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

"Map update "



This function enables you to check the dates of your last updates.

"Traffic"

This function enables you to activate or deactivate "Traffic service", the flagging of different events and to manage alternative routes in the event of accidents or traffic jams.

NAVIGATION SETTINGS

2



« Traffic service »

You can activate or deactivate warnings for different incidents occurring along your route.

"Detour"

This function allows you to save time when an incident occurs on your trip, by offering you an alternative route.

The multimedia system will offer you to choose a time after which a new route is suggested to you with a detour to save time.



"Event types"

This function enables you to choose the types of events to be displayed during navigation:


- "All events";
- "Traffic incidents";
- "Roads closed or blocked";
- "Accident";
- ...



For safety reasons, carry out these operations when the vehicle is stationary.

READING A MAP

Displaying the map

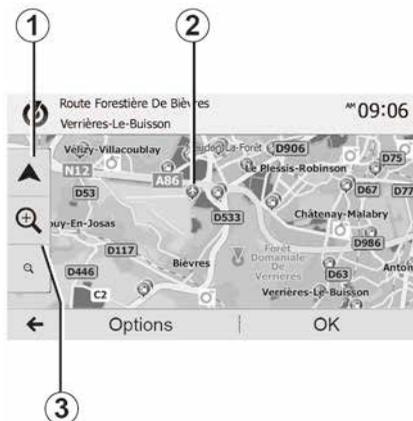


To display the map of the area around the current vehicle position, press "Welcome", "Nav".

Touch the map screen.

To move around the navigation map, drag the desired direction on the screen. Press **1** to return to your current position.

Press **3** to zoom in or out.

Map key

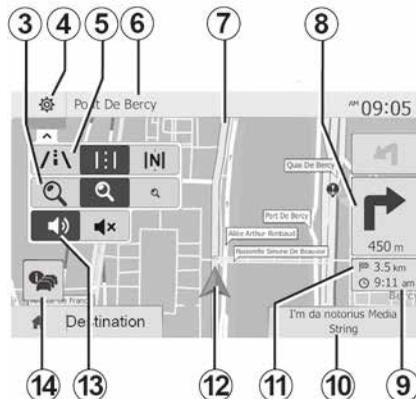

4. Navigation display options.

5. Access different display modes:

- 3D mode;
- 2D mode;
- 2D North mode (the top of the map always faces north).

6. Name of the next major road or road sign information.

7. Route calculated by the navigation system.

8. Distance to and indication of next change of direction.

9. Estimated time of arrival.

10. Media currently playing.

11. Distance remaining to the destination.

12. Location of the vehicle on the navigation map.

13. Mute/unmute the voice guidance.

14. Traffic information. Press this area to find out about the different incidents present on your route.

Position GPS

This function makes it possible to find out the geographical location of the selected position (Address/latitude/longitude).

Touch desired position on the screen. Press "Options" and then press "Info" to find out the exact location of the selected position.


Map icons

The navigation system uses symbols **2** to display points of interest (POI) **→ 41**.

READING A MAP

"Where am I?"

2

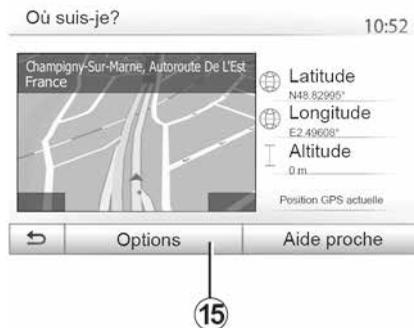

This function allows you to check information about the current position and to search for POI nearby. It operates when GPS is activated.

With no route currently in progress, press the information area **6** to access the "Where am I?" screen.

This screen includes the following information:

- latitude;
- longitude;
- altitude;
- house number;
- Current address.



Country information

Press **15** and then "Info by country".

This function allows you to view country information depending on your current position.

This screen includes the following information:

- speed limit.

Speed limits are displayed for major roads. Displayed unit depends on active regional settings. If no data is available, then "--" is shown instead of table and number.

- Phone country code;
- emergency number;
- legal restrictions applicable in the country;

- maximum permitted blood alcohol level;
- high-visibility vest required;
- fire extinguisher required;
- headlights must be on at all times;
- spare bulbs required;
- first aid kit required;
- warning triangle required;
- helmets required for motorcyclists;
- snow chains required in winter;
- snow chains recommended in winter;
- "winter" tyres required in winter;
- "winter" tyres recommended in winter.



"Nearby assistance"

This function allows you to search for assistance near your current position.

READING A MAP

Tap **16** to open a new screen for the quick search.



Information on this screen:

- car repair services;
- medical and emergency services;
- police stations;
- petrol stations.

To search for a destination from this screen → **22**.

THE NAVIGATION SYSTEM

The navigation system

Availability depends on the country and/or regulations in place. The navigation system calculates your position using the following information:

- from the GPS receiver
- from the digital map.

GPS receiver

The navigation system uses GPS (Global Positioning System) satellites orbiting the Earth.

The GPS receiver receives signals transmitted from several satellites. The system can then locate the position of the vehicle.

Note: after moving a long distance without driving (ferry, rail freight), the system may take several minutes to adjust before returning to normal operation.

The digital map

The digital map contains the road maps and town maps that the system requires.

"Map" USB key

Install the most recent version by inserting your USB flash drive into a

computer that is connected to the internet → 79.


Note: the USB key is not provided with the system.

If possible, always use the most recent version.

Insert USB key


If your vehicle is equipped, insert the USB flash drive into the **A** socket on your multimedia system.

If your vehicle is not equipped with a USB socket on your multimedia system panel, insert your USB flash drive into port **B** on your vehicle. Please refer to the owner's manual for more information.

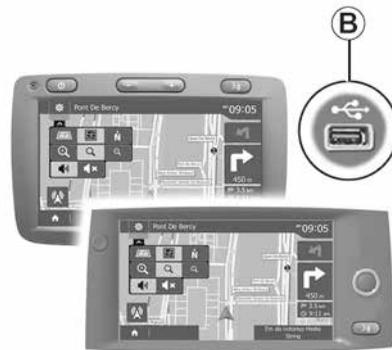

GUIDANCE

Activating guidance

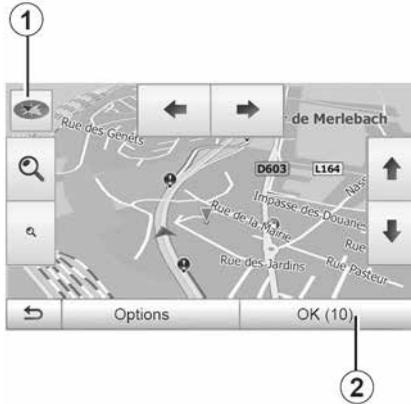

Press **2** or wait 10 seconds after entering a destination. Guidance will begin.

Note: you can interact with the map at any time by sliding it in the desired direction or by pressing the screen.

Guidance screens



The system will offer several different navigation maps.

Press **3** to change the map display and open the drop-down menu. Then select one of the different displays:

- 2D ;
- 3D ;
- 2D North.

You can also change the map display by pressing the compass **1** on the map.




Full-screen mode (2D, 3D or 2D North)

This mode allows you to view the navigation map on the entire screen.

The information on the arrival time and the distance remaining to the destination are indicated in **5**.

The indication for the next change of direction is located in **4**.

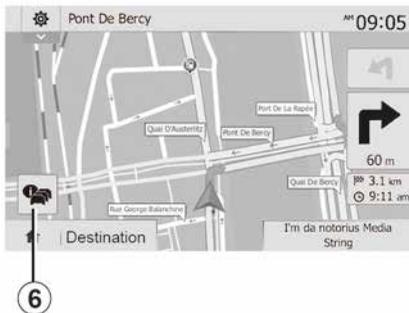

Intersection map


During guidance, before each change of direction.

Alternative route

The system offers an alternative route in the event of an accident or heavy traffic along the planned route. Press "Yes" or "No" as required.

Traffic summary

During guidance, you can get traffic information at any time by pressing **6**.

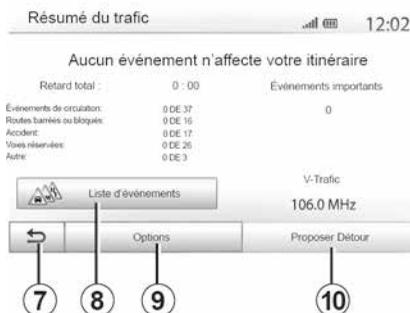

The screen gives you various events appearing on your route. The system will let you know the length of the delays caused by these incidents on your trip. Press **8** to change the event display settings. Press **10** to take a detour, press **9** to access traffic options or **7** to return to the navigation → **27**.

Note: traffic information depends on your subscription and on signal reception.



Motorway junction view

During guidance, before each motorway junction, the system will display a three-dimensional view of the junction.

Note: for some junctions, only a guidance arrow will appear on the map.

The system will switch back to normal mode after you have passed the junction.

GUIDANCE

Changing voice guidance language



Press "Home", "NAV", "Options", "Set the language" to change the language of the voice guidance.

Scroll the language list by pressing **12**. Select the desired language and press **11** to confirm.

To set the voice guidance sound → **53**.


Listening to the radio during voice guidance



While listening to a radio station during voice guidance and before each change of direction, the system will temporarily mute the radio until you have passed the junction.

You can access the radio station listening screen during navigation by pressing **13**. To return to the navigation screen, press **14**. To return to the main menu, keep pressed down for around three seconds **14**.

Route information

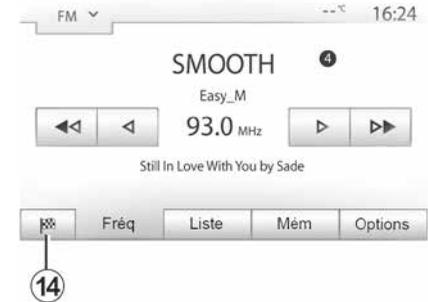

This function allows you to view your route.

Press "Home", "NAV", "Route" after entering a destination.

Six choices will be given:

- "Edit route";
- "To avoid";
- « Overview » ;
- "Delete route";
- "Other routes";
- « Route ».



Route overview

Press "Welcome", "NAV", "Route", "Overview" to see a map with an overview of the active route.


The following information will be given:

- the name and/or address of the destination;
- The total time of the route;
- the total distance of the route;
- special points and sections of the route (e.g. toll gates, toll roads, motorways etc.);
- alternative routes (e.g.: "Short", "Fast", "Economical").

Press **15** to display the following options:

- "Warnings";
- "Configuring a route";

- "Map Settings";
- "Language Setting";
- "Data format";
- « GPS » ;
- « Map update » ;
- "Traffic".

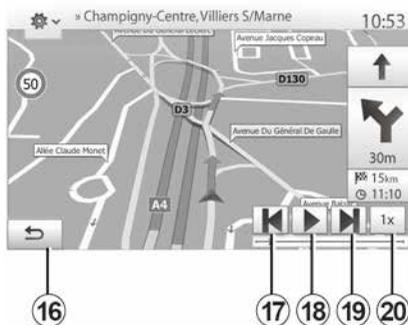


"Simulate Navigation"

Press "Welcome", "NAV", "Route", "Overview", "Options", "Simulate navigation" to simulate the route you will take to the destination.

- Start or pause the simulation by pressing **18**.
- Press **20** to increase the speed of the simulation.
- You can leave the route simulation at any given moment by pressing **16**.

- To move to the previous/next manoeuvre, press **17** or **19**.

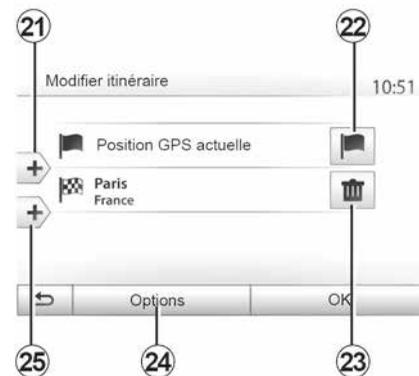


Waypoints and destination

Press "Welcome", "NAV", "Route", "Modify route" to change the route by adding, modifying or deleting steps.

Press **21** to add steps and **25** to add a new destination. It offers several methods to enter a destination → **21**

- Press **23** to delete a destination.
- Press **24** to reorder the list.
- Press **22** to change the route departure address.

GUIDANCE

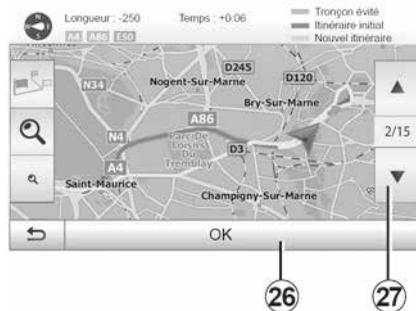

Avoidances

Press "Welcome", "NAV", "Route", "Avoid" to make a detour. Press an area of the list depending on the desired detour.


To change the area, press **27**.

Confirm the new route by pressing **26**.

Cancel the route

At any given moment, you can stop the guidance.

Press "Welcome", "NAV", "Destination", "Route" > "Delete route" to cancel the active route.

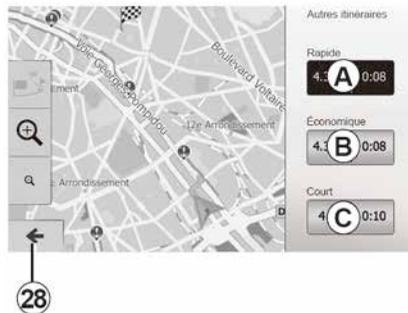

Alternative routes

This section enables you to change the route planning method. Three modes are available, enabling you to change the route planning method:

- « Fast » ;
- "Economical";
- « Short ».

Press "Welcome", "NAV", "Route", "Other routes" then **A**, **B** or **C** to confirm the new route. Press **28** to return to the previous screen → **27**.



« Route »

This function makes it possible to view the route plan. Several details of the route will appear:

- direction-change arrows;
- road number;
- distance before a fork.

Press **29** to sort the route details:

- by summary.

Only showing the main elements of the trip (start, destination) the total distance, remaining time and arrival time.

- By standard description.

It shows all the maneuvers and their signpost information, route numbers, street name and distance. Also showing information and warnings, such as

GUIDANCE

route section names entered by the driver, restrictions (access and manoeuvre restrictions), ignored user preferences, etc.

– By road list.

Detail of the route by road names and numbers. It also shows their length, average direction and travel time information. Elements of the trip are not shown in this mode.

"Configuring a route"

This section enables you to choose your route settings → 27.

MAP SETTINGS

Adjusting view mode

This function allows you to switch the map view between a 3D view and a 2D top-down view, and a view with north facing upwards.

Press "3D", "2D" or "2DNorth".

Adjusting viewpoint



This function allows you to adjust the basic zoom and tilt levels to your needs. Press the required zoom from three available levels.

Motorway View

This function allows you to activate or deactivate motorway view.

Press "On" to activate the function or "Off" to deactivate it.

Display points of interest

You can select certain points of interest (visible at 100 m scale) to be displayed on the map.

To access this function directly, press **3** to display the points of interest on the map:

- Accommodation;
- Airport;
- Automobile;
- Business;
- Café or bar;
- ...

Press "On" or "Off" to show or hide the points of interest.

Tap the name of the point of interest to open the list of its subcategories.

Note: in countries for which maps are not available, you can deactivate the navigation function. In "Home", "Settings", "System", press "Off" opposite "Navigation" to deactivate the navigation function.

MANAGING THE FAVOURITES


Creating an entry

2



Press "Welcome", "Nav", "Destination" to access the destination menu. You have a number of methods available to enter a destination:

- « Address » → 21.
- "Points of interest" → 21.
- « History » → 21.
- "Favourites": access destinations you have saved.
- "Search on map" → 21.
- « Coordinates » → 21.

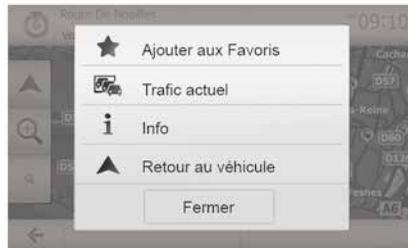

In all cases, once the address is confirmed, the system will locate it on the map. Press "Options" and then press "Add to Favourites" to add the destination to Favourites.

Before saving a favourite destination, you can change its name using the digital keypad.

Sorting the list



The result of saved favourites can be sorted by name, distance, or all shown on a map. Press Options.

Deleting the favourites

Tap the favourite you want to delete. Press "Options", "Delete Favourite" and confirm the deletion by pressing "Delete".

To delete all favourite destinations, press "Options" and then press "Delete all". Confirm this deletion by pressing "Delete all".

MANAGING THE FAVOURITES

Searching the favourite

This function allows you to search the favourite destination in the list by name.

Press "Search" and enter the name of the favourite destination using the digital keypad.

AUXILIARY AUDIO SOURCES

Your system has two types of auxiliary inputs:

- for connecting an external audio source (MP3 player, portable music player, USB key, phone, etc);
- with Bluetooth® (Bluetooth® audio player, Bluetooth® phone).

→ 7.

Operating and connection principles

There are two types of connection:

- a USB socket;
- a Jack socket.

Connect your portable digital audio player to the socket corresponding to your device type.

Once you have connected a socket USB or Jack, the system automatically detects the auxiliary source.

Note: the USB flash drive must be FAT32 formatted and have a maximum capacity of 32GB. Some formats may not be compatible with the system.



Selecting an auxiliary source

To select an input source, press **1**.

A list of available input sources is displayed instantly:

- USB: USB key, MP3 player, telephone, etc.
- audio devices;
- BT: devicesBluetooth®;




Only handle the portable audio player when traffic conditions permit.
Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking).

- Video: USB flash drive (MP4 file);
- AUX: 3.5 mm jack socket.

In navigation mode or when listening to the radio, select your auxiliary audio source by pressing "Home", then "Media".

The system starts playing the last audio track played.

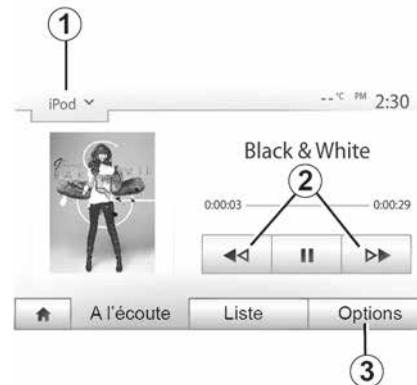

AUXILIARY AUDIO SOURCES

Audio formats

Only MP3 and WMA formats are recognised by the multimedia system.

Note: some formats and resolutions may be incompatible with the multimedia system.

Fast winding

Long press **2** to fast forward or rewind. Playback resumes when the button is released.

Repeat

This function enables you to repeat one or all tracks. Press **3** then "Off", "Aud. trk.", "Folder" or "All".

Shuffle

This function lets you play all songs in shuffle mode. Press **3** then "On" or "Off".

Auxiliary input: USB, Bluetooth® port

Connection: USB and portable digital audio player

Connect the socket of your portable digital audio player to the USB input on the unit.

Once the USB socket of the portable digital audio player is connected, the "USB" menu is displayed. The model or menu of the portable digital audio player may be displayed.

Note: it may not be possible to connect some types of portable digital audio player.

Use

Select the portable digital audio player from the drop-down list **1** on the multimedia system screen, then press the desired playlist or audio track.

Once connected, on some models you will no longer be able to directly control your portable digital audio player. Use the buttons on the front panel of your multimedia system to select audio files.

Charging using the USB port

Once your portable digital audio player's USB connector is plugged into the system's USB socket, you can charge or maintain the battery during use.

Note: some devices do not recharge or maintain battery charge level when they are connected to the USB port on the multimedia system.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.

Connection: Bluetooth®

Once the Bluetooth® is connected, the "BT" menu is displayed → **56**.

Use

Select "BT" from the drop-down list **1**, then press on the playback list or the desired audio track on the multimedia system screen.

All the audio tracks on your Bluetooth® device can be selected directly from the multimedia system screen.

Note: once connected, you can no longer directly control your portable digital audio player. You must use the keys on the system's front panel.



Selecting a track

AUXILIARY AUDIO SOURCES

To select an audio track in a folder, press "List" then select a track **A** from the list.

To go back to the previous level in the folder hierarchy, press **4**.

By default, albums are listed in alphabetical order.

Depending on the type of digital portable audio player, you can refine your selection by using folders or files.

Note: it is best to use a USB connection for easier music searches.

Auxiliary input: Jack socket

Connection

Connect the jack socket of the portable audio player to the jack input socket.

Use

Select "AUX" from the drop-down list **1**, then select the desired track on your audio player.

No indication of the name of the artist or the track is displayed on the system's screen.


Select tracks directly on your portable player when the vehicle is stationary.



The sound quality from the analogue input (AUX) will usually be lower than the sound quality from digital inputs (USB, Bluetooth®).

LISTEN TO THE RADIO

Selecting a wavelength

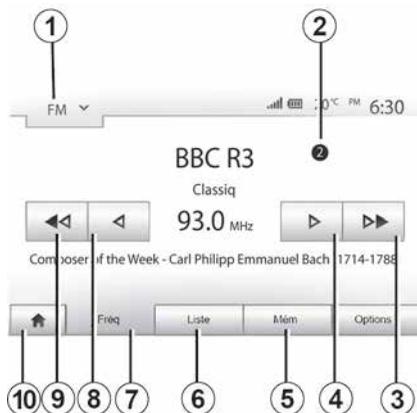

To choose a waveband:

- Press **1**;
- choose the "FM", "AM" or "DAB" waveband by pressing the required band.

Choose a radio station "FM", "AM" or "DAB".

There are different modes for choosing a radio station.

After selecting the waveband, select the mode by pressing the tabs **5**, **6** or **7**.

Several search methods are provided:

- "Freq." mode (tab **7**);

- "List" mode (tab **6**);
- "Preset" mode (tab **5**).

These modes can be changed using the steering column control.

Note: the **2** marker indicates the position in your saved list of the radio station currently playing.

"Freq" mode

This mode allows stations to be searched for either manually or automatically by scanning the selected range of frequencies. Select "Frequency" mode by pressing **7**.


To scan the frequency range:

- manually run through the frequencies in steps by repeatedly pressing **4** or **8**;
- automatically go to the next station by pressing **3** or **9**;

Repeat the operation each time the search stops if necessary.

You can also move the control knob on the steering column control to move to the next station.

Note: to go back to the welcome screen, press the **10** button.

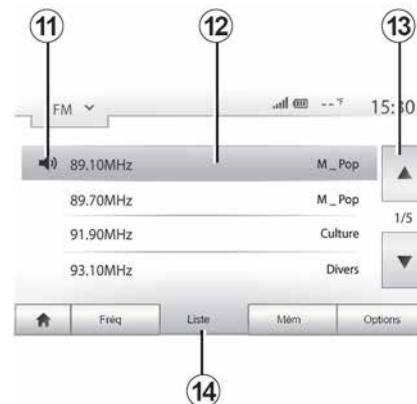

"List" mode

Select "List" mode by pressing **14**.


This operating mode allows you to find a station easily by name from an alphabetical list (on "FM" and "DAB" only).

Select the station required by pressing zone **12**.

Press **13** to scroll through all the stations.

Note: the symbol **11** indicates the station you are currently listening to.

LISTEN TO THE RADIO

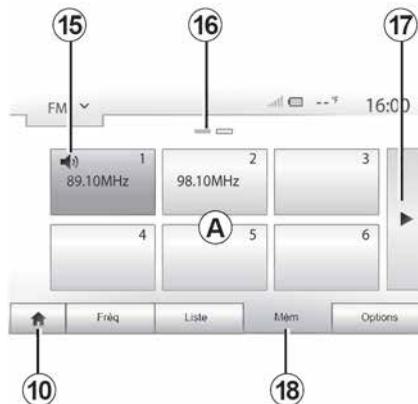

The names of the radio stations that do not use RDS will not appear on the screen. Only their frequency is displayed and sorted at the end of the list.

"Preset" mode

Select "Preset" mode by pressing **18**.

This mode allows you to recall on demand those stations which you have already stored (refer to information on "Saving a station" in this section).

Press one of the buttons in zone **A** to choose the saved stations.

Note: to go back to the welcome screen, press the **10** button.

Storing a station

Select a radio station by using one of the modes described above. Press and hold one of the buttons on the zone **A**.

You can save up to twelve stations per waveband. If you change the region via the "RDS" function, the stored stations are not automatically updated. You must again store the station currently playing.

Note: the symbol **15** indicates the station you are currently listening to.

The mark **16** indicates the number of pages in this section.

To move to the next page, press button **17**.

Radio settings



Display the settings menu by pressing **19**. You can activate or deactivate functions by pressing "On" or "Off" (the configuration menu changes according to the band).

The available functions are as follows:

- « RDS » ;
- "TA" (traffic information);
- « Region » ;
- "Info";
- « AM » ;
- « DLS » ;
- "Announcement";
- "Update list".

LISTEN TO THE RADIO

« RDS »

The "RDS" function receives information transmitted by the radio station currently playing.

Your system may display the name of the radio station and text messages as well as receive traffic warnings or other information.

When the "RDS" function is activated, frequency retuning (AF) is automatically activated.

Traffic information is generally sent via "RDS".

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate the automatic frequency retuning.

"TA" (traffic information)

When this feature is activated, your multimedia system searches for and plays traffic bulletins automatically as new reports are issued by some "FM" and "DAB" radio stations.

Note: the automatic broadcasting of traffic information is deactivated when the audio system is set to the "AM" band.

Select a radio station which broadcasts traffic information. If you are lis-

tening to music from another source (USB flash drive, Bluetooth® etc.), the system automatically switches to the radio if a traffic announcement is received.

Traffic information is broadcast automatically and has priority over the source being listened to at the time.

Select "On" to activate this function or "Off" to deactivate it.

« Region »

This setting enables the reception of specific regional programs. It temporarily deactivates automatic frequency retuning (AF) on a radio which uses regional frequencies.

The listener can keep listening to their program even if receiving a lesser signal.

Note:

- the "Region" setting only applies to the radio station currently playing;
- some radio stations broadcast on regional frequencies. In this case:
 - with "Region" activated: the system will not switch to the transmitter for the new region, but the system will switch normally between the transmitters of the initial region;
 - "Region" deactivated: the system will switch to the transmitter for the new re-

casted program is different.

"News"

When this function is activated, it is possible to automatically listen to news as it is broadcast by certain "FM" or "DAB" radio stations.

If you then select the other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

Select "On" to activate this function or "Off" to deactivate it.

« AM »

You can activate or deactivate the "AM" band.

Select "On" to activate this function or "Off" to deactivate it.

"DLS"

Only in "DAB" mode.

Some radio stations broadcast text information relating to the programme being aired (the title of a track, for example).

LISTEN TO THE RADIO

"Update list"

To update the list of stations and obtain the most recent ones, press "Start".

Note: preferably update the "DAB" list as soon as your system is switched on.

« Simulcast »

Depending on the country, this function switches from a DAB station to the equivalent FM station if the digital signal is lost.

If the "FM/DAB simulcast" is activated, there may be lag of a few seconds when switching from FM to DAB or from DAB to FM and there may be a difference in the sound volume.

The system will automatically switch back to DAB as soon as the digital signal is received.

Note: during the simulcast, the station name is preceded by "FM>".

"Priority to DAB"

Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the equivalent DAB station to obtain better sound quality.

Note: while DAB is prioritised, the station name is preceded by "DAB>".

"Slideshow"

Depending on the country, this function allows you to display information on the programme, music or weather instead of the logo when listening to some DAB radio stations.

Depending on the digital radio station being listened to, it may send images containing visual information about these elements.

Note: this information is only available for some radio stations.

VIDEO



Video

Depending on the country and/or regulation in place, the system may be able to play video files stored on your USB flash drive.

Insert your USB flash drive into the multimedia system. From the "Media" menu, select the "Video" mode **1**.

Note:

- some video formats may not be compatible with the system;
- the USB flash drive must be FAT32 formatted and have a minimum capacity of 8 GB and a maximum capacity of 32 GB;

– the input sources described above may vary.

"List" mode

Press the "List" tab **2** to view the videos available. Select the video you would like to view by pressing the area **3**. The selected video is played automatically.

"Listening" mode


Press the "Play" tab **4** to launch the video selected.

When playing a video, you can:

- press **8** to restart the video from the beginning, press **8** again to access the previous video;
- pause by pressing **7**;
- access the next video by pressing **6**;
- use the scroll bar **5** to move up and down rapidly;

VIDEO

3

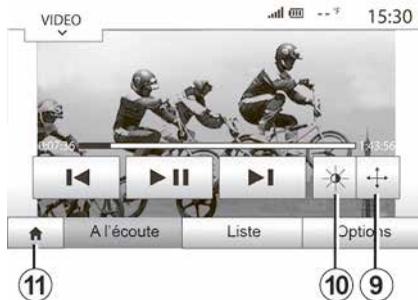

- view the video in full screen by pressing **9**;
- adjust the brightness of the screen by pressing **10**. A control bar will appear for you to perform the adjustment. Touch the screen outside this bar to make it disappear and continue the video playback;
- return to the previous menu by pressing **11**.



Video playback is only possible when the vehicle is stationary.



"Options " mode

Press the "Options" tab **12** to:

- access the playback settings;
- view detailed video information (title, type, date, etc.)

AUDIO SETTING

Volume adjustment according to speed ("Vol/Speed")


When the speed of your vehicle is more than 25 mph (40 km/h), the volume level increases compared with the original volume level.

Adjust the volume/speed ratio by pressing one of the buttons in zone **1**.

You can deactivate this function by pressing "Off".

"Loudness"

Press "On" or "Off" to activate/deactivate the loudness function which increases the bass and treble.

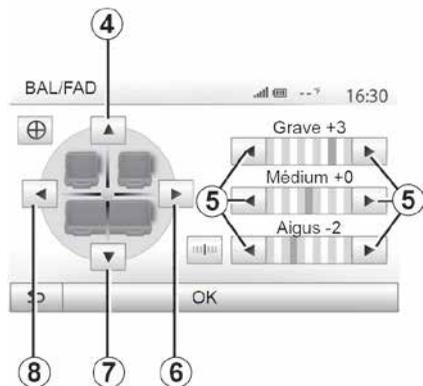

Right/left and front/rear balance

Press **6** or **8** to adjust the sound the left/right balance.

Press **4** or **7** to adjust the sound the front/rear balance.

After setting balance, press "OK" to confirm.

Bass, Mid, Treble

Press the arrows **5** to adjust the bass, medium and treble.

Once the adjustments have been made, press "OK" to confirm.

Audio preferences



Display the audio preferences menu by pressing **9**.

You can adjust the volume of each sound independently:

- « Audio » ;
- « TA » ;
- « Navigation » ;
- "Tel";
- "Ringtone" (of the phone).

To do this, press "+" or "-".

Press **11** to reset all the audio preferences.



Press **10** to move to the next page.

Press **12** to go back to previous screen.

PAIR AND CONNECT A PHONE

Pairing, unpairing devices Bluetooth®

Pairing another phone Bluetooth®

To use your hands-free phone system, you must pair your Bluetooth® mobile to your vehicle before using it for the first time.

Pairing will enable the system to recognise and store a Bluetooth® phone. You can pair up to five smartphones, but only one at a time can be connected to the hands-free system.

Pairing is carried out directly via the multimedia system or via your phone.

Ensure that the system and your smartphone are switched on and make sure that the Bluetooth® on your smartphone is activated, visible and identifiable to other devices (please refer to the instructions for your phone for further information).



Depending on the brand and model of your phone, the hands-free functions may be partially or fully incompatible with your vehicle system.



Pairing a telephone Bluetooth® from the multimedia system

- Activate your phone's Bluetooth® connection;
- press "Settings", "Connectivity", "Search for Bluetooth devices";
- make sure your phone is activated and visible on the Bluetooth® link;
- select your phone from the list of devices found by the system;
- A message is displayed on your phone screen.



For a list of compatible telephones, consult the <https://connect.renault.com> site.



For safety reasons, carry out these operations when the vehicle is stationary.

Depending on the telephone, you may either press "Twin", "Pair" or "Connect" to authorise the pairing.

– Depending on your telephone, enter the code displayed on the multimedia system screen on your telephone keypad;

– A second message appears on your phone screen offering to automatically pair to the multimedia system for future uses. Accept this authorisation to avoid the need to redo all these steps.

Depending on the type of phone, the system may prompt you to confirm the transfer of the phonebook and call log to the multimedia system during pairing.

Accept sharing to find this information on your multimedia system. You can also authorise automatic sharing of the phonebook and call logs for the system to transfer them automatically during your next pairings.

Note: your multimedia system memory is restricted and it is possible that all your contacts may not be imported.

PAIR AND CONNECT A PHONE

Your smartphone is now paired to your multimedia system.

Note: the pairing time varies based on the make and model of your telephone.

If pairing fails, redo the operation. If your phone is not visible by the system while searching for Bluetooth® devices then please consult your telephone manual.

Pairing a telephone Bluetooth® to the multimedia system from the phone

- Activate the Bluetooth® connection of your phone and the system;
- from the main menu of your multimedia system, press "Settings", "Connectivity", "Authorise external device. You thereby make the system visible to other Bluetooth® phones;
- a message appears on the screen displaying a password and the time left during which the system remains visible;
- from your telephone, display a list of available Bluetooth® devices;
- select the multimedia system from the available devices in the time given and use your telephone keypad to enter the password displayed on the system screen (depending on the telephone).

A message appears on your telephone screen to notify you that it is now paired with the multimedia system.

Note: the pairing time varies based on the make and model of your telephone.

If pairing fails, redo the operation.



When switching on the multimedia system, the last paired device will be automatically connected to the system.



Your hands-free system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

Unpair a Bluetooth® telephone from the multimedia system

Unpairing erases a phone from the hands-free system memory.

From the main menu, press "Settings", "Connectivity", then "Display Bluetooth devices". Press the "Recycle bin" icon **1** opposite the name of the smartphone you wish to delete from the list. Confirm your choice by pressing "OK".

Unpair all Bluetooth® telephones from the multimedia system

You can also delete all phones previously paired from the hands-free system memory. From the main menu, press "Settings", "Connectivity", "Display Bluetooth devices", then "Options" and "Delete all". Confirm the deletion of all paired telephones by pressing "OK".




"Modify password"

PAIR AND CONNECT A PHONE

You can customise the four-digit password for the system authorising the pairing of Bluetooth® phones.

From the main menu, press "Settings" then "Bluetooth®Change password".

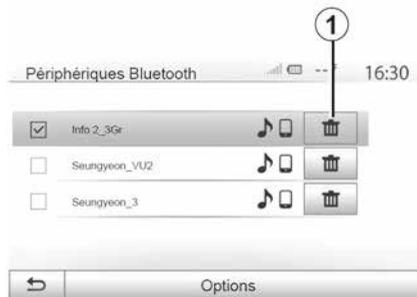

« Smartphone »

This function, which can be accessed on the second page of the "Connectivity" menu, allows you to access help for activating and operating voice commands → 61.

Connecting, disconnecting devices Bluetooth®

Connecting a Bluetooth® paired phone

A phone must be paired before it can be connected to the hands-free phone system → 54.

Your phone must be connected to the hands-free phone system in order to use all its functions.

Automatic connection

Once the system is switched on, the hands-free phone system will search for any paired phones present in the vicinity (the search may take a minute). It automatically connects to the last connected phone if:

- the Bluetooth® connection of the telephone has been activated;
- at the time of pairing, you previously authorised automatic connection for your telephone to the system.

Note:

- If a call is in progress at the time the connection is made, the sound is automatically transferred to the vehicle speakers;
- it is recommended to accept and authorise all messages which appear on your telephone while pairing with the system so that the automatic device recognition function operates smoothly.

Manual connection

From the main menu, carry out the following operations:

- press "Tel.";
- press "Display Bluetooth devices";
- select the name of the telephone to which you wish to connect.

Your telephone is connected to the multimedia system.

Connection failure

If connection fails, check that:

- your device is switched on;
- the device is configured to accept the system's automatic connection request;
- your device battery is not flat;
- your device has been paired to the hands-free system;
- the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device's battery more quickly.

Changing a connected telephone

You can connect or disconnect a Bluetooth® device at any time.

From the main menu, press "Phone", then "Settings" and "List of devices".

PAIR AND CONNECT A PHONE

Select the device to be connected and confirm by pressing "OK".

A small marker **1** will appear opposite your telephone name to indicate that the connection has been made.

Disconnecting a connected telephone



To disconnect a telephone from your multimedia system, select the name of your device. The small marker **1** will disappear.

If a call is in progress when the phone is disconnected, the call will automatically switch to your phone.

CALL MANAGEMENT

Phonebook



From the "Phone" menu, press **1** to scroll through the list of menus and then "Contacts" to access the system telephone directory.

Using your Phone Book

You can use the Phone Book entries stored on the memory of phone.

After connecting your system and your Bluetooth® phone using Bluetooth® wireless technology, your phonebook numbers are automatically transferred into the system if the contacts are stored in the telephone memory of your device.

Note: on some phones, the system may ask you to confirm the transfer of the phonebook to the system during pairing.

Calling a number in the Phone Book

After finding the contact in the phonebook you want to call, select the number to place the call.

Searching for a contact in the phonebook

Press **2** then enter the surname or first name of the contact you are seeking, using the digital keypad.




Depending on the make and model of your phone, transferring your contacts to the multimedia system may not work.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

Making, receiving a call

Making a call from the phonebook

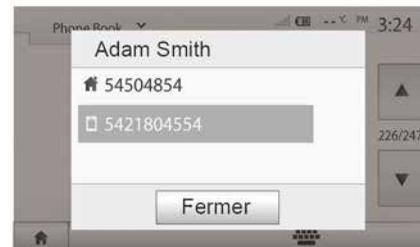

With the telephone connected, from the "Telephone" menu, select "Phonebook" from the drop-down menu **1**.

Select the contact (or the suitable number of the contact has more than one). The call is made automatically by pressing the contact's number.

Note: you can make a call from the multimedia system using the voice recognition from your smartphone → **61**.

CALL MANAGEMENT

Dialling a number from the call history



You can use the call list stored on the phone memory to make a call.

After connecting your Bluetooth® device and phone using Bluetooth® technology, the numbers in your phone's "All Calls", "Outgoing Calls", "Incoming Calls", and "Missed Calls" lists are transferred automatically into the call list on your multimedia system.

Press **1** to scroll through the list, then "List of calls".

Press **6** to access the list of All Calls.

Press **5** to access the list of Outgoing Calls.


Press **4** to access the list of Incoming Calls.

Press **3** to access the list of Missed Calls.

Note: the mark **2** indicates the number of missed calls.

For each list, the contacts are listed from the most recent to the oldest. Select a contact to make the call.

Dial number

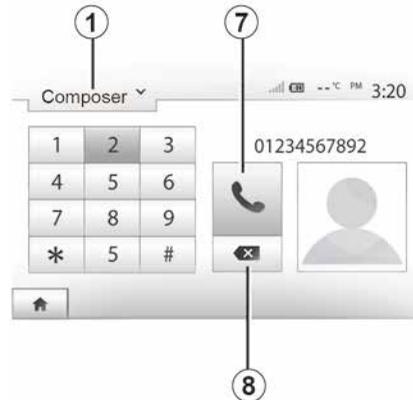

Press **1** to scroll through the list, then "Dial" to dial a number.

Press the numbered buttons to dial the number, then press **7** to place the call.


To delete a number, press **8**. Press and hold **8** to delete all the numbers at once.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

4

Receiving a call

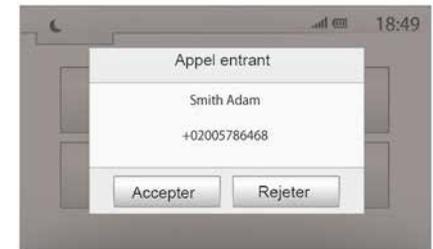

When receiving a call, a message is displayed on the multimedia system screen with the following information on the caller:

CALL MANAGEMENT


- the name of the contact (if the number is present in the phonebook list);
- caller's number;
- "Private number" (if the number cannot be shown).

Note: when the incoming call message appears on the screen during navigation, accept or reject the call to return to the navigation screen.

Note: you can answer or reject an incoming call by pressing the button on your vehicle's steering column.

- switch the microphone on by pressing **13**;
- hang up by pressing **9**;
- hear sound through the phone speaker by pressing **11**;
- hear sound through the vehicle speaker by pressing **10**;
- press **14** to return to the previous screen (the navigation screen, for example) or the welcome screen.

During a call

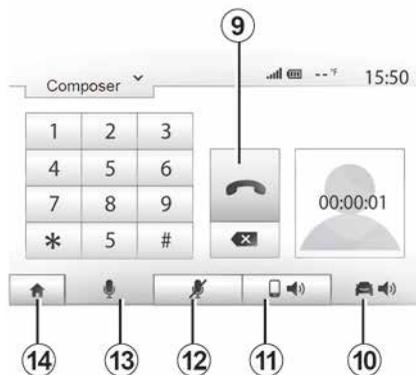

During a call you can:

- switch the microphone off by pressing **12**;

USING VOICE RECOGNITION

Introduction

Your vehicle's multimedia system uses your telephone's voice recognition system to:

- control some of the vehicle multimedia system functions and some of your telephone functions by voice;
- enable you to use your multimedia system or your phone while keeping your hands on the steering wheel.

Note:

- the position of the voice recognition button may vary (steering wheel control, steering column control or multimedia system front panel);
- When using voice recognition, the language set on your telephone will be the language used by your system;
- if your smartphone is not equipped with voice recognition, a message will be displayed on the multimedia system.

Activating the phone's voice recognition with the multimedia system


To activate your phone's voice recognition system you should:

- get a 3G, 4G or WIFI connection with your smartphone;

- activate the Bluetooth® on your smartphone and make it visible to other devices (please refer to your telephone user manual for instructions);
- pair and connect your smartphone to the multimedia system → 54.

Press and hold the voice recognition

button  in order to activate.

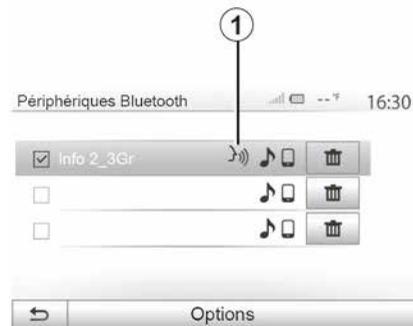

Note: the symbol **1** on the "Settings", "Connectivity" menu and the "Display Bluetooth devices" option indicate that your smartphone voice recognition is compatible with the multimedia system.

 When using your phone's voice recognition with the multimedia system, the transfer of cellular data required for its operation may generate additional costs not included in your phone service contract.



A beep sounds and the display on screen **A** indicates that voice recognition is activated.

Speak loudly and clearly.


Note: your smartphone's voice recognition system only enables you to use certain functions of your telephone. It does not allow you to interact with the

USING VOICE RECOGNITION

other functions of your multimedia system such as the radio, Eco Driving, etc.

Use

B

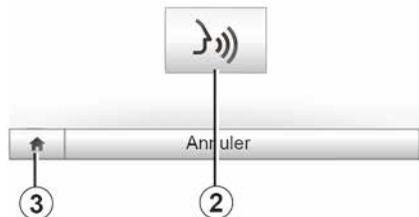

Once activated, to restart the voice recognition system, tap on the steering wheel control, on the steering column control or on your multimedia system, or on the button **2** on your multimedia system screen.

You can go back to the main menu at any time by pressing **3**.



To return to screen **B** press **4** in the main menu of your multimedia system.

Note: when using voice recognition, the "Media" and "Radio" functions will not be available or accessible from the main menu of your multimedia system.

Deactivation




Press button **2** on the **B** screen or press and hold the voice recognition

button  in your vehicle. An audible signal indicates that voice recognition is deactivated.

USING VOICE RECOGNITION

Help

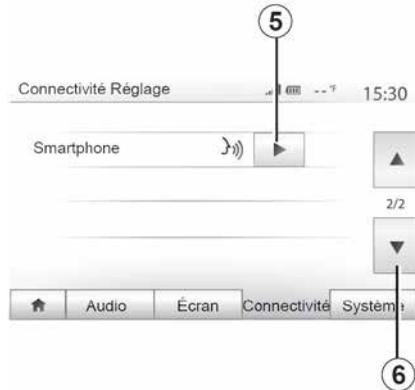

You can get additional help on the operation and usage conditions of the voice recognition system. To do so, press "Welcome", "Settings", "Connectivity". Select the second page by pressing **6**, then press **5**.

This function is presented in the form of screens explaining how to use voice recognition, alongside the:

- conditions of use;
- compatible telephones;



- the activation and deactivation of the function using the voice recognition

- button  in your vehicle;
- method for interacting with the screen;
- available functions;
- extent of the functions.

Android Auto™

Introduction

"Android Auto™" is an application that can be downloaded (from the application download platform on your smartphone) enabling you to use some applications and functions on your phone via your multimedia system screen.

Note:

- to determine if your smartphone is compatible with the "Android Auto™" application, please consult the official website of your telephone's operating system;
- the "Android Auto™" application only works when your smartphone is connected to your vehicle's USB port and if the voice recognition function is activated. The "Android Auto™" application should be accessible via the button **1** on the main menu.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.



First use

Connect your phone to your multimedia system's USB port:

- accept the requests on your smartphone in order to use the "Android Auto™" application;
- Confirm by pressing "Accept" on your phone.

The "Android Auto™" application is launched on the multimedia system.

If the procedure described above fails, repeat the operation.



You can manage the devices connected to your multimedia system at any time via the "Settings" menu, then "Connectivity",

Note: the first connection with "Android Auto™" is made when the vehicle is stopped for the sole purpose of activating the multimedia system voice recognition.

CarPlay™

Introduction

"CarPlay™" is a native service available on your smartphone which enables you to use some applications on your phone from your multimedia system screen.

Note:

ANDROID AUTO™, CARPLAY™

– if your smartphone is not equipped with the "CarPlay™" service, please consult the official website of your telephone's operating system;
– the "CarPlay™" service only operates if your smartphone is connected to your vehicle's USB port and the SIRI service is activated. The "CarPlay™" service should be visible from the button **2** on the main menu.



The use of USB cables recommended by the phone manufacturer are advisable for correct functioning of the application.



First use

Connect your phone to your multimedia system's USB port.

The CarPlay™ service is launched on the multimedia system.

If the procedure described above fails, repeat the operation.



You can access a tutorial on connecting your smartphone to your multimedia system from the "Settings" menu, then "Connectivity".



5

Once the "Android Auto™" application or the "CarPlay™" service is activated, you can use the voice recognition button in your vehicle to activate some of your smartphone functions by voice. To do this, press button **3** on the steering wheel of your vehicle ➔ 61.

Note:

– you may use "Android Auto™" or "CarPlay™" to access your smartphone's navigation and music applications. These applications will replace similar applications integrated into your multimedia system which are already running. For example, only one navigation application, "Android Auto™"/"CarPlay™", or the application

ANDROID AUTO™, CARPLAY™

integrated into your multimedia system can be used;

– when you are using "Android Auto™" or "CarPlay™", some multimedia system functions will continue to run in the background. For example, if you start "Android Auto™" or "CarPlay™" and use the navigation on your smartphone while the radio on the multimedia system is currently playing, the radio will continue to be broadcast.

5



When you use the "Android Auto™" application or the "CarPlay™" service, the transfer of mobile data required for it to operate may lead to additional costs not included in your phone subscription.


Return to the interface of your multimedia system



3

To return to the interface:

- press the "Home" button on your multimedia system panel or on the central control;
- or
- press button **3** on the multimedia system screen according to "Android Auto™" or "CarPlay™".

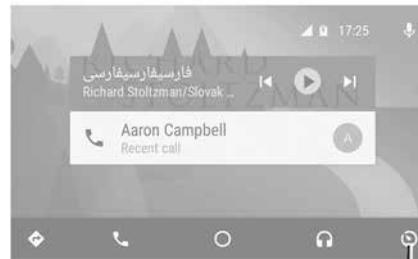


3



The availability of the functions of the "Android Auto™" app and the "CarPlay™" service depends on your telephone brand and model. For further information, please refer to the manufacturer's website if there is one.

ECO DRIVING

Access the Eco Driving menu

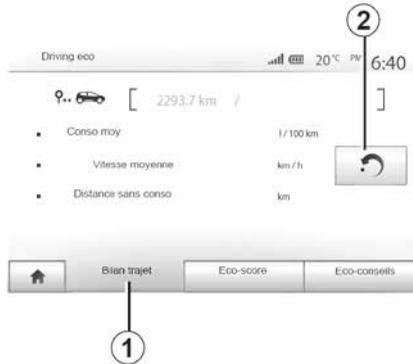

- (availability depends on the vehicle)
From the main menu, press "Vehicle", then "Driving eco".
The "Driving eco" menu grants access to the following information:
- "Journey record";
 - "Eco score";
 - "Eco advice".



"Journey record" 1

- This menu shows you the data saved from your last journey:
- "Avg. consumption";
 - « Average speed » ;
 - "Distance without consumption".

Note: you can reset the data by pressing **2**.



"Eco score" 3

- This menu gives you an overall mark out of 100. The higher the score, the better your eco-driving performance:
- average acceleration performance (zone **A**);
 - average braking anticipation performance (zone **B**).

"Eco advice" 4

This menu assesses your driving style and gives you the best possible advice to optimise your fuel consumption.

REVERSING CAMERA

Operation

Shifting into reverse gear (and up to approximately five seconds after shifting to another gear), a view of the surroundings to the rear of the vehicle is displayed on the multimedia system screen accompanied by the guide, a silhouette of the vehicle and beeps.

Ultrasonic sensors installed in your vehicle "measure" the distance between the vehicle and an obstacle.

When the red zone is reached, use the bumper image to stop accurately.

Note:

- for more information on using Park Assist, please see the vehicle user manual.
- ensure that the reversing camera is not obscured (by dirt, mud, snow, etc.)
- once the reverse gear is engaged, the multimedia screen displays a view of the area behind the vehicle for several seconds.

Activation/deactivation



Reversing camera

You can activate/deactivate the reversing camera. To do this, from the main menu select "Settings", then "Display" and press the "Park Assist" button **1**.



Parking assistance

This menu allows you to activate/deactivate the reversing camera and set up "Obstacle detection".

REVERSING CAMERA




Obstacle detection

You can independently activate or deactivate the front and rear sensors of your vehicle. Select "On" to activate the desired sensor(s) or "Off" to deactivate them.

Sound settings

You can activate/deactivate the audio alert and select from several sounds as well as adjust the volume of the obstacle sensors.

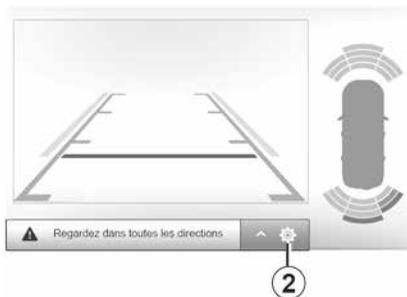

Display settings


You can access the display settings with the **2** button.

This menu allows you to activate/deactivate the guide lines **3** indicating the distance behind the vehicle and to adjust the screen settings.

Press "+" or "-" to adjust the contrast **4**, brightness **5** and colours **6**.



For safety reasons, carry out these operations when the vehicle is stationary.

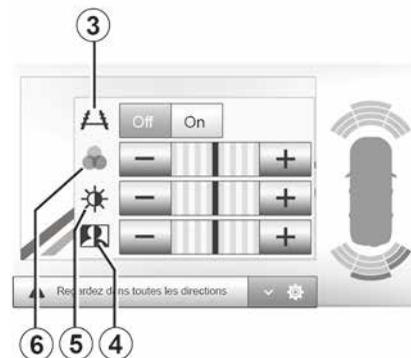

The image can only be adjusted if reverse gear is engaged.

REVERSING CAMERA



This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always be ready for sudden incidents while driving: always ensure that there are no small, narrow moving obstacles (such as a child, animal, pushchair, bicycle, stone, post, etc.) in the blind spot when manoeuvring.



The screen shows a reverse image.

The gauges are a representation projected onto flat ground. This information must not be taken into account when superimposed on a vertical object or an object on the ground.

Objects which appear on the edge of the screen may be deformed.

In very bright light (snow, vehicle in sunshine, etc.), the camera vision may be adversely affected.

MULTI-VIEW CAMERA

Introduction

The vehicle is fitted with four cameras fitted at the front, in the side door mirrors and at the rear of the vehicle to offer you additional aid during difficult manoeuvres.

Note: make sure that the cameras are not obscured (by dirt, mud, snow, etc.).



This function is an additional aid. It cannot, therefore, under any circumstances replace the vigilance or the responsibility of the driver.

The driver should always pay attention to sudden incidents during driving: always ensure that there are no moving obstacles (such as a child, animal, pram, bicycle, etc.) or small or narrow objects such as stones or posts in your path when manoeuvring.

Operation

When the reverse gear is engaged, the rear view camera displays the area to the rear of the vehicle on the multimedia screen.

You also have the option of choosing the view to be displayed on the multimedia screen by changing to manual mode.


Activation/deactivation

The system is activated when the vehicle is travelling at a speed below approximately 12 mph (20 km/h). When the vehicle exceeds this speed the system is deactivated.

The system can also be activated by pressing the activation button in your vehicle. For further information, please refer to the "Multi-view camera" section in your vehicle user manual.

Note: For more information on choosing Automatic or Manual mode, please refer to your vehicle's Driver's Handbook.

Camera choice

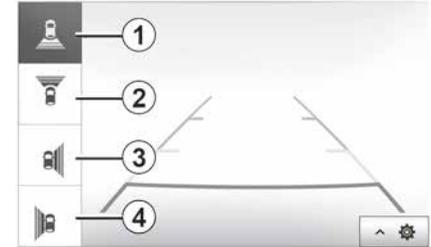


To activate the desired camera view, select it on the multimedia screen:

- **1** view of the area behind the vehicle;
- **2** view of the area in front of the vehicle;
- **3** right-hand side area view;
- **4** view of the area to the left of the vehicle.

MULTI-VIEW CAMERA

Settings

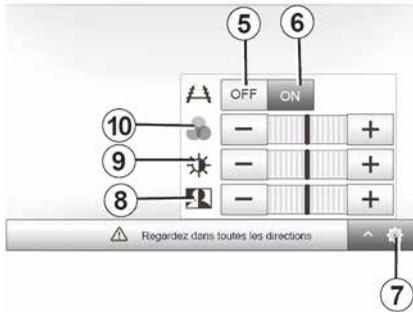

6

Press **7** to display a list of settings.
Activate or deactivate the display of guide lines by pressing **5** or **6**.
Press "+" or "-" to adjust the contrast **8**, brightness **9** and colours **10**.

REMOTE ENGINE START-UP




When fitted, this function can be used to program the engine to start remotely in order to heat or ventilate the passenger compartment up to 24 hours before the vehicle is used.

Adjust the heating level required (temperature, de-icing) before programming the function. Configuration and programming are done via the multimedia display.

Setting the start time for the function

– Switch on the ignition, then press **1** from the main menu. The **A** screen is displayed;

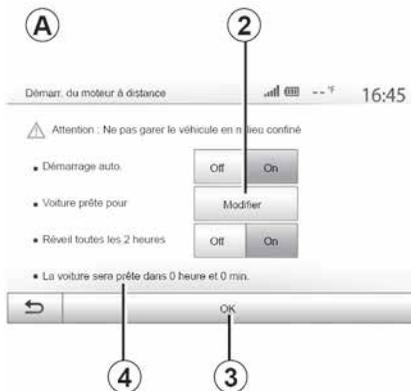

– select the "On" button on the Auto start" line to activate the function;
– set the start time when you wish to use your vehicle by pressing button **2**;
– press on the "up" and "down" arrows to scroll through the hours and minutes until you get the desired time;
– press "OK" to confirm. The **4** marker shows you the time left before the time you wished to use the vehicle;
– press "OK **3**" to confirm and finalise the programming;



– adjust the air conditioning controls to the desired temperature in the passenger compartment when starting up the engine, then set to de-icing mode (please see the vehicle manual);

i To activate a programmed remote start-up, you must select a time at least 15 minutes later than the time displayed by the multimedia system.

REMOTE ENGINE START-UP



6

– turn off the ignition.

When you lock your vehicle, the hazard warning lights and side indicator lights flash twice, then switch on for approximately three seconds to indicate that the programming has been taken into account.

The remote engine start-up operates if:

- the lever is in neutral (on vehicles with a manual or sequential gearbox);
- the lever is in **P** position on vehicles with an automatic gearbox;

- the ignition is switched off;
- all the opening elements (bonnet, doors, boot) are closed and locked when you leave the vehicle.

Note: you must switch off your multimedia system when you leave your vehicle in order for the remote engine start-up to work.

"Wake up every two hours"

This function enables your vehicle to start automatically every two hours depending on the engine temperature.

To activate this function, press the "On" button **5**.

When this function is activated, the ventilation system will not activate during the first four start-ups, if they happen.

In very cold conditions, the vehicle will start automatically and will stay on for approximately ten minutes before switching off.

If the engine temperature does not require a restart, the vehicle will not start automatically during the first four reactivations and will return to standby for two hours. The engine will be restarted if the engine temperature is too low.

In all cases, the last start-up will happen.

Approximately 15 minutes before the programmed time, the engine will start and stay on for approximately ten minutes.

Note: the mark **6** reminds you of the vehicle start time that you have already set.

 Depending on the vehicle, please ensure that consumers such as the wipers, exterior lights, radio, heated seats, heated steering wheel, etc. are disabled and that all accessories are disconnected before leaving the vehicle.

REMOTE ENGINE START-UP



In extreme conditions, the remote start-up by programming may not work.



Do not park the vehicle or run the engine in locations where combustible substances or materials such as grass or leaves can come into contact with the hot exhaust system.



Driver's responsibility when parking or stopping the vehicle

Never leave an animal, child or adult who is not self-sufficient alone in your vehicle, even for a short time. They may put themselves or others at risk, for example by starting the engine, switching on equipment such as the electric windows or by locking the doors etc. Also, in hot and/or sunny weather, please remember that the temperature inside the passenger compartment increases very quickly.

RISK OF DEATH OR SERIOUS INJURY.



Special note for vehicles fitted with the "Wake up every two hours " function

It is imperative that the vehicle is driven for at least 10 minutes between each programming of the function. Risk of engine oil wear.



Do not use or programme the remote engine start-up function when:

– the vehicle is in a garage or in a confined space.

Risk of poisoning or suffocation by exhaust gas emissions.

– the vehicle is covered with a protective cover.


Fire hazard.

– the bonnet is open or before it opens.

Risk of burns or serious injury. Depending on the country, the use of the remote starting function or its programming can be prohibited by the legislation and/or the regulations in force. Before using this function, check the legislation and/or the regulations for the country in force.

4X4 INFO

Access the "4x4 Info" menu

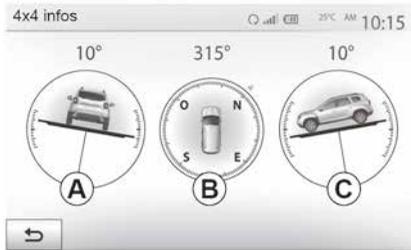

6

From the main menu, press "Vehicle" then "4x4 infos".

The "4x4 Info" function enables:

- wheel camber (drive) in degrees, in real-time (area **A**);
- course, using a compass (area **B**);
- horizontal angle (pitch) in degrees, in real-time (area **C**).

Note:

- the values showing the angle displayed on the screen may differ from reality by one to three degrees;
- the display is refreshed every second approximately.

SYSTEM SETTINGS



To access the multimedia system settings from the home screen, press "Settings" then select a section at the bottom of the screen.

Audio settings

➔ 53.

Display settings

« Brightness »

You can set the brightness of the screen to your liking. You have the option of three modes:

- « Low » ;
- "Avg." (Average);
- « High ».

"Map mode"

To improve the visibility of the navigation screen between day and night, you can change the combination of the colours of the map.

- "Auto": the map screen is displayed by GPS. The switch to daytime or night-time running lights is automatic, depending on whether the headlights are on.
- "Day": the map screen is always displayed with bright colours.
- "Night": the map screen is always displayed using darker colours.

"CLIM. Info."

This function activates/deactivates the display of air conditioning information when adjusting settings.

"Background"

This function enables you to choose between a dark or light display mode.


"Park Assist"

This function allows you to switch the reversing camera and the front and/or rear sensors on and off.

Settings Bluetooth®

➔ 54.

System setting

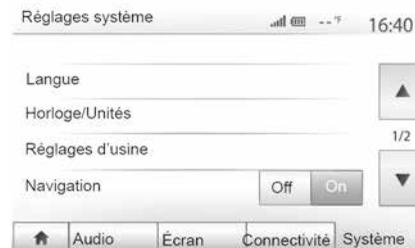

« Language »

This function allows you to change the language used in the system and voice guidance language.

To change the language, select the desired language and confirm your choice by pressing "OK".

« Clock »

Use this function to set the time display (12-hour or 24-hour clock).

Note: in versions with navigation, the time is set automatically by the GPS if the map of the country you are in is installed. In versions without navigation, the time can only be set manually.

SYSTEM SETTINGS

To change the time manually, press "Clock/Units" and then select "Setting the time".

« Units »

This function allows you to set the unit of distance displayed on your multimedia system. You can change the unit between the "km" and "mils".

Note: the settings for your multimedia system do not affect your vehicle's instrument panel display. For further information on the instrument panel display settings, please see the vehicle user manual.

"Default settings"

This function allows you to reset various settings to the default settings.

- All: resets all the settings to their "Default settings".
- Phone: resets all the settings related to the phone.
- Navigation: resets all the settings related to navigation.
- Audio/Media/Radio/System: resets all the settings related to Audio/Media/Radio.

« Navigation »

This function enables you to activate or deactivate the system navigation.

"System version"

This function allows you to check the version of system.

Security code

Your audio system is protected by a security code (supplied by the Approved Dealer). This is used to electronically lock the audio system when the power is cut (battery disconnected, system disconnected, fuse blown etc.).

To operate the audio system, you must enter the secret four-digit code.

Make a note of the code and keep it in a safe place. Contact one of the manufacturer's agents if you lose it.

Entering the code

The "CODE" message followed by four empty spaces and a numerical keypad are displayed.

Enter the code using the digital keypad, then press "OK" to confirm.

Entering the code incorrectly

If the code is entered incorrectly, the "Invalid PIN: system locked" message is displayed.

Wait one minute and then re-enter the code.

Each time the code is entered incorrectly, the time required before the code can be re-entered is doubled.

UPDATING THE SYSTEM AND MAPS



Latest map guarantee

Once your new vehicle has been delivered, you will have a maximum of 90 days in which to update the map for free. Once this time has elapsed, you will need to pay for updates.

When navigation is started, the multimedia system offers to update your map. This reminder appears twice a year for seven years. You can:

- select "Later", and the reminder will appear the next time Navigation is activated;



- select "Close" and the reminder will no longer appear;
- select "More" and the system displays the "Map update" menu.

Update your multimedia system and map

Note: check if your systems are already up to date to avoid starting a procedure unnecessarily.

To update your multimedia system and its map, you will need a USB flash drive and a computer connected to the Internet.

Use your computer to download updates from the Internet to the USB flash drive, then install the updates

from the USB flash drive on your vehicle's multimedia system.

If the multimedia system software is not up to date, the Toolbox software will offer a system update before the map is updated. The system and map cannot be updated at the same time. The process must be repeated for each update.

You will need to proceed as follows:

- saving the system on a USB key;
- install the Toolbox software on your computer;
- downloading products from the Toolbox to the USB key;
- Updating the multimedia system or map from the USB flash drive.

Follow the steps described below in sequence.

Saving the system on a USB key

To save your multimedia system in your user profile, first connect an empty USB key to the multimedia system to create a fingerprint.

Note:

- to insert the USB flash drive into your multimedia system ➔ 34;
- the USB flash drive is not provided with the system;
- the USB flash drive must be FAT32 formatted and have a minimum ca-

UPDATING THE SYSTEM AND MAPS

capacity of 8 GB and a maximum capacity of 32 GB;

- to save the system data to the USB flash drive, start the vehicle and do not switch off the engine while the data are loading;
- Do not use any of the multimedia system functions during the procedure.



System updates must be performed while the engine is running. Electric vehicles must be charging or with the engine running (READY warning light on).

7



To save the system imprint to the USB flash drive, you must:

- plug your USB flash drive into the USB socket on your multimedia system;
- from the main menu, select the Navigation menu;
- select the "Options" menu;
- select the "Map update " menu from the second page of the "Options" menu;
- press the "Options" button at the bottom of the screen;
- select the "Update" function on your multimedia system screen.

This installs an imprint of your navigation system on the USB key which will be used by the Toolbox to save your system in your user profile and to let the Toolbox determine which updates are available for your navigation system.

When the process of data recording is finished, you may remove the USB key from the multimedia system.

Install the Toolbox software on your computer

Install Naviextras Toolbox in a few clicks on your computer. The Toolbox can be downloaded from the manufacturer's website.

Go to the website and click "Register" in the "Welcome Guest user" area at the top of the screen. Once your account has been created and saved, fill in the information requested (vehicle model, type of on-board multimedia system etc.) then download the software.

After downloading the software, start the installation.

Follow the instructions shown on the screen.



The screens shown in the user manual are not contractual.

UPDATING THE SYSTEM AND MAPS

Downloading products from the Toolbox to the USB flash drive



Connecting to the Toolbox

Run the Navixtras Toolbox software and make sure your computer is connected to the Internet.

When you start Toolbox on your computer, insert the USB flash drive containing the imprint of your multimedia system. Once the software has recognised the USB flash drive, two options are offered: "Login" and "Register".

If you are not registered on the Navixtras.com website, you can do so from the Toolbox by clicking "Login"

on the connection page. Follow the instructions shown on the screen.

If your subscription allows it, and if Toolbox finds your system on the list of supported systems, the welcome screen appears to enable you to connect to your Navixtras account.

Once connected to your Navixtras Toolbox account, and with your USB flash drive connected to your computer, you can obtain free or paid apps, services and content by selecting those you wish to install in your multimedia system from the "Catalogue" menu on the menu bar on the left hand side of the Toolbox screen.



In certain countries it is illegal to download and activate the warning areas and this may lead to prosecution.

Updates from the Toolbox to the USB flash drive

Please click the "Update" menu or "Purchase content" in the menu bar on the left-hand side of the Toolbox screen.

The updates menu opens a screen showing all available updates, including:

- items that you have purchased but not yet installed (updates or extras);
- free updates and extras that you added to the installation file from the catalogue;
- system updates (if a newer version is available);
- updating POI for electric vehicles only (charging stations, etc.);
- special free updates.

The list shows all available updates by region in a list and on a world map.

By default, all items belonging to all regions are selected for installation. If you decide to skip a region for now, uncheck the checkbox at the beginning of its table row. After reviewing the table, click "Install" at the bottom of the screen to start the installation process.

The Toolbox starts to download and install the selected updates. Please wait until you see the message indicating the update has finished.

Note: the download time for the app varies depending on the size of the app and on mobile network reception quality.

UPDATING THE SYSTEM AND MAPS

i The Toolbox warns you if the selected items exceed the maximum capacity of the multimedia system. In this case, you can select which items can be installed or removed in the system so that it does not exceed the storage limit. Even if items are removed in the system, you still have ownership of items and can install them later for free.

7 **i** Please neither remove the USB key from the system, nor shut the system down while update is in progress.

! In certain countries it is illegal to download and activate the speed camera warnings and this could lead to prosecution.

Updating the system and map

When the installation process is completed, the USB key can be removed from the computer. Connect the USB key to the USB port of the vehicle multimedia system.

Note:

- to update maps, start the vehicle and do not switch off the engine while data is loading. When the multimedia system is turned on, it automatically identifies the available updates on the USB key, and offers to update the system or map from the updates found on the USB key. Do not switch off your multimedia system while the update is being installed;
- Downloading and installing a system update is only possible if there is a newer version available;
- the functions provided by the multimedia system depend on the model and equipment level of your vehicle.

A



The **A** screen is displayed automatically once the USB flash drive is connected:

- press **1** to run the update;
- press **2** to go back to previous screen.

When you press the button **1**, the update procedure is launched. Do not use any of the system functions during the update procedure.

When the update is completed, the multimedia system restarts with all new and up-to-date functionality.

Licence

To obtain the GPL, LGPL, MPL and other open source licence source codes in this product, please visit the dedicated website.

UPDATING THE SYSTEM AND MAPS

As well as the source code, all the terms of the licence, warranty exclusions and copyright details are available for download.

The dedicated site will also provide you with the open source code on a CD-ROM for a fee to cover distribution costs (such as media, despatch and handling costs) on request by email.

This offer is valid for three years as of the date on which you purchased the product.



The multimedia system might restart automatically during the update process.

Please wait for the radio screen to be displayed.



If the update is accidentally interrupted, restart the process from the beginning.

OPERATING FAULTS

System

System		
Description	Causes	Solutions
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
	The system is deactivated.	The interior temperature of the vehicle is too low or too high.
	The vehicle is switched off.	Restart your vehicle.
No sound can be heard.	The volume is set to minimum or the "mute" function is activated.	Increase the volume or deactivate the "mute" function.
	The selected system source is not correct.	Check the selected system source and make sure the output source is the multimedia system.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.
The displayed time is not correct.	The time setting is set to "Auto" and the system is no longer receiving a GPS signal.	With "Navigation": move the vehicle until you receive a GPS signal.
		Without "Navigation" → 77.
The navigation system does not start correctly or stops responding.	The multimedia system has frozen while in use.	Restart the multimedia system by pressing the "On/Off" button (until the screen turns off).

OPERATING FAULTS

Navigation

Navigation		
Description	Causes	Solutions
No sound can be heard.	The volume on the "NAV" menu is muted or set to the minimum.	Unmute or increase the volume ("Options" on the "NAV" menu). The volume in GPS mode can be adjusted during voice guidance.
The location of the vehicle on the screen does not correspond to its actual location.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
	The map version is out of date.	Update the map.
The directions on the screen do not correspond to the actual road.	The version of system is out of date.	Obtain the latest version of the system.
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	
Voice guidance is unavailable.	The navigation system does not include the intersection. Voice guidance is deactivated.	Increase the volume. Ensure voice guidance is activated.
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.

OPERATING FAULTS

Phone

Phone		
Description	Causes	Solutions
No sounds or ringtone can be heard.	The mobile phone is not connected to the system. The volume is set to minimum or the "mute" function is activated.	Check that the mobile phone is switched on or connected to the system. Increase the ringtone volume or deactivate the mute function. Check the selected system source and make sure the output source is the multimedia system.
Impossible to make a call.	The mobile phone is not connected to the system. The phone keypad has been locked.	Check that the mobile phone is switched on or connected to the system. Unlock the phone keypad.
	Several audio sources are ejected during operation.	Restart the multimedia system by pressing and holding the on/off button (until the screen turns off).
Bluetooth pairing process.	The telephone functions are partially or fully incompatible with the navigation system.	For more information on the list of compatible devices, contact an authorised dealer.

7

OPERATING FAULTS

Media

Media		
Description	Causes	Solutions
No sound can be heard.	The volume is set to minimum or the "mute" function is activated.	Increase the volume or deactivate the "mute" function.
	The audio source is not switched on or connected to the system.	Check the selected system source and make sure the output source is the multimedia system.
No external audio source (MP3 player, portable audio player, USB key or telephone etc) is recognised by the multimedia system.	Several audio sources are ejected during operation.	Restart the multimedia system by pressing and holding the on/off button (until the screen turns off).
Android Auto™/CarPlay™ does not start on the multimedia system.	Android Auto™/CarPlay™ is not configured correctly on your smartphone.	Visit the manufacturer's website for your smartphone for configuration information.
	The USB cable is not compatible for data transfer.	Use a USB cable recommended by the telephone manufacturer for correct functioning of the application.
Audio source operation fault (voice recognition not enabled with SIRI/CarPlay™/Android Auto™, MP3 player, portable audio player or phone, etc.).	The audio source is no longer recognised by the multimedia system during operation.	Restart the multimedia system by pressing and holding the on/off button (until the screen turns off).

OPERATING FAULTS

Media		
Description	Causes	Solutions
Android Auto™/CarPlay™ operation fault.	Your smartphone is no longer compatible following an update to the Android Auto™/CarPlay™ application.	Downgrade to the previous version or refer to the Android Auto™/CarPlay™ settings for your smartphone brand.
Operational fault with geo-tracking applications.	The network is unavailable. Geo-tracking is not activated on your phone.	Find a location with a strong signal reception. Activate geo-tracking on your telephone.

ALPHABETICAL INDEX

Symbols

4x4 info, [76](#)

A

Address book, [42](#)

Android Auto™, Carplay™, [64](#)

Answer a call, [7](#)

Audio settings: sound settings, [7](#)

AUX, [44](#)

Auxiliary source, [44](#)

B

Bluetooth®, [54](#)

C

Communication volume, [20](#)

Controls, [7](#)

D

Destination, [21](#), [42](#)

Destination menu, [21](#)

Detailed route, [21](#)

drive USB, [79](#)

E

End a call, [7](#)

F

Favourites: add, [21](#)

Functions, [4](#)

G

GPS : reception, [34](#)

Guidance: map, [35](#)

Guidance: voice, [7](#), [35](#)

J

Jack socket, [7](#), [44](#)

M

Map: display, [7](#), [41](#)

Map: settings, [41](#)

Map icons, [31](#)

Media, [7](#)

Menu, [7](#)

MP3, [44](#)

Multimedia screen, [7](#)

Multi-view camera, [71](#)

Mute, [20](#)

N

Navigation settings: route settings, [21](#)

ALPHABETICAL INDEX

O

Operating faults, [84](#)

P

Pairing a phone, [54](#)

POI, [21](#), [31](#), [41](#)

Point of Interest, [21](#), [31](#), [41](#)

R

Radio, [7](#), [47](#)

Radio station, [47](#)

Remote engine start-up, [4](#)

Reversing camera, [68](#)

S

Screen: navigation displays, [35](#)

Screen: navigation screen, [35](#)

Screen: settings, [41](#)

Screen: standby, [7](#), [17](#)

Selecting: track, [44](#)

Settings, [7](#), [27](#), [77](#)

Settings: audio, [53](#)

Source: audio, [7](#)

Special destination: address in favourites, [21](#)

Steering wheel controls and panels, [7](#)

Switching off, [17](#)

Switching on, [17](#)

System: updating, [79](#)

T

Traffic information, [4](#), [21](#)

U

USB, [34](#), [79](#)

USB: USB port, [34](#)

USB socket, [7](#), [44](#), [79](#)

V

Vehicle location, [31](#)

Voice controls, [61](#)

Voice recognition, [7](#), [61](#)

Volume, [7](#), [20](#)

W

Waveband, [47](#)



999103786V

27