

PLUG&RADIO

Contents

User precautions	GB.2
Introduction to the controls	GB.4
General description	GB.11
Operation	GB.13
Listen to the radio	GB.14
Listening to a CD/MP3 player	GB.16
Auxiliary audio sources	GB.18
Pairing/unpairing a phone	GB.21
Connecting/disconnecting a phone	GB.23
Making/receiving a call	GB.26
System settings	GB.29
Operating faults	GB.31

Translated from French. Copying or translation, in part or in full, is forbidden unless prior written permission has been obtained from the vehicle manufacturer.

USER PRECAUTIONS (1/2)

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.



Precautions when operating the audio system

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions concerning the equipment

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign objects, or damaged or soiled CDCD MP3s into the player.
- Only use 12 cm diameter circular CDCD MP3s.
- When handling discs, hold them by the inner or outer edges, without touching the non-printed face of the CDCD MP3.
- Do not stick paper to the CDCD MP3.
- After prolonged use, remove the CD CD MP3 from the player with care as it may be hot.
- Never expose CDs/CD MP3s to heat or direct sunlight.

Precautions when using the phone

- There are laws which govern the use of phones in vehicles. They do not necessarily authorise the use of hands-free phone systems under all driving conditions: drivers must be in control of their vehicles at all times.
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).

Maintenance of the fascia

- Use a soft cloth and, if necessary, a small amount of soapy water. Rinse with a soft, slightly damp cloth, then dry with a soft, dry cloth.
- Do not press on the display on the front panel, and do not use any alcohol-based products.

USER PRECAUTIONS (2/2)


The prior acceptance of the General Conditions of Sale is mandatory before using the system.

The description of the models given in this manual is based on the specifications at the time of writing. **This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where they are sold. This manual may also contain information about functions to be introduced later in the model year. The screens shown in the user manual are not contractual.** Depending on the make and model of your telephone, some functions may be partially or completely incompatible with your vehicle's multimedia system.

For more details, please consult an Authorised Dealer.

INTRODUCTION TO THE CONTROLS (1/7)





System panel

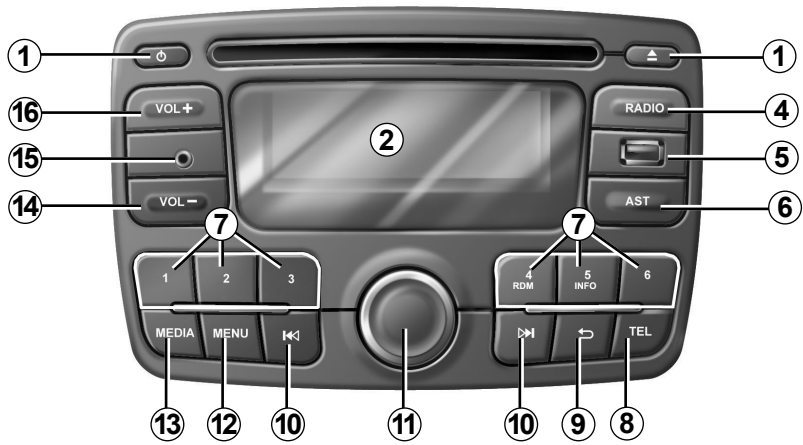

The system front panel may vary.

INTRODUCTION TO THE CONTROLS (2/7)

    
Steering column controls

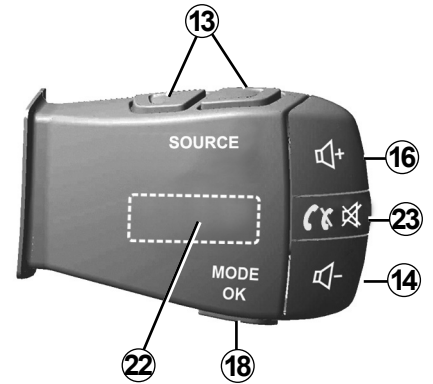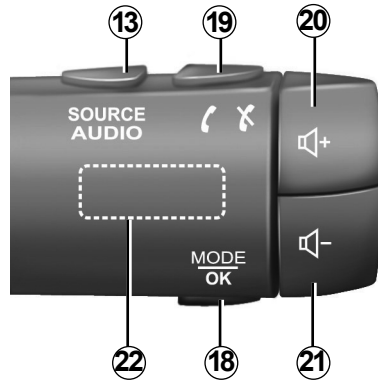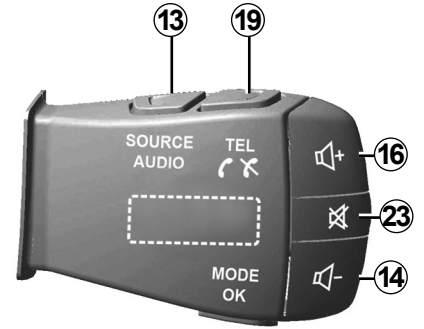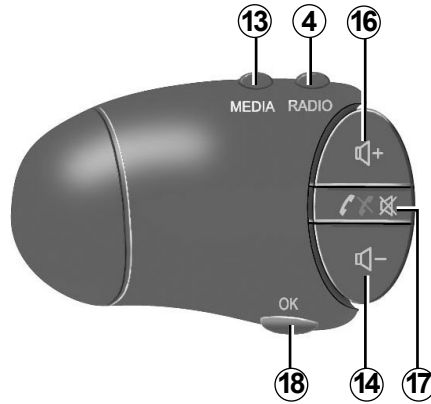


INTRODUCTION TO THE CONTROLS (3/7)

System panels

 A

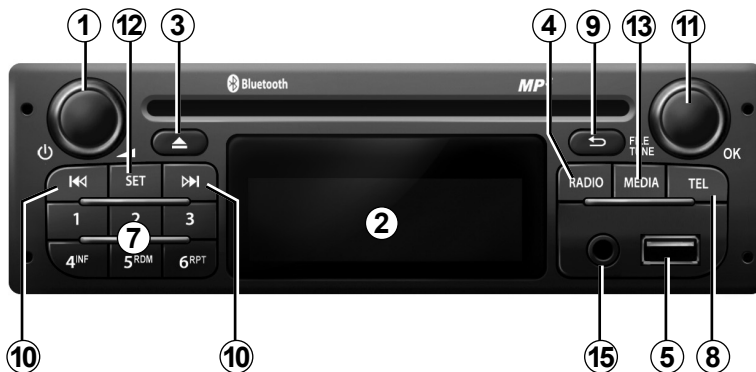

B

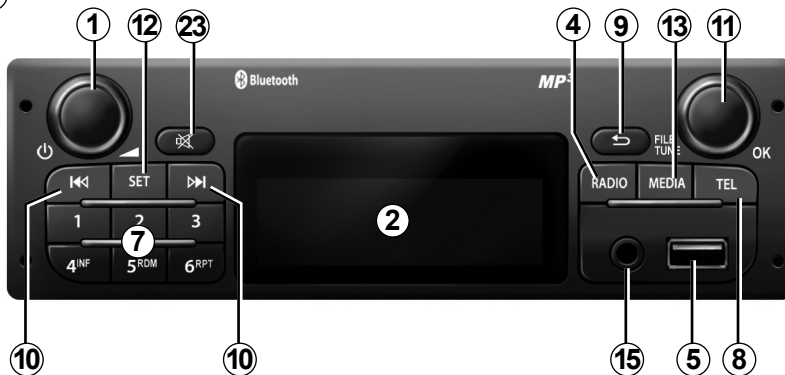 

INTRODUCTION TO THE CONTROLS (4/7)

System panel

Ⓒ



INTRODUCTION TO THE CONTROLS (5/7)

	AUDIO function	TELEPHONE function
1	Short press: On/Off. Rotate: adjust the volume (only for controls A , B and C).	
2	Information display.	
3	Eject a CD/CD MP3.	
4	Choose the radio source and the waveband. The wavelengths are FM1, FM2, AM, FM, AST.	
5	USB socket for iPod® or auxiliary audio sources.	
6	Short press: to activate AST mode and return to the last AST station listened to. Long press: start searching for the six radio stations with the strongest frequencies.	
7	Short press: recall a pre-programmed station. Press and hold: store a radio station.	
8		Short press: access the "Phone" menu. Long press: redial the last number dialled. During a call: end the call in progress.
9	<ul style="list-style-type: none"> – Return to previous screen/previous level when browsing through menus; – cancel current action. 	

INTRODUCTION TO THE CONTROLS (6/7)

	AUDIO function	TELEPHONE function
10	<p>Short press: change tracks (CD/CD MP3, on some portable audio players) or change radio frequencies.</p> <p>Long press: fast forward/rewind a CD/CD MP3 track on some portable audio players, or scroll through the radio stations until the button is released.</p>	
11	<p>While listening to a CD/CD MP3, USB, iPod®, portable audio player Bluetooth®: mute the sound and pause.</p> <p>Short press: confirm an action. Rotate: navigate menus, lists or radio frequencies (in steps of 0.05 Hz).</p>	
12	Access the custom settings menu.	
13	Select the required medium (if connected): CD/CD MP3 → iPod® → USB → AUX → Bluetooth®.	
14, 21	Decrease the volume of the audio source currently in use.	
15	Auxiliary input.	
16, 20	Increase the volume of the audio source currently in use.	
17	<ul style="list-style-type: none"> – Mute the radio source currently playing; – Mute the sound and pause the playback of the CD/CD MP3, USB, iPod®, portable audio player Bluetooth®. 	<p>Out of range of the call signal:</p> <ul style="list-style-type: none"> – long press: redial the last number. <p>When receiving a call:</p> <ul style="list-style-type: none"> – short press: answer the call; – long press: reject the call. <p>During a call: end the call in progress.</p>

INTRODUCTION TO THE CONTROLS (7/7)

	AUDIO function	TELEPHONE function
18	Confirm an action.	
19		<ul style="list-style-type: none"> – Short press: access the «Phone» menu. – Long press: redial the last number dialed. <p>When receiving a call:</p> <ul style="list-style-type: none"> – short press: answer the call; – long press: reject the call. <p>During a call: end the call in progress.</p>
20+21	<ul style="list-style-type: none"> – Mute the radio source currently playing; – mute the sound and pause the playback of the CD/CD MP3, USB, iPod® or Bluetooth® portable audio player. 	
22	<p>Rotate:</p> <ul style="list-style-type: none"> – radio: browse through the radio list; – media: previous/next track. <p>Short press: open the current playback list.</p> <p>Long press:</p> <ul style="list-style-type: none"> – return to the previous screen/previous level while browsing menus; – cancel current action. 	<p>Rotate:</p> <ul style="list-style-type: none"> – “Phone” menu: browse through the list. <p>Short press: confirm an action.</p> <p>Long press:</p> <ul style="list-style-type: none"> – return to the previous screen/previous level while browsing menus; – cancel current action.
23	<ul style="list-style-type: none"> – Mute the radio source currently playing; – mute the sound and pause the playback of the CD/CD MP3, USB, iPod® or Bluetooth® portable audio player. 	

GENERAL DESCRIPTION (1/2)

Introduction

The audio system has the following functions:

- RDS radio;
- CD/CD MP3 reader;
- management of auxiliary audio sources;
- Bluetooth® hands-free phone system.

Radio and CD/CD MP3 functions

Your audio system allows you to listen to radio stations and play CD audio, MP3, WMA, AAC and WAV.

The radio stations are classed by wavelength: FM (frequency modulation) and AM (amplitude modulation).

The RDS system enables the names of certain stations to be displayed and types of programme or information messages broadcast by FM radio stations to be heard:

- traffic bulletins (TA);
- emergency messages (PTY31).

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways of connecting your personal stereo, depending on the type of device you have:

- USB socket;
- Jack socket;
- Bluetooth® connection.

For more information on compatible devices, please contact an approved dealer.

GENERAL DESCRIPTION (2/2)

Hands-free phone function

The Bluetooth® hands-free system provides the following features without having to handle your phone:

- pair up to five phones;
- send/receive/reject a call;
- transfer the contacts list from the phone memory and the card SIM;
- view the call log for calls which have come through the audio system;
- call voicemail.


Telephone compatibility

Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible phones, contact an authorised dealer or visit the manufacturer's website if available.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

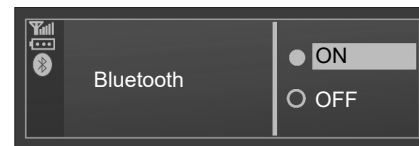

Bluetooth® function

This function enables the audio system to recognise and operate your portable audio player or mobile phone by Bluetooth® pairing.

You can activate/deactivate the Bluetooth® function via the "Bluetooth" menu:

- display the "Phone" menu by pressing **8** on the front panel of the audio system or **19** on the steering column control;
- select "Bluetooth" by turning and pressing **11** on the front panel of the audio system;
- select ON/OFF.

OPERATION

On and off

Briefly press button **1** on the front panel of the audio system to switch on your system.

The audio system can be used with the vehicle ignition off. It will operate for ten minutes. Press button **1** on the front panel of the audio system to operate the system for a further ten minutes.

Switch off the audio system by briefly pressing button **1** on the front panel of the audio system.

CHOOSING THE SOURCE

Scroll through the various audio sources by pressing button **13** successively on the front panel of the audio system or on the steering column control. When scrolling, the sources appear in the following order: CD/CD MP3 → iPod → USB → AUX → Bluetooth®.

Note: press button **8** on the front panel of the audio system or **19** on the steering column control to display the telephone menu.

When a CD/CD MP3 is inserted when the radio is on, the source changes automatically and the CD begins to play.

You may also select the radio source by pressing button **4** on the front panel of the audio system or on the steering column control.

Repeatedly pressing the **4** button on the front panel of the audio system or on the steering column control scrolls through wavebands in the following order: FM1 → FM2 → AM → FM1...

VOLUME

Adjust the volume by pressing the **14** or **16** buttons on the front panel of the audio system or on the steering column control, or by turning the **1** button on the front panel of the audio system or by pressing the **20** or **21** buttons on the steering column control.

The display of the audio system reads "VOLUME" followed by the current setting value (from 00 to 31).

Mute

To mute the sound, briefly press the **23** button on the front panel of the audio system or **17** button on the steering column control, or the **20** and **21** buttons on the steering column control simultaneously.

The message "MUTE" is displayed on the audio system screen.

Briefly press the **23** button on the front panel of the audio system again or the **17** button on the steering column control, or the **20** and **21** buttons on the steering column control simultaneously to resume playing the current source.

You can also unmute the sound by pressing the **14** or **16** buttons on the front panel of the audio system or on the steering column control, or by turning the **1** button on the front panel of the audio system or by pressing the **20** or **21** buttons on the steering column control.

LISTENING TO THE RADIO (1/2)

Selecting a waveband

Repeatedly press **4** on the front panel of the audio system to choose the desired waveband: FM1, FM2, AM, FM1...

Selecting a radio station

There are different modes for choosing a radio station.

Automatic search

This mode allows stations to be searched by automatically scanning the selected band.

To access the stations, briefly press **10** on the front panel of the audio system.

To halt the station search, briefly press **4**, **10** or one of the keys on the **7** keypad on the front panel of the audio system.

Manual search

This mode allows you to search for stations manually by scanning the selected waveband. To access the stations, press and hold **10** on the front panel of the audio system.

You can release the **10** button on the front panel of the audio system to refine the search. Turn the **11** button on the front panel of the audio system to increase or decrease the frequency by 0.05 Hz (depending on the direction of rotation).

Storage of radio stations

This operating mode allows you to listen to your pre-set radio stations.

Select a wavelength, then select a radio station using the methods described above.

Store a station by pressing and holding one of the buttons on the **7** keypad on the front panel of the audio system. A beep will indicate that the station has been stored.

You can save up to six stations per waveband.

Recall stored stations by pressing one of the buttons on the **7** keypad on the front panel of the audio system.

LISTENING TO THE RADIO (2/2)

AST (Autostore) function

The AST function enables you to save the six stations with the strongest frequencies in your current area.

When listening to the radio, briefly press the **6** button on the front panel of the audio system to activate AST mode. The radio returns to the last AST station listened to. Press and hold the **6** button on the front panel of the audio system. The automatic frequency scan is triggered to search for the six best stations.

When listening to the radio, press the **12** button on the front panel of the audio system then select "Radio Autostore". Press the **11** button on the front panel of the audio system or **18** button on the steering column control to confirm and activate AST mode. The automatic frequency scan is triggered to search for the six best stations.

To switch from one saved frequency to another, press one of the buttons on the **7** keypad on the front panel of the audio system. The strongest frequency will be saved as P1.

Note: some buttons may not correspond to a radio station if "Radio Autostore" has found fewer than six stations.

Manual search

In AST mode, you can manually modify the frequencies detected by your audio system.

Press one of the **10** buttons on the front panel of the audio system to adjust the frequency, then press and hold one of the buttons on the **7** keypad to save the selected frequency.

Note: bands FM1, FM2, AM and AST will let you store a total of 24 stations.

AF-RDS automatic retuning

The frequency of an FM station changes according to the geographical area. Certain stations use the RDS system which allows automatic retuning. The radio system is able to follow the changes in frequency of these stations.

Note: if the radio station does not provide the RDS frequency function, the message AF flashes on the audio system display.

Poor reception can sometimes cause unwanted changes in frequency. In this case you should deactivate the automatic frequency retuning.

To activate/disable the AF, PTY31, REG, TA functions, display the RDS menu by pressing the **12** button on the front panel of the audio system, select "RDS Options", then press the **11** button on the front panel of the audio system or **18** button on the steering column control to confirm.

LISTENING TO A CD/CDMP3 (1/2)

Specifications of readable formats

Only files with an MP3, WMA, AAC or WAV extension will be read.

If a CD contains both audio CD files and compressed audio files, the compressed audio files will not be recognised.

Note: some protected files (copyright) cannot be read.

The audio system can support up to 10,000 files.

Note: file names cannot exceed 128 characters in length. To ensure that folder and file names are easy to read, we recommend that you use names with fewer than 64 characters, and avoid the use of special characters.

CD/CD MP3 maintenance

To protect its readability, never expose a CD CD MP3 to heat or direct sunlight.

To clean a CDCD MP3, use a soft cloth and clean from the centre towards the edge of the CD.

As a general rule, refer to the CD manufacturer's advice concerning maintenance and storage.

Note: some scratched or dirty CDs cannot be read.

Inserting a CD/CD MP3

Refer to the section entitled «Precautions during use».

Check that there is no CD in the player, then insert the CD with the printed side upwards.

Listening to a CD/CD MP3

When a CD/CD MP3 is inserted (printed surface upward), the audio system automatically switches to CD/CD MP3 source and starts to play the first track.

If the audio system is switched off and the ignition is on, inserting a CD/CD MP3 switches on the audio system and the CD/CD MP3 starts to play. If the ignition is not on, the audio system will not switch on.

If you are listening to the radio and a CD/CD MP3 is in the player, you can choose to listen to the CD/CD MP3 by pressing the **13** button on the front panel of the audio system or on the steering column control. Playback starts as soon as the audio system switches to the CD/CD MP3 source.

Searching for a track


Briefly press the **10** button on the front panel of the audio system or turn the **22** control knob on the steering column control to move from one track to another.

Fast winding

Press and hold the **10** button on the front panel of the audio system to fast forward or rewind.

Playback resumes when the button is released.

LISTENING TO A CD/CDMP3 (2/2)

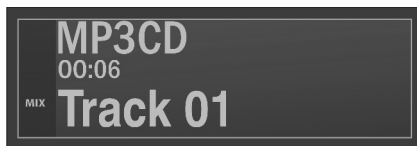

Random playback (Mix)

With a CD/CD MP3 inserted, press and hold button 4 or 5 of the keypad **7** to activate the shuffle playback function for all tracks on the CD/CD MP3.

The symbol MIX appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly. Press button 4 or 5 again on the **7** keypad to turn the shuffle function off; the MIX symbol goes out.

Random play is not deactivated when the audio system is switched off or the source changed.

Alternatively, random playback can be deactivated by ejecting the CD/MP3 CD.

Note: on a CD MP3, random play runs on the folder currently being played. Change folder to run random playback on another folder.

Pause

Press the **23** or **11** button on the front panel of the audio system or **17** button on the steering column control or the **20** and **21** buttons on the steering column control simultaneously to temporarily mute the sound.

This function is automatically deactivated when the volume is adjusted, the source is changed or automatic information messages are issued.

Displaying text information (if available) (CD-Text or ID3 tag)

Briefly press button 4 or 5 on the **7** keypad on the front panel of the audio system to scroll through the ID3 tag information (artist name, album title or song title). To display all the ID3 tag information on a single page, press and hold button 4 or 5 on the **7** keypad on the front panel of the audio system. To exit the function, press the **9** button on the front panel of the audio system.

Note: after a few seconds, the previous screen will be displayed automatically, without any action on your part.

Ejecting a CD/CD MP3

Eject a CD/CD MP3 from the player by pressing the **3** button on the front panel of the audio system.

Note: if an ejected disc is not removed within 20 seconds, it will automatically be reinserted into the CD player.

AUXILIARY AUDIO SOURCES (1/3)

Your audio system has an auxiliary input to connect an external audio source (USB key, MP3 player, iPod®, Bluetooth® portable audio player, etc.).

There are several ways to connect your portable audio player:

- USB socket;
- Jack socket;
- Bluetooth® connection.

Note: the auxiliary audio source formats include MP3, WMA and AAC.

Note: the USB key used must be formatted to FAT32 format and have a maximum capacity of 32Gb.

Auxiliary input: USB socket

Connection

Connect the plug of the iPod® or the USB key to the USB input socket on the front panel of the audio system.

Once the device's connector has been connected to the USB port, the track being played is displayed automatically.

Note: if this is the first time that the device is connected to the audio system, audio playback will start at the first track in the first folder on the source. Otherwise, playback starts from the last track played (if you connect the same device twice).

Note: once connected, you can no longer directly control your portable digital audio player. You must use the buttons on the front panel of the audio system.

Use

- iPod®:

After connecting your iPod®, the menus are accessible from your audio system.

The system keeps the same playlists as on your iPod®.

- USB memory stick:

Playback of the first file from the first folder on your USB key begins automatically.

If you are in the menu tree structure, you can change the track or the folder by turning and pressing the **11** knob on the front panel of the audio system or the **22** knob on the steering column control. If you are not in the tree structure, rotating the control knob has no effect.

Note: to access the menu of your device (iPod® or key USB) while playing an audio track, press **9** on the front panel of the audio system.

Note: random play on a USB key works in the same way as for a CD MP3. Refer to the section on "Listening to a CD/CD MP3", information on "Shuffle (Mix)".


AUXILIARY AUDIO SOURCES (2/3)

Auxiliary input: Bluetooth® audio playback

To use your Bluetooth® portable audio player, you must pair it to the vehicle the first time you use it.

Pairing allows the audio system to recognise and store a portable audio player Bluetooth® or a phone Bluetooth®.

Note: if your Bluetooth® digital device has telephone and portable audio player functions, pairing one of these functions will automatically pair the other.

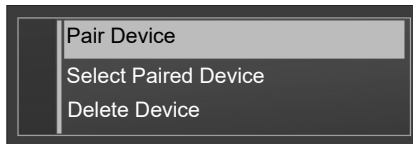

Connection

- Activate the Bluetooth® connection of the portable audio player or phone (refer to the user manual of your portable audio player or phone);
- activate the Bluetooth® of your audio system by pressing the **8** button on the front panel of the audio system or **19** button on the steering column control. A message on the display of the audio system will confirm the activation of Bluetooth®;
- a four-digit code will appear on the screen of your audio system;
- select “My Radio” on your player (or phone).

- enter the four-digit code displayed on the audio system from the keypad of your player (or phone);
- a message confirming pairing will appear on the display on the audio system;
- select the desired audio source Bluetooth® by pressing **13** on the front panel of the audio system or the steering column control, then turn the **11** knob on the front panel of the audio system or **22** knob on the steering column control. Confirm the chosen source by pressing **11** on the front panel of the audio system or **18** on the steering column control.

Note: if the AUX source is disconnected, the audio system returns to the previous menu.

According to the make and model of your device, the Bluetooth® function may be partially or totally incompatible with your vehicle's audio system. Please consult an authorised dealer.

AUXILIARY AUDIO SOURCES (3/3)

Use

Your portable audio player must be connected to the audio system to access all its functions.

Note: no portable audio player can be connected to the audio system unless it has previously been paired.

Once the Bluetooth® digital portable audio player is connected, you can control it from your audio system.

Press the **11** button on the front panel of the audio system or **17** button on the steering column control to pause the audio track (pressing again resumes playback).

Depending on the device, press one of the **10** buttons on the front panel of the audio system or turn the **22** knob on the steering column control to go to the previous or next track on the portable audio device.

Note: the number of accessible functions varies depending on the type of portable audio player and its compatibility with the audio system.

Note: in some cases, refer to the user manual for your device to finalise the connection procedure.

Auxiliary input: Jack socket

Connection

Using the appropriate cable (not provided), connect the Jack socket of the auxiliary input **15** on the front panel of the system to portable audio player headphones plug (usually a 3.5 mm Jack jack).

Note: you cannot select a track directly from your audio system. To select a track, you must do so directly via your portable audio player, when the vehicle is stationary.

Use

Just the text AUX appears on the audio system screen. No artist or track name is visible.



Only handle the personal stereo when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

PAIRING, UNPAIRING A PHONE (1/2)

Pairing a phone

In order to use your hands-free phone system, you must pair your Bluetooth® phone with your vehicle when using it for the first time.


Pairing will enable the hands-free phone system to recognise and store a phone.

You can pair up to five phones, but only one can be connected at a time to the hands-free telephone system.

Pairing can be performed from the audio system or your phone.

Your audio system and phone must both be switched on.

Note: if a phone is already connected, during a new pairing procedure, the existing connection will automatically be disconnected.

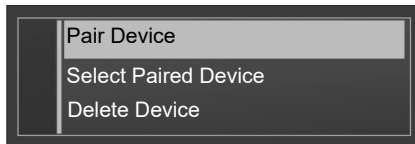

Pairing a Bluetooth® telephone from the audio system

- Activate your phone's Bluetooth® (refer to your phone's user guide);
- display the "Phone" menu by pressing the **8** button on the front panel of the audio system or **19** button on the steering column control;
- select "Pair Device" by turning and pressing the **11** knob on the front panel of the audio system or **19** knob on the steering column control;

- the "Ready to Pair" will appear on the audio system display;
- from your phone search for Bluetooth® equipment in the vicinity;
- from your phone, select "My_Radio" (the name of the audio system) from the list;
- enter the pairing code displayed on the audio system screen using your telephone keypad.

Please refer to the telephone's handbook for further information.

Once pairing is completed:

- a message with the name of the telephone that has been paired is displayed;
- the phone is automatically connected to the vehicle.

If pairing fails, the audio system screen returns to the "Phone" menu.

If the list of paired phones is full, a new phone can only be paired if an existing phone is unpaired.

PAIRING, UNPAIRING A PHONE (2/2)

Unpairing a phone

Unpairing deletes a phone from the hands-free phone system memory.

Display the “Phone” menu by pressing the **8** button on the front panel of the audio system or the **19** button on the steering column control, then select the “Delete Device” menu. Select the phone to be unpaired from the list, press **11** on the front panel of the audio system or **18** on the steering column control, then select “YES”.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

CONNECTING, DISCONNECTING A TELEPHONE (1/3)

Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

No phone can be connected to the hands-free phone system unless it has previously been paired.

Refer to the information on “Pairing a telephone” in the “Pairing/Unpairing a telephone” section.

Note: the Bluetooth® connection on your phone must be activated.

Automatic connection

Once the ignition is switched on, the hands-free phone system searches for nearby paired phones.

Note: the priority phone is the last to have been connected.

Searching will continue until a paired phone is found (this may take up to five minutes).


Note:

- you can use automatic telephone connection with the ignition switched on. You may need to activate the automatic Bluetooth® connection function on your hands-free phone system. To do this, refer to the user manual for your phone;
- when reconnecting, and when two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system.

Note: if a call is already in progress when your hands-free phone system is connected, the phone will automatically be connected and the conversation will switch to the vehicle speakers.

Note: if a call is already in progress when your hands-free phone system is connected, the phone will automatically be connected and the conversation will switch to the vehicle speakers.

CONNECTING, DISCONNECTING A TELEPHONE (2/3)

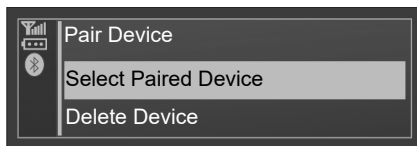

Manual connection (changing the phone connected)

To connect another Bluetooth® device to the audio system:

- display the settings menu by pressing the **8** button on the front panel of the audio system or **19** button on the steering column control;
- select the “Select Paired Device” menu using the **11** knob on the front panel of the audio system or **22** knob on the steering column control.

You will find the list of phones already paired.

- Select the phone that you want to connect from the list and confirm by pressing the **11** knob on the front panel of the audio system or **22** knob on the steering column control.

A message on the audio system display will indicate that the phone is connected.

Connection failure

If connection fails, check that:

- your phone is switched on;
- your telephone battery is not flat;
- your phone has been previously paired with the audio system;
- the Bluetooth® on your phone and on the audio system are activated;
- the phone is configured to accept all pairing requests.

Note: using your hands-free phone system for prolonged periods will discharge your phone’s battery more quickly.

CONNECTING, DISCONNECTING A TELEPHONE (3/3)

Disconnect a phone

To disconnect your phone from the audio system:

- display the settings menu by pressing the **12** or **8** button on the front panel of the audio system, or **19** button on the steering column control;
- select the “Bluetooth Connection” menu using the **11** knob on the front panel of the audio system or **22** knob on the steering column control;
- select the phone you wish to disconnect from the list, then select “Disconnect” by turning and pressing the **11** knob on the front panel of the audio system or **22** knob on the steering column control.

Switching off the phone will also cause it to be disconnected from the audio system.

A message will then appear on the audio system display to confirm that the phone has been disconnected.

Note: if a call is in progress when the phone is disconnected, the call will automatically be transferred to your phone.

To disconnect your phone, you can also:

- deactivate the Bluetooth® function of your audio system;
- deactivate Bluetooth® on your phone;
- delete the paired phone via the “Phone” menu.

To deactivate the Bluetooth® of your audio system, refer to the information on “Bluetooth Function” in the “General Description” section.

To unpair a Bluetooth® telephone, refer to the information on “Unpairing a telephone” in the “Pairing/unpairing a telephone” section.


MAKING, RECEIVING A CALL (1/3)

Calling a contact from your phonebook

When pairing your phone, your phonebook is automatically uploaded into the audio system.

- Display the “Phone” menu by pressing the **8** button on the front panel of the audio system or **19** button on the steering column control;
- select “Phone Book” by turning the **11** knob on the front panel of the audio system or **22** knob on the steering column control;
- confirm by pressing the **11** knob on the front panel of the audio system or **18** knob on the steering column control;
- select a contact to call from the list, then confirm by pressing the **11** knob on the front panel of the audio system or **18** knob on the steering column control to start the call.

Note: to return to the previous screen, press the **9** button on the front panel of the audio system.

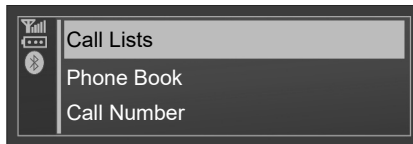

Calling a contact from the call log

- Display the call log by pressing the **8** button on the front panel of the audio system or **19** button on the steering column control, then select “Call Lists”;
- select the “Dialled Call”, “Received Call” or “Missed Call” menu by turning the **11** knob on the front panel of the audio system or **22** knob on the steering column control;

- confirm by pressing the **11** knob on the front panel of the audio system or **18** knob on the steering column control.

The call log will appear on the audio system screen.

- Select the contact or number to call, then confirm by pressing the **11** knob on the front panel of the audio system or **18** knob on the steering column control to start the call.




It is recommended that you stop your vehicle before entering a number or searching for a contact.


The system does not support twin SIM cards and three way calling when your telephone is connected. If you receive a call when you are on another call, this new call is automatically rejected.

MAKING, RECEIVING A CALL (2/3)

Making a call by dialing a number

- Display the “Phone” menu by pressing the **8** button on the front panel of the audio system or the **19** button on the steering column control, then select “Call Number”;
- dial the desired number using the numeric keypad by turning and pressing the **11** knob on the front panel of the audio system or **22** knob on the steering column control, then select .

You can call the last number dialed by pressing and holding the **8** button on the front panel of the audio system or **19** button on the steering column control.

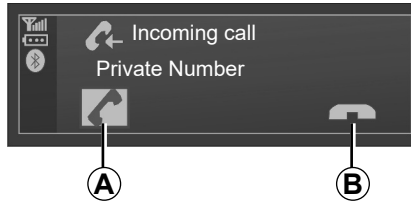

Receiving a call

When receiving a call, the caller's number is displayed on the audio system display (this function depends on the options you have subscribed to with your phone service provider).

If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.

If the caller's number cannot be displayed, the message “Private Number” will appear on the audio system display.


To accept an incoming call:

- select **A** by turning and pressing the **11** knob on the front panel of the audio system or **22** knob on the steering column control;
- briefly press **17** or **19** on the steering column control.

To reject an incoming call:

- select **B** by turning and pressing the **11** knob on the front panel of the audio system or **22** knob on the steering column control;
- press and hold **17** or **19** on the steering column control.

MAKING, RECEIVING A CALL (3/3)

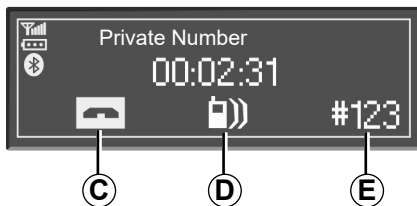

During a call

You can:

- adjust the volume by pressing the **14** and **16** buttons on the front panel of the audio system or steering column control, or **20** and **21** buttons on the steering column control.
- hang up by pressing the **8** button on the front panel of the audio system or **17** or **19** buttons on the steering column control.

By turning the **11** knob on the front panel of the audio system, you can:

- hang up (select and press the **C** icon);
- switch the conversation from your audio system to your phone (select and press the **D** icon);
- control the keypad of your phone from the audio system (select and press the **E** icon).

SYSTEM SETTINGS (1/2)

Display of radio texts

To display radio text:

- press the **12** button on the front panel of the audio system;
- select the “Radio” menu using the **11** knob on the front panel of the audio system;
- confirm by pressing the **11** knob on the front panel of the audio system.

The radio text display may contain a maximum of sixty-four characters.

Note: if there is no information provided, the audio system display will show the message “No message”.

Audio settings

To display audio settings:

- press the **12** button on the front panel of the audio system;
- select “parameters” using the **11** knob on the front panel of the audio system;
- press the **11** knob on the front panel of the system to confirm and display the audio settings menu;
- select “Audio” to access the different sections in the following order:
 - “Bass”;
 - “Treble”;
 - “Fader” (front/rear balance);
 - “Balance” (left/right balance).

You can change the value of each setting by turning the **11** knob on the front panel of the audio system.

Press the **11** knob on the front panel of the audio system to confirm and return to the previous selection.

The system automatically exits the menu if there is no activity for a few seconds. You can also exit the menu by pressing the **9** button on the front panel of the audio system.

Settings AUX

From the “parameters” menu, turn the **11** knob on the front panel of the audio system, then select “Aux In” to access the different sections in the following order:

- “HI”;
- “MID”;
- “LO”.

The values for each setting are as follows:

- “HI” (300 mV);
- “MID” (600 mV);
- “LO” (1200 mV).

Choosing the language

Access “Language” in the “parameters” menu, then choose the desired language.

SYSTEM SETTINGS (2/2)

Default settings

To return to the default settings:

- display the settings menu by pressing the **12** button on the front panel of the audio system;
- select the “parameters” menu using the **11** knob on the front panel of the audio system;
- press the **11** knob on the front panel of the audio system to display the settings menu, then select “Default audio”.

A message will appear on the audio system display asking you to confirm your selection. After selecting this item, all the audio system settings return to their default values.

Phone settings

To display the phone settings menu, press the **8** button on the front panel of the audio system or **19** button on the steering column control.

The system automatically exits the menu if there is no activity for a few seconds. You can also exit the menu by pressing the **9** button on the front panel of the audio system.

Security code

Your audio system is protected by a security code (supplied by the Approved Dealer). This is used to electronically lock the audio system when the power is cut (battery disconnected, system disconnected, fuse blown etc.).

To operate the audio system, you must enter the secret four-digit code.

Make a note of the code and keep it in a safe place. If you lose it, please consult an approved dealer.

Entering the code

To enter the code:

- press the **1** button on the front panel of the audio system to switch on the system. The message “CODE” followed by “0000” will appear on the display;

- to set the value of the first flashing digit, press button 1 on the **7** keypad on the front panel of the audio system until you reach the desired number;
- set the following digits on buttons 2, 3 and 4 of the **7** keypad on the front panel of the audio system in the same way.

After selecting the fourth digit, press and hold button 6 on the **7** keypad on the front panel of the audio system.

The system is unlocked automatically once the full code has been entered.

Entering the code incorrectly

If there is an error when entering the code, the message “CODE ERROR... WAIT” will appear on the audio system display.

Wait around 60 seconds then re-enter the code.

Each time the code is entered incorrectly, the time required before the code can be re-entered is doubled.

OPERATING FAULTS (1/3)

Description	Possible causes	Solutions
No sound can be heard.	The volume is set to minimum or pause.	Increase the volume or deactivate pause.
The audio system does not work and the display does not light up.	The audio system is not switched on.	Switch the audio system on.
	The audio system fuse has blown.	Replace the fuse (see the section on "Fuses" in your vehicle's vehicle user manual).
The audio system does not work but the display lights up.	The volume is set to minimum.	Press button 16 or turn button 1 on the front panel of the audio system or press button 16 or 20 on the remote control.
	Speaker short circuit.	Consult an approved dealer.
No sound comes out of the left- or right-hand speakers when using the radio or a CD.	The sound balance setting (left/right) is incorrect.	Correct the sound balance setting.
	Speaker disconnected.	Consult an approved dealer.
Poor radio reception or no reception.	The vehicle is too far from the transmitter to which the radio is tuned (background noise and interference).	Find another transmitter with better reception in your area or deactivate the "RDS-AF" function.
	The reception is disrupted by interference from the engine.	Consult an approved dealer.
	The aerial is damaged or not connected.	Consult an approved dealer.

OPERATING FAULTS (2/3)

Description	Possible causes	Solutions
The initial read time of a CD CD MP3 seems long.	CD soiled.	Eject and clean the CD.
	CD MP3.	Wait: the CD MP3 requires a long time to be read.
“CD ERROR” is displayed or the CD/CD MP3 is ejected by the audio system.	CD incorrectly inserted or dirty, damaged or incompatible.	Eject the CD/CD MP3. Correctly insert a clean, undamaged or compatible CD/CD MP3 .
Some CD MP3 files cannot be read.	Audio and non-audio files have been saved on the same CD.	Save audio and non-audio files on different CDs.
The audio system cannot read the CD MP3.	The CD has been written at a speed of less than 8x or more than 16x.	Write your CD at a speed of 8x.
	The CD has been written in multisession mode.	Write your CD in “Disc at Once” mode or write your CD in “Track At Once” mode, and finalise the disc after the last session.
The CD MP3 playback quality is poor	The CD is black or of a colour with a lower reflective capacity, which reduces the playback quality.	Copy your CD to a white or light-coloured CD.

OPERATING FAULTS (3/3)

Description	Possible causes	Solutions
The phone does not connect to the audio system.	<ul style="list-style-type: none">– Your phone is off.– Your phone's battery is flat.– Your phone has not yet been paired to the hands-free phone system.– The Bluetooth® on your phone and on the audio system have not been activated.– The phone is not configured to accept the audio system's connection request.	<ul style="list-style-type: none">– Switch on your phone.– Recharge your phone's battery.– Pair your phone to the hands-free phone system.– Activate the Bluetooth® on your phone and the audio system.– Configure the phone to accept the audio system's connection request.
The Bluetooth® portable audio player does not connect to the system.	<ul style="list-style-type: none">– Your audio player is off.– Your audio player's battery is flat.– Your audio player has not previously been paired to the audio system.– The Bluetooth® of your portable audio player and of the audio system have not been activated.– The portable audio player is not configured to accept the audio system's connection request.– Music does not start to play from your audio player.	<ul style="list-style-type: none">– Switch on your portable audio player.– Recharge your audio player's battery.– Pair your audio player to the audio system.– Activate Bluetooth® for your audio player and the audio system.– Configure the portable player to accept the audio system's connection request.– Depending on your phone's degree of compatibility, music may need to be played from your audio player.
The message "Low battery" appears.	Using your hands-free phone system for prolonged periods will discharge your phone's battery more quickly.	Recharge your phone's battery.

ALPHABETICAL INDEX (1/2)

A

AF-RDS frequency tracking..... GB.15
auxiliary source..... GB.18

B

Bluetooth connection..... GB.19
Bluetooth®..... GB.11 – GB.12
Bluetooth® portable audio player..... GB.19
buttons..... GB.4 → GB.10

C

call..... GB.26 → GB.28
call history..... GB.26
call volume..... GB.28
CD text..... GB.17
CD/MP3 CD
 eject..... GB.17
 fast winding..... GB.16
 insert..... GB.16
 listen..... GB.16
 MP3 CD specifications..... GB.16
 random playback..... GB.17
choosing the source..... GB.13
communication..... GB.27
connect a telephone..... GB.23
connection
 failure..... GB.24
controls..... GB.4 → GB.10

D

default settings..... GB.30
disconnect a telephone..... GB.25

F

FM/LW/MW bandwidths..... GB.11 – GB.12

H

hands-free phone kit..... GB.12
hands-free telephone system..... GB.26 → GB.28

I

ID3 tag..... GB.17

J

Jack socket..... GB.19

L

languages..... GB.29

M

mute..... GB.13

O

operating faults..... GB.31 → GB.33
operation..... GB.13

P

pairing a telephone..... GB.21 – GB.22
pause..... GB.17
precautions during use..... GB.2

R

radio
 automatic mode..... GB.14
 automatic station storage..... GB.14
 choosing a station..... GB.14
 manual mode..... GB.14
 station pretuning..... GB.14
radio-text..... GB.29
range of wavelengths..... GB.14
RDS..... GB.11
receiving a call..... GB.27

ALPHABETICAL INDEX (2/2)

S

security code	GB.30
settings	
audio	GB.29
switching off.....	GB.13

T

telephone contacts list.....	GB.26
------------------------------	-------

U

unpairing a telephone.....	GB.22
USB socket.....	GB.18

V

volume.....	GB.13
-------------	-------

W

WMA.....	GB.16
----------	-------