



RADIO MEDIA CONTROL

User precautions

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. Always comply with the laws of the country in which you are travelling.



Precautions when operating the audio system

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions concerning material damage

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not use products containing alcohol and/or spray fluids on the area.

Precautions when using the phone

- There are laws which govern the use of phones in vehicles. The use of hands-free phones is not permitted in all driving conditions: all drivers must remain in control of their driving.
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).

Maintenance of the fascia

- Use a soft cloth and, if necessary, a small amount of soapy water. Rinse with a soft, slightly damp cloth, then dry with a soft, dry cloth.
- Do not press the display on the front panel and do not use products containing alcohol.



Protection of your personal data

Data about you are collected via your vehicle. Data is processed by the manufacturer, acting as a processor, in accordance with the regulations in force.

Your personal data can be used to:

- improve and optimise your use of your vehicle and the associated services;
- improve the driving and on-board experience;
- improve the road safety and predictive maintenance systems;
- improve the automated driving assistance;
- offer you added-value services relating to the vehicle.

The manufacturer takes all the necessary precautions to ensure that your personal data is processed in total security. To find out more about the use of your data and your rights, please visit the manufacturer's website.



The description of the models given in this manual is based on the specifications at the time of writing. **This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where they are sold. This manual may also contain information about functions to be introduced later in the model year. The screens shown in the user manual are not contractual.** Depending on the make and model of your telephone, some functions may be partially or completely incompatible with your vehicle's multimedia system.

Throughout the manual, the Approved Dealer is that of the vehicle manufacturer.

CONTENTS

General description	4
Introduction	4
Radio function.....	5
Hands-free phone function	6
Auxiliary audio function.....	7
Bluetooth® function	8
QR Code.....	9
Analogue meter display	10
General information	10
Audio/Multimedia	16
Phone	23
System settings	33
Digital meter display.....	38
General information	38
Audio/Multimedia	45
Phone	52
System settings	60
Smartphone app Dacia Media Control.....	65
Smartphone app Dacia Media Control : general description	65
Smartphone app Dacia Media Control : Navigation world	69
Smartphone app Dacia Media Control : Audio world.....	70
Smartphone app Dacia Media Control : Vehicle world ..	72
Smartphone app Dacia Media Control : Phone world ...	74
Smartphone app Dacia Media Control : setting parameters.....	75
Settings.....	77
Using voice recognition	77
Operating faults	78

INTRODUCTION

1

The Dacia Media Control includes the following functions:

- FM, AM, DAB radio and DAB+ ;
- management of USB auxiliary audio sources;
- hands-free phone system Bluetooth®;
- smartphone app.

Note: the Dacia Media Control app can be downloaded on your smartphone to facilitate use of the radio by using the smartphone screen as the main control interface. You can access additional functions (eco-score, eco-coach, navigation apps, streaming apps, etc.).

RADIO FUNCTION

The radio can be used to listen to radio stations on the following bands: FM (frequency modulation) and AM (amplitude modulation).

The DR system (digital terrestrial radio in DAB format, DAB+, T-DMB) improves sound reproduction and enables you to access the "Radio text" stored radio text information by scrolling the text to display:

- news updates;
- sports news;
- ...



Your hands-free telephone system is only intended to facilitate communication by reducing the risk factors, but does not remove them completely. Always comply with the laws of the country in which you are travelling.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency messages.

HANDS-FREE PHONE FUNCTION

1

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- pair up to six phones;
- make/receive/reject a call;
- transfer the telephone or SIM card phonebook contact list SIM (depending on the phone);
- view the history of calls made using the system (depending on the phone);
- call voicemail.

AUXILIARY AUDIO FUNCTION

You can listen to your portable digital audio player directly through your vehicle's speakers. There are several ways to connect your portable audio player, depending on the type(s) of device you have:

- Bluetooth® connection;
- USB port.

For more information on the list of compatible devices, contact an authorised dealer.

BLUETOOTH® FUNCTION

1

This function enables the audio system to recognise and control your portable digital audio player or mobile telephone via Bluetooth® pairing.

QR CODE



QR Code

Use the QR Code to view a video online.

Note: this video is not a substitute for the user manual.


This is an additional resource to help you understand how to use the system.

In all cases, always refer to the information provided in the vehicle user manual.


GENERAL INFORMATION

Display

 
2

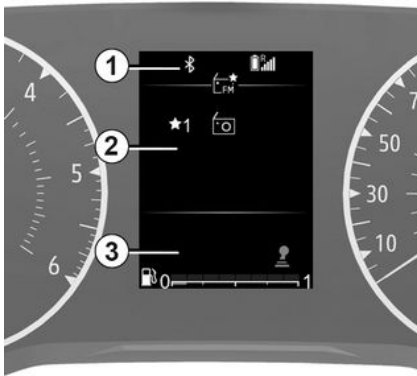

Steering column controls

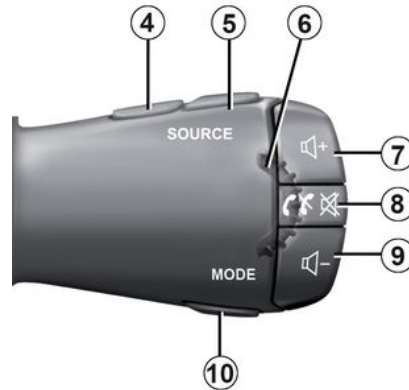



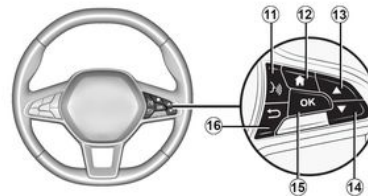


Steering column controls



GENERAL INFORMATION

Introduction to the controls

 
 



 

		AUDIO/MEDIA function	TELEPHONE function
1		Information zone: time, connectivity, telephone information, exterior temperature.	
2		Worlds display zone (Vehicle, Radio, Media, Phone, Settings).	
3		Vehicle trip computer point.	
4 and 5		Scroll through to select an audio source FM→ DR→ AM→ USB→ BT Audio.	
6		Steering column control knob: Rotate: <ul style="list-style-type: none"> – Radio, BT Audio and USB: change the radio station/music track; – Up/Down. 	Steering column control knob: Rotate: <ul style="list-style-type: none"> – scroll through suggested actions (end call, put call on hold, switch to hands-free mode, display digital keypad) except while a call is in progress; – scroll through the phonebook quick search menu.
7 and 9	 and 	Progressively adjust the volume of the audio source currently playing.	
8		<ul style="list-style-type: none"> – Briefly press: <ul style="list-style-type: none"> – activate the audio system; – mute the radio source that is currently playing; – mute the sound and pause the Bluetooth® player, USB source, MP3 player or portable audio player. 	When receiving a call: <ul style="list-style-type: none"> – Press briefly: to answer the call; – Press and hold: to reject the call. During a call: end the call in progress.

GENERAL INFORMATION

		AUDIO/MEDIA function	TELEPHONE function
		– Press and hold: to switch off the audio system.	

2

GENERAL INFORMATION

		AUDIO/MEDIA function	TELEPHONE function
10		<p>Change the mode for displaying and searching for radio stations FM - DR - AM:</p> <ul style="list-style-type: none"> – list mode (search the list for FM/DR radio stations); – manual mode (search FM/AM radio stations by frequency). <p>With the audio media in USB/Bluetooth®:</p> <ul style="list-style-type: none"> – Press briefly: repeat playback of the " Repeat » ; – Press and hold: shuffle playback " Mix ». 	
11		<ul style="list-style-type: none"> – Press briefly: to activate telephone voice recognition. – Press and hold: to deactivate telephone voice recognition. 	
12		Access/return to the main menu.	
13 and 14	 and 	<p>Scroll through worlds/menus, lists and directories:</p> <ul style="list-style-type: none"> – Press briefly: to search manually; – Press and hold: to open the quick search directory menu. <p>Media playing:</p> <ul style="list-style-type: none"> – Press and hold: to fast forward or rewind. 	
15		Select/confirm a function or current playlist, select an item or confirm an action, store a radio station.	
16		<ul style="list-style-type: none"> – Press briefly: to return to the previous level in the world/menu; to cancel the current action or to go up a level in the audio playlist directory (media). – Press and hold: to return to the main menu. 	

GENERAL INFORMATION

Introduction to the display




- A.** Current time.
- B.** Bluetooth® telephone connection information.
- C.** Information on the telephone battery level.
- D.** Information on the telephone network status.
- E.** Exterior temperature.
- F.** Fuel level.
- G.** Audio information (audio source, song title etc.).

Your system contains several worlds:

14 - Analogue meter display


- « Vehicle » ;
- « Radio » ;
- "Media";
- « Phone » ;
- « Settings » ;
- ...

Note: the availability of Worlds depends on the equipment.


You can access the different worlds at any time using the  button on the steering wheel.


Operation

On and off

Briefly press on  to switch on your audio system.


The audio system can be used with the vehicle ignition off. It will operate





for several minutes. Briefly press  to keep it on for a few more minutes. Switch off the audio system by


pressing and holding on . The radio system display is shown in the illustration while switched off or in "Vehicle" mode with the sound muted.

Choosing the source

Scroll through the various audio sources by repeatedly pressing on

. When scrolling, the audio sources appear in the following order: FM→DR→AM→USB→Bluetooth®. You can also select the audio source from the "Media" world.

Press , select the "Media" world by pressing the  on the steering wheel column control,  or , then

 to confirm. Select the audio source.

 
When you connect a USB media source while the audio system is switched on then the source will automatically switch to the new media and start to play its content.



When you connect a Bluetooth® media source while the audio system is on, if the audio source playing was already Bluetooth® then the media content will switch and start to play automatically on the audio system.

GENERAL INFORMATION

Volume





Adjust the volume by pressing on 



or . By briefly pressing on  the volume increases a notch.

The display shows "Volume" followed by the current setting value.

Mute

Press briefly on  to mute the sound.


Press briefly again on the buttons 

,  or  to continue listening to the current audio source.

AUDIO/MULTIMEDIA

Listen to the radio

2

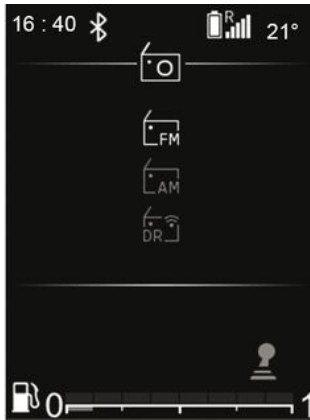

Select a radio band

To select the desired band among FM, AM or DR (Digital Terrestrial Radio),

press on to access the "Radio" world, then select the band by

pressing or , or press on

. While listening to a radio station,

press on to access the band selection screen.

Selecting a radio station

There are several ways to select and search for a radio station:

16 - Analogue meter display

– "list mode" **1** available in DR and FM;



– "manual mode" **2** available in AM and FM.

"List mode"

This mode allows you to search for available stations by scanning the list of stations in alphabetical order, then by frequency (for stations broadcast

unnamed) by using or , then


to confirm.

The radio station you stop at in the list will automatically play shortly afterwards.

To return to the list of stations, press

or browse using on the

steering column control, or .

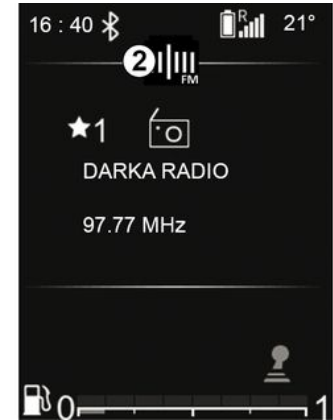

To get the most recent list of stations, update the radio list.

For more information, see the "Update FM list" and "Update DR list" in this section.

"Manual mode"

Manual mode allows you to search for stations by browsing the frequencies in FM and AM:

AUDIO/MULTIMEDIA

– scroll to the higher frequencies using



on the steering column control or




– scroll to the lower frequencies using



on the steering column control or




By pressing on  or  :


– press briefly: to search by frequency step;

– press and hold: to search for an available station automatically.

Radio/media information

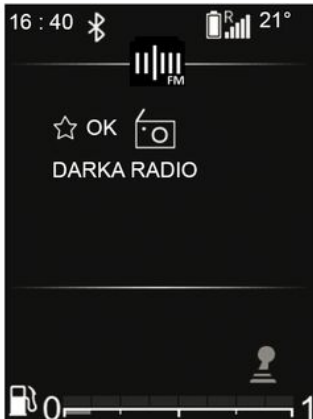

 
This function displays the information on the frequency that you wish to see on the screen (see above). It is displayed automatically after a

moment or when you press .

Station memory



You can store up to six stations so that will be permanently shown at the top of the list of stations.

Select a band (FM, DR), then select a radio station using the modes described above.

To store the station, press and hold on  from the currently playing list and select the position in the Favourites. A beep confirms that the station is saved as a favourite.

By browsing through the list from the beginning, you will still be able to find your "Favourite" stations in the zone entitled – MEM--. Next comes the full list of stations sorted by alphabetical order in the zone entitled – LIST --.

The radio station you stop at will automatically play shortly afterwards. To return to the list of stations, press

, or browse using  on the


steering column control,  or .

AUDIO/MULTIMEDIA


Selecting a station



2

In the AM band, the stations can be browsed by their radio frequency and in the FM or DR band the list of stations can be browsed.

Select the desired band (FM, DR or AM) by repeatedly pressing on .

This list can include up to 100 radio stations stored the last time the list was updated.

Use  on the steering column

control,  or  to scroll through the radio stations in the FM, DR list.

AUDIO/MULTIMEDIA

Media audio sources

Your audio system is equipped with a USB port as well as a Bluetooth® connection which can be used to connect external audio sources.

Note: the auxiliary audio source formats include MP3, WMA and AAC.

USB connection

Connect

Connect the plug of the MP3 player, portable digital audio player or USB drive to the USB port.

Once the device is connected, the track will be displayed automatically.


Use




Once the external audio source is connected, the first audio track will start to play automatically.

The audio system automatically restarts the last track played if the external audio player was previously connected to the audio system.



Once your external audio source is connected, its contents can be accessed via the multimedia system menus. It stores playlists identical to those of your external audio player.


To access the contents of your external audio source via your audio system:

– press  to return to the playlist;
or

– rotate the  on the steering column control or press  or  to scroll through the tracks.

Then, to modify the current playlist:

– press  to display the folders or selection criteria. Press again on  to return to the previous folder;
or

– press  to select the folder, playlist or to listen to the selected track.

Charging using the USB port

Once the USB plug of your portable digital audio player or telephone is connected to the USB port of your audio system (located near the driver's position in the passenger compartment) it will be possible to charge or maintain the battery level during use.

Note: some devices do not recharge or maintain the battery charge level while they are connected to the USB port on the audio system.

Bluetooth® audio playback

In order to use your Bluetooth® portable digital audio device, you must pair it to the vehicle upon first use. Refer to the "Pairing, unpairing a phone" section.


Pairing enables the audio system to recognise and store a Bluetooth® portable digital audio device.

Note:

– if your Bluetooth® digital device is equipped with telephone and portable digital audio player functions, pairing one of these functions will automatically pair the other;
– the number of functions which can be accessed depends on the type of portable digital audio player and its compatibility with the audio system.

AUDIO/MULTIMEDIA

2

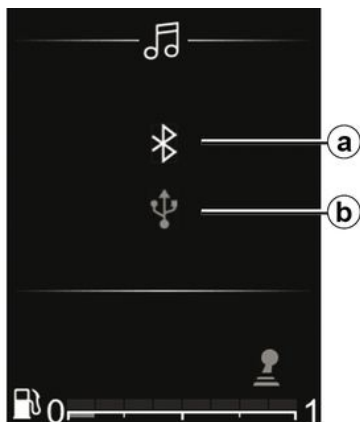

Connecting to the vehicle

Your portable digital audio device must be connected to the audio system via Bluetooth® **a** or USB **b** in order for you to access all of its features.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

- activate the radio Bluetooth® connection;
- enable the telephone or portable digital audio device Bluetooth® connection and make it visible to other devices (refer to the user manual for your device);
- select the audio source Bluetooth®

by repeatedly pressing on  ;

- select the external audio player or the telephone to be connected via Bluetooth® among those detected by the multimedia system.

Use

Your portable digital audio player must be connected to the audio system to enable access to all of its features.

Note: the portable digital audio player cannot be connected to the audio system unless it has already been paired.





Once the Bluetooth® portable digital audio player is connected, you can operate it via your audio system.


Once the external audio source is connected **c**, the first audio track will start to play automatically **d**.

For a device already paired, perform the following operations:

 
AUDIO/MULTIMEDIA

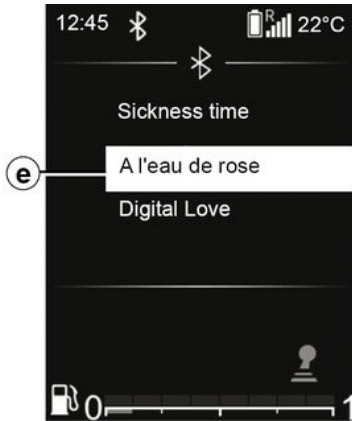

Press  on the steering wheel control to return to the playlist *e*.

Press  or  to scroll through the tracks.

To return to the playback screen *d*,

 
press  or wait a moment until the playlist disappears automatically.

Note: the number of accessible functions

 
depends on the type of portable digital audio device and its compatibility with the audio system.

Shuffle "MIX"



Press and hold on  to shuffle all of the tracks in the folder.

The " MIX " warning light *f* appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly.

 
Press and hold again on  to deactivate the shuffle function: the " MIX " warning light *f* will disappear.

Turning off the audio system deactivates the shuffle function.

 
Repeat "RPT"

 


This function enables you to repeat a playlist.

Press briefly on  to enable the repeat function across the entire playlist.

The " RPT " warning light *g* appears on the screen.

Press briefly again on  to repeat the current track: "1" *h* will appear on the symbol " RPT ».

Press briefly again on  to deactivate the repeat function, the " RPT " warning light *g* will disappear.

AUDIO/MULTIMEDIA


You can also use these playback options: from the main menu, select the "Media" world then the USB source.


2



Only operate the portable digital audio player when traffic conditions permit.

Store the portable digital audio player safely while driving (risk of it being thrown in the event of sudden braking or impact).

Press briefly on  to mute the sound or pause the audio track.

Press briefly again on  or perform an action on the volume bar to unmute or play the audio track.

The audio system sound is automatically activated when changing sources or during bulletin broadcasts.

Mute the sound/Pause




 






PHONE

Pairing/unpairing a phone

Bluetooth® connection

To activate the audio system's Bluetooth® function:

- press  to access the main menu;
- select the "Settings" world then the "Phone settings" menu followed by "Bluetooth®" using the  or 
- then  to confirm;
- select "YES" using  or ,
- then confirm by pressing . The Bluetooth® symbol will then appear continuously in the status bar  on the screen.



For safety reasons, carry out these operations when the vehicle is stationary.

Pairing a phone

To use your hands-free system, pair your Bluetooth® mobile phone with the

vehicle. Check that your phone's Bluetooth® function is activated and set its status to "visible".

Pairing will enable the hands-free phone system to recognise and store a phone.

You can pair up to six phones, but only one can be connected at a time.

Pairing can be performed either via the audio system or via your phone.

Your audio system and phone must both be switched on.




 


 
Note: if you pair a new phone while another phone is already connected to the audio system, it will be disconnected and replaced by the new paired phone.

 


Pairing a Bluetooth® phone with the audio system via the audio system


 
 
This method allows you to make a Bluetooth® search from the audio system.

To pair a phone, carry out the following operations:

- activate Bluetooth®;
 - press  to access the main menu;
 - select the "Settings" world, then the "Phone settings" menu using the 
 - or  then  to confirm;
 - select "Search for phone" using 
 - or , then  to confirm.
- A message is displayed on the screen.

Press  to start searching.

The search for Bluetooth® devices in the vicinity will begin (this search may take up to 60 seconds.)

Select the phone that which you wish to pair using  or , then  to confirm.

From your Bluetooth® device, accept the pairing request.

PHONE

2

When the "Name of connected Bluetooth device" message is displayed on the audio system screen, this indicates that the Bluetooth® device is automatically stored and connected to the vehicle.

Your device is then visible in the list of recognised phones which can also be accessed in the "Select a phone" sub-menu.

If the pairing has not been successful after 60 seconds, the "Pairing failed" message appears. Repeat these operations to carry out the desired action.


Please refer to your telephone's user guide for further information.


Note: depending on your phone, it may be useful to accept the transfer of your phonebook and call history.


 
Pairing a Bluetooth® phone with the audio system via your phone

This method allows you to make a Bluetooth® search from your phone.


 
To pair your phone, carry out the following operations:

– press  to access the main menu;

– select the "Phone" world using 

or , then  to confirm;

– select "Pair a phone" using the 

or , then  to confirm.

The "Enter the code: XXXXXX" message appears on the audio system screen and a 60 seconds countdown starts.

The audio system is then visible to other Bluetooth® devices for approximately 60 seconds.

Search for the audio system using your telephone, then select it (see your telephone user manual) or accept the pairing code with your telephone.

 
The " MY CAR " or " Dacia Media Control Multimédia " message is displayed on the audio system screen to confirm that your phone is paired and connected to the audio system.

The " Dacia Media Control Multimédia " message appears on the screen only if the Dacia Media Control app is connected to the audio system and if the app is installed on your smartphone.

If pairing fails, the audio system display returns to the "Phone" world.



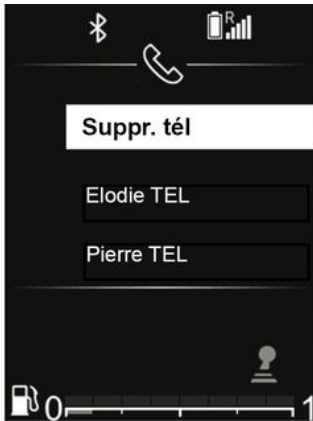

PHONE

Unpairing a telephone



 





Unpairing allows a phone to be deleted from the audio system memory.

To unpair and delete your phone from the audio system memory, perform the following steps:

- press  to access the main menu;
- select the "Settings" world, then "Phone settings" followed by "Delete phone" by pressing  or , then  to confirm;




 





- select the phone that which you wish to unpair using  or , then  to confirm;
- select "YES" using  or , then  to confirm.

If six phones are already stored, the system offers to delete one of the devices. By selecting "YES", you will be redirected to the "Delete a phone" menu.



To unpair and delete all phones from the audio system memory:

- press  to access the main menu;
- select the "Settings" menu, then "Phone settings" followed by "Delete all" by pressing  or , then  to confirm;
- select "YES" using  or , then  to confirm.

Note: all contacts in the phonebook and the call log in the synchronised audio system will be deleted.

PHONE

2



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

PHONE

Connecting/disconnecting a phone

Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

A telephone cannot be connected to the hands-free telephone system unless it has previously been paired.

Please refer to the information on "Pairing a phone" in the "Pairing/unpairing a phone" section.

Note: your phone's Bluetooth® connection must be activated and set to "visible".

Automatic connection

As soon as the vehicle ignition is switched on, the audio system searches for paired telephones in the vicinity.

Note: the last phone to have been connected is given priority.

Searching will continue until a paired telephone is found (this may take several minutes).

Note: for more information on the list of compatible phones, please contact an approved dealer:

– you can use automatic telephone connection with the ignition switched

on. You may need to activate the automatic Bluetooth® connection function on your hands-free phone system. To do this, refer to your phone user manual;

- when reconnecting, if two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system;
- if a call is already in progress when your hands-free telephone system is connected, the telephone will connect automatically and the conversation audio will switch to the vehicle speakers.

 


Your hands-free phone system is only intended to facilitate communication by


reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



For safety reasons, carry out these operations when the vehicle is stationary.

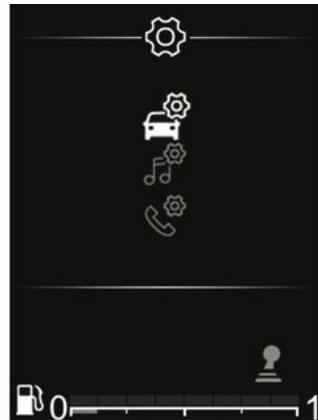

 
Manual connection (changing the phone connected)

Press  to access the main menu, select the "Phone" world using the




 


on the steering column control,



, then  to confirm.



 
PHONE

Select the "Select phone" menu by pressing  on the steering column control,  or , then  to confirm.



The list of phones already paired is displayed.

Select the phone that you wish to connect from the list using the control

knob on the steering column,  or , then  to confirm.

A message will appear to confirm that the telephone is connected.

Note: if a phone is already connected when switching to another phone, the

existing connection is automatically replaced by that of the new phone.

 
Connection failure

If connection fails, check that:

- your phone is switched on;
- your phone battery is not flat;
- your phone has already been paired to the hands-free telephone system;
- Bluetooth® is now enabled on your phone and on the audio system;
- the phone is configured to accept the audio system's connection request.

Note: using your hands-free telephone system for prolonged periods will discharge your phone's battery more quickly.

Telephone information

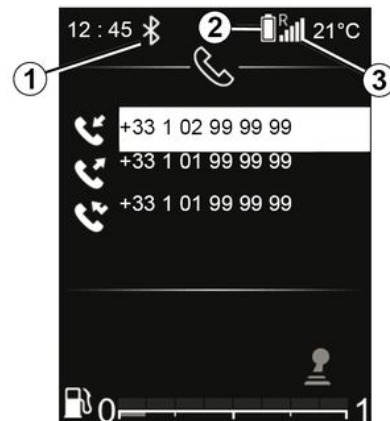

Once connected, the audio system displays telephone-related information:

- the type of connection to the multimedia system **1**;
- the telephone battery level **2**;
- the telephone network status **3**.

PHONE

Disconnect a phone



To disconnect your telephone, you can:

- deactivate the Bluetooth®/Bluetooth® function on your audio system;
- deactivate your phone's Bluetooth® function;
- delete the paired phone via the audio system. Please refer to the information on "Unpairing a phone" in the "Pairing, unpairing a phone" section.

If the phone is switched off, the phone will be disconnected.

A message is then displayed on the audio system screen to confirm that the phone is disconnected.

Note: if a call is in progress when the phone is disconnected, the call will be automatically transferred to your phone.

To deactivate Bluetooth® on your audio system, refer to the information on the "Bluetooth® function" in the "General Description" section.

To disable your smartphone's Bluetooth®, refer to your phone's user guide.

To unpair and delete the Bluetooth® phone, see the information under "Unpairing a phone" in the "Pairing, unpairing a phone" section.




 


 
Making/receiving a call

Call a contact from your call log history




2



To display the call history:

- access the "Phone" world by pressing , then press  or  to select "Phone", then  to confirm;
- select "Calls" by pressing  or , then  to confirm;

PHONE

- Select the contact or number you want to call by pressing  or , then  to make the call.

Receiving a call






 
When receiving a call, the caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider).

If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.

If the caller's number cannot be displayed, the "Private number"

message is displayed on the audio system screen.




 
To accept an incoming call:

- select the icon  using  or , then  to confirm;

 
or

- press briefly on .

To reject an incoming call:

- select the icon  using  or , then  to confirm;

or

- press and hold on .



It is recommended that you stop your vehicle before entering a number or searching for a contact.

Receiving a second call



When receiving a second call, the second caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider). You can:

- accept the incoming call by selecting



- reject the incoming call by selecting



- put an incoming call on hold by selecting **1**.


To end a call during the conversation,

- press .


PHONE




During a call

You can:


– adjust the volume by pressing 


or  ;

– end the call by pressing  .

Press  or  , then  to confirm.

You can also:

– accept the incoming call/resume a call placed on hold by selecting  ;

– end a call by selecting  during the conversation;

– put a call on hold by selecting **1**;

– select **2** to use the audio system keypad to enter the digits.



The system allows managing call waiting when your phone is connected (depending on your plan).

PHONE



 
Using the keypad during a call



 
2




To use the audio system keypad during a call:

 
– select the audio system keypad


 
using  or , then  to confirm;

– select the number or character using  or , then  to confirm your choice.

Note: to return to the previous screen, press .

SYSTEM SETTINGS

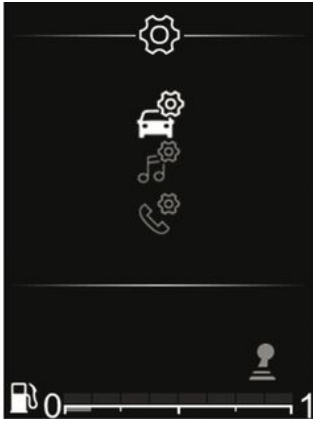

From the main menu, browse by pressing  or  until you reach the "Settings" world.

 
The following settings are available:


 
- « Vehicle » ;
- « Audio » ;
- « Phone ».

 


For safety reasons, carry out any adjustments while the vehicle is stationary.

Audio settings

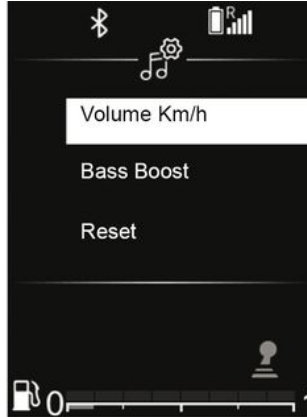

From the main menu, browse by pressing  or  until you reach the "Settings" world, then select "Audio".



Select "Audio settings", then  to confirm.

The following settings are available:

- "Equaliser";
- "Spatialisation";
- "Volume mph (km/h)";
- « Bass boost » ;
- "Reset".



"Equaliser"

Select "Equaliser", then press  or  to access the various sections in the following order:



- « Bass » ;
- « Middle » ;
- « Treble ».


"Spatialisation" (sound distribution)

The "Spatialisation" function to adjust the sound distribution in the passenger compartment:

- "Balance" (left/right sound distribution);
- depending on the vehicle;
- "Fader" (front/rear sound distribution).

SYSTEM SETTINGS


You can change the value of each setting by pressing  or .

Press  to confirm and return to the previous selection.

"Volume sensitive to speed"


The volume of the audio system varies in relation to the vehicle speed.

Go to the "Audio settings" menu then confirm "Volume mph (km/h)" by

pressing .


To reach the desired setting, select one of the following:


 
- « OFF » ;
- "Very low";
- « Low » ;
- « Middle » ;
- "High";
- « Very high ».

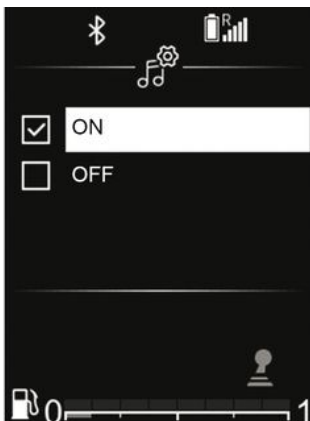

« Bass boost »


 
The "Bass boost" function can be used to increase the bass when listening at low volume.

Access the "Audio settings" menu then confirm "Bass boost" by pressing 

or , then  to confirm.

To activate/deactivate this function,

select "ON" or "OFF" by pressing 



or , then  to confirm.

"Default audio"

 
Display the "Audio settings" and select "Default" then Reset".

Select "YES" or "NO".


All the audio settings return to their default values.

 Press once on button  to return to the previous menu.

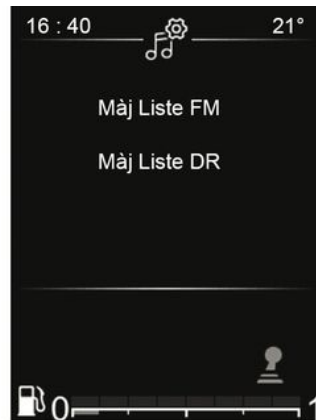

 
Radio settings



Display the settings menu by pressing

briefly on , select the "Settings" world, then "Audio settings" by

SYSTEM SETTINGS

pressing  or , then  to confirm.



 
The available functions are as follows:

- "Update FM list";
- "Update DR list";
- "Simulcast";
- "Priority to DR";
- « TA » ;
- « AF ».

"Update the "FM" list

This feature allows you to perform an update of all FM stations in the area where you are located.

From the "Settings world", select the "Radio settings" menu and then

"Update FM list" by pressing  or , then  to confirm.



 
Automatic updating of the FM stations in the area will begin. The "Update FM list" message is displayed on the instrument panel.

Once the update is complete, the "FM list updated" message is displayed on the screen.

"Update the "DR" list

This feature allows you to perform an update of all DR stations in the area where you are located.

 
From the "Radio settings" menu, select

"Update DR list" by pressing  or , then  to confirm.

Automatic updating of the DR stations in the area will begin. The "Update DR list" message is displayed on the instrument panel.

Once the update is complete, the "DR list updated" message is displayed on the screen.

Note: if another source is selected

with , the FM or DR list continues to be updated in the background.

"Simulcast"

Depending on the country, this function switches from a DR station to the equivalent FM station if the digital signal is lost.

If the "FM/DR simulcast" is activated, there may be lag of a few seconds when switching from FM to DR or from DR to FM. A change in volume may occur.

The system will automatically switch back to DR as soon as the digital signal is received.

Note: during the simulcast, the station name is preceded by " FM> »

"Priority to DR"

Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the equivalent DR station to obtain better sound quality.


 
Note: while DR is prioritised, the station name is preceded by " DR> ».


 
« TA »

When this feature is activated, your audio system searches for and automatically plays traffic bulletins as new reports are broadcast by some "FM" or "DR" radio stations.

To activate or deactivate this function:

– from the "Settings" world, select "Radio settings" settings" by pressing

 on the steering column, then  to confirm;

– select "TA" by pressing  on the steering column, then  to confirm;
– select "ON" or "OFF" to activate or deactivate the "TA" function.

"AF" (automatic retuning AF)

The frequency of an FM station changes according to the geographical area.

SYSTEM SETTINGS

Some stations use the RDS system, mainly for automatic retuning of "AF" while the vehicle is moving.

2

Phone Settings

Use this function to adjust the settings of the telephone connected to the audio system.

From the main menu, browse by

pressing  or  until you reach the "Settings" world. Select "Phone


settings", then press  to confirm.


The following settings are available:

- "Search a phone";
- "Pair a phone";
- "Select a phone";
- "Delete a phone";
- "BT ON/OFF".

Please refer to the corresponding sections.



 
Press once on button  to return to the previous menu.

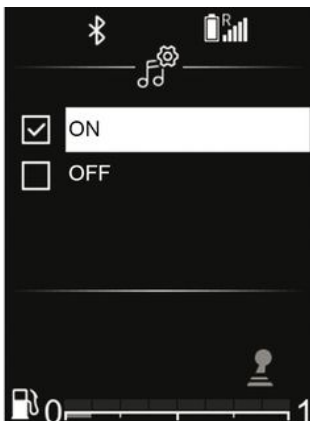

"BT settings" (Bluetooth®)


 
From the main menu, browse by

pressing  or  until you reach the "Settings" world. Select "BT

settings", then  to confirm.

To activate the Bluetooth® audio

system, select "ON" by pressing 

or , then  to confirm.

To deactivate the audio system Bluetooth®, select "OFF" by pressing

 or , then  to confirm.


Selecting a language

Use this function to change the audio system display language on the instrument panel.

Display the settings menu by pressing



. Select "Vehicle Settings", "Language" and then choose the

desired language by pressing  or



by pressing  to confirm.


Setting the time


This function allows you to set the time.

Display the settings menu by pressing

 



. Select "Vehicle menu", then

"Clock" by pressing  or  by

pressing  to confirm.

The "Clock" menu is displayed:



- press and hold on  to set the hour;

- set the hours by pressing  or



, then wait for a moment until the selection automatically switches from the hour setting to the minute setting;

SYSTEM SETTINGS

– set the minutes by pressing  or , then wait a moment for the setting to be validated automatically.



Depending on the brand and model of your telephone, the hands-free functions may be partially or fully incompatible with your vehicle's audio system.



For safety reasons, carry out any adjustments while the vehicle is stationary.


GENERAL INFORMATION

Display

 
3



Steering column controls

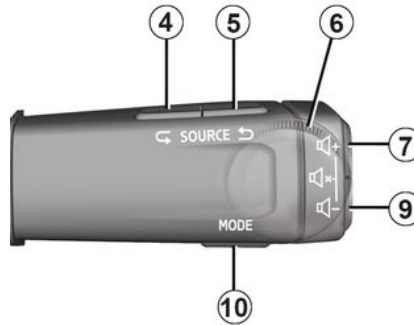

 


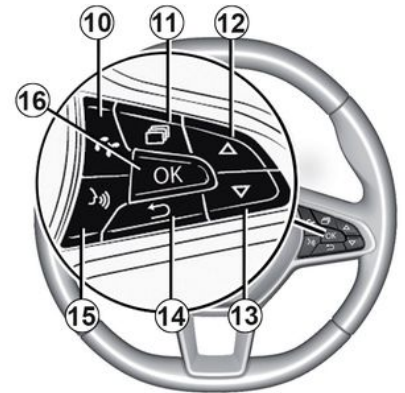

Steering column controls

 
 





GENERAL INFORMATION


 
 
Introduction to the controls

		AUDIO/MEDIA function	TELEPHONE function
1		Information zone: time, connectivity, telephone information, exterior temperature.	
2		Worlds display zone (Vehicle, Radio, Media, Phone, Settings).	
3		Display area showing the world/menu currently in use.	
4 and 5		Scroll through the audio sources to select one of the following: FM→ DR→ AM→ USB→ Bluetooth®.	
6		Steering column control knob: Rotate: <ul style="list-style-type: none"> – Radio, BT Audio and Bluetooth®: change the radio station/music track; – Up/Down. 	Steering column control knob: Rotate: <ul style="list-style-type: none"> – scroll through suggested actions (end call, put call on hold, switch to hands-free mode, display digital keypad) except while a call is in progress; – scroll through the phonebook quick search menu.
7 and 8	 and 	Progressively adjust the volume of the audio source currently playing.	
7 + 8		Mute the audio source currently playing.	

GENERAL INFORMATION

		AUDIO/MEDIA function	TELEPHONE function
9		<p>Change the mode for displaying and searching for radio stations FM - DR - AM:</p> <ul style="list-style-type: none"> – List mode (search the list for FM/DR radio stations); – Manual mode (search FM/AM radio stations by frequency). <p>With the audio media in USB/Bluetooth®:</p> <ul style="list-style-type: none"> – Press briefly: repeat playback of the " Repeat » ; – Press and hold: shuffle playback " Mix ». 	
10			<ul style="list-style-type: none"> – Press briefly: to access the "Phone" world; to call the number displayed; to accept an incoming call. – Press and hold: to reject an incoming call.
11		<ul style="list-style-type: none"> – Press briefly : <ul style="list-style-type: none"> – display the worlds; – navigate between worlds. – Press and hold: to hide the area displaying the worlds. 	
12 and 13	 and 	<p>Scroll through worlds/menus, lists and directories:</p> <ul style="list-style-type: none"> – Press briefly: to search manually; – Press and hold: to open the quick search directory menu. <p>Media playing:</p> <ul style="list-style-type: none"> – Press and hold: to fast forward or rewind. 	

 
GENERAL INFORMATION


		AUDIO/MEDIA function	TELEPHONE function
14		To return to the previous level in the menus or cancel the current action, display the radio waveband selection screen, go up a level in the audio playlist directory (media).	
15		<ul style="list-style-type: none">– Press briefly: to activate telephone voice recognition.– Press and hold: to deactivate telephone voice recognition.	
16		Select/confirm a function or current playlist, select an item or confirm an action, store a radio station.	


GENERAL INFORMATION

Description of the worlds

Worlds screen

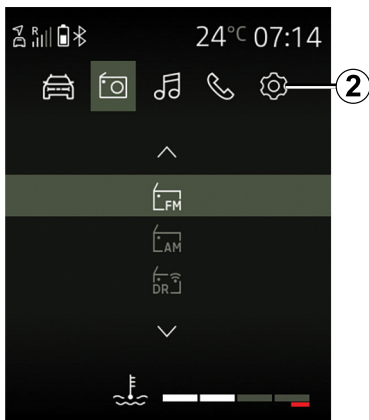

You can access the various worlds **2** at any time by pressing and holding on .


Press repeatedly on  to reach the


"Settings" world, then  to confirm.

- « Vehicle » ;
- « Radio » ;
- "Media";
- « Phone » ;
- « Settings » ;


- ...

Note: the availability of Worlds depends on the equipment.

You can access the different worlds at any time using the  button on the steering wheel.

 Certain functions are only available while the vehicle is stationary.

Display screen

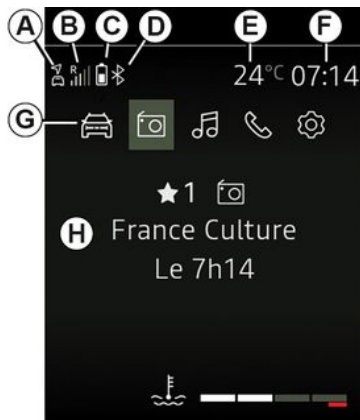

A. Status of the connection and sharing of data;

B. Information on the telephone network status.

C. Information on the telephone battery level.

D. Bluetooth®connection information.

E. Exterior temperature.

F. Current time.

G. Worlds display.


H. Display area showing the world/menu currently in use.

Operation


On and off

Briefly press on ,  or  to switch on your audio system.

The audio system can be used with the vehicle ignition off. It will operate

for several minutes. Briefly press  to keep it on for a few more minutes.

Switch off the audio system by

pressing and holding on . The radio system display is shown in the illustration while switched off or in "Vehicle" mode with the sound muted.

GENERAL INFORMATION

Choosing the source

Scroll through the various audio sources by repeatedly pressing on



. When scrolling, the audio sources appear in the following order: FM→ DR→ AM→ USB→ Bluetooth®.

You can also select the radio band from the "Radio" world.

Press to select the "Radio" world,

then on to display the menu for selecting the desired band among FM, AM or DR (Digital Terrestrial Radio),

then select the band by pressing

or , then to confirm.

You can also select the audio source from the "Media" world.

Press select the "Media" world by

pressing or , then to confirm. Select the audio source.

When you connect a USB media source while the audio system is switched on then the source will automatically switch to the new media and start to play its content.


When you connect a Bluetooth® media source while the audio system

 
is on, if the audio source playing was already Bluetooth® then the media content will switch and start to play automatically on the audio system.



GENERAL INFORMATION

 
Volume

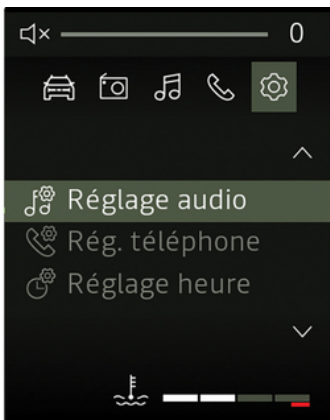
3




Press briefly again on the buttons 


,  or  to continue listening to the current audio source.

Adjust the volume by pressing on 

or  using the steering wheel control.


By briefly pressing on  the volume increases a notch.

Mute

Press briefly on  to mute the sound.




 
AUDIO/MULTIMEDIA

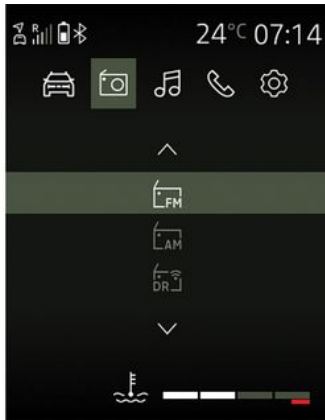Listen to the radio



Select a radio band


To select the desired band among FM, AM or DR (Digital Terrestrial Radio),

press on  to access the "Radio" world, select the band by pressing  or  then  to confirm.

Selecting a radio station



 
There are several ways to select and search for a radio station:

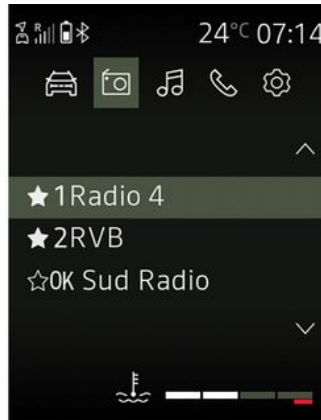- "list mode" available in DR and FM;
- "manual mode" available in AM and FM.









"List mode"


This mode allows you to search for available stations by scanning the list of stations in alphabetical order, then by frequency (for stations broadcast

unnamed) by using  or , then  to confirm.

The radio station you stop at in the list will automatically play shortly afterwards.

To return to the list of stations, press  or browse using  on the steering column control,  or .

Press and hold on  or  to return to the top of the list.

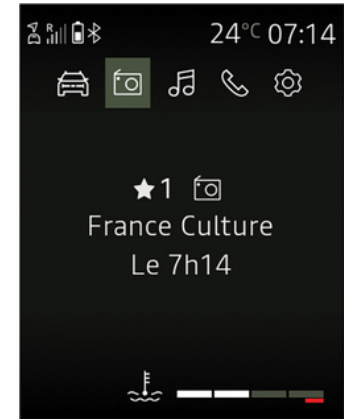

To get the most recent list of stations, update the radio list.


For more information on the list of radio stations, refer to the information on "Updating the FM list" and "Updating the DR list" in this section.

"Manual mode"

Manual mode allows you to search for stations by browsing the frequencies in FM and AM:


AUDIO/MULTIMEDIA

– scroll to the higher frequencies using

 on the steering column control or



– scroll to the lower frequencies using

 on the steering column control or




By pressing on  or  :

 
– press briefly: to search by frequency step;

– press and hold: to search for an available station automatically.

Radio/media information

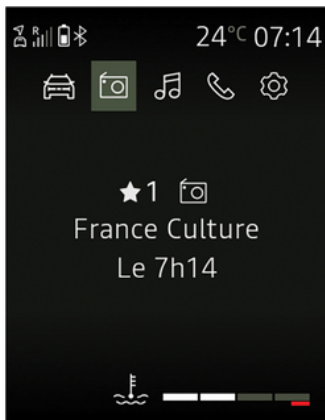

 
This function displays the information on the frequency that you wish to see on the screen (see above). It is displayed automatically after a

moment or when you press .

Station memory





You can store up to six stations that will be permanently shown at the top of the list of stations ("Favourite" stations).

Select a band (FM, DR), then select a radio station using the modes described above.

To store the station, press and hold on  from the currently playing list and select the position in the Favourites. A beep confirms that the station is saved as a favourite.


By browsing through the list from the beginning, you will still be able to find your "Favourite" stations in the zone entitled « -- MEM -- ». Next comes the full list of stations sorted by alphabetical order in the zone entitled " -- LIST -- ».

The radio station you stop at will automatically play shortly afterwards. To return to the list of stations, press


, or browse using  on the steering column control,  or .



AUDIO/MULTIMEDIA

Selecting a station

Select the desired band (FM, DR or AM) by repeatedly pressing on .

This list can include up to 100 radio stations stored the last time the list was updated.

Use  on the steering column

control,  or  to scroll through the radio stations in the FM, DR list.

AUDIO/MULTIMEDIA

Media audio sources

Your audio system is equipped with a USB port as well as a Bluetooth® connection which can be used to connect external audio sources.

Note: the auxiliary audio source formats include MP3, WMA and AAC.

USB connection

Connect

Connect the plug of the MP3 player, portable digital audio player or USB drive to the USB port.

Once the device is connected, the track will be displayed automatically.


Use

Once the external audio source is connected, the first audio track will start to play automatically.



The audio system automatically restarts the last track played if the external audio player was previously connected to the audio system.

Once your external audio source is connected, its contents can be accessed via the multimedia system menus. It stores playlists identical to those of your external audio player.



To access the contents of your external audio source via your audio system:

 
– press  to return to the playlist;
or

– rotate the  on the steering

column control or press  or 
to scroll through the tracks.

Then, to modify the current playlist:

– press  to display the folders or
selection criteria. Press again on 
to return to the previous folder;
or

– press  to select the folder,
playlist or to listen to the selected
track.

Charging using the USB port

Once the USB plug of your portable digital audio player or telephone is connected to the USB port of your audio system (located near the driver's position in the passenger compartment) it will be possible to charge or maintain the battery level during use.

Note: some devices do not recharge or maintain the battery charge level while they are connected to the USB port on the audio system.

Bluetooth® audio playback

 
In order to use your Bluetooth® portable digital audio device, you must pair it to the vehicle upon first use. Refer to the "Pairing, unpairing a phone" section.

Pairing enables the audio system to recognise and store a Bluetooth® portable digital audio device.

Note:

- if your Bluetooth® portable digital audio device is equipped with telephone and portable audio player functions, pairing one of the functions will automatically involve pairing the other;
- the number of functions which can be accessed depends on the type of portable digital audio player and its compatibility with the audio system.

AUDIO/MULTIMEDIA

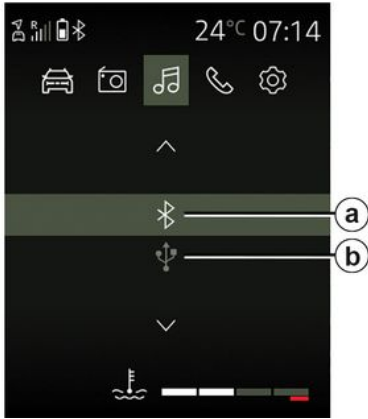

Connecting to the vehicle

Your portable digital audio device must be connected to the audio system via Bluetooth® **a** or USB **b** in order for you to access all of its features.




Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

For a device already paired, perform the following operations:

- activate the radio Bluetooth® connection;
- enable your telephone or portable digital audio device Bluetooth® connection and make it visible to other devices (refer to the user manual for your device);
- select the audio source Bluetooth®

by repeatedly pressing on  ;

- select the external audio player or the telephone to be connected via Bluetooth® among those detected by the multimedia system.

Use

Your portable digital audio player must be connected to the audio system to enable access to all of its features.

Note: the portable digital audio player cannot be connected to the audio system unless it has already been paired.





Once the Bluetooth® portable digital audio player is connected, you can control it via your audio system.


Once the external audio source is connected **c**, the first audio track will start to play automatically **d**.

AUDIO/MULTIMEDIA

 
3

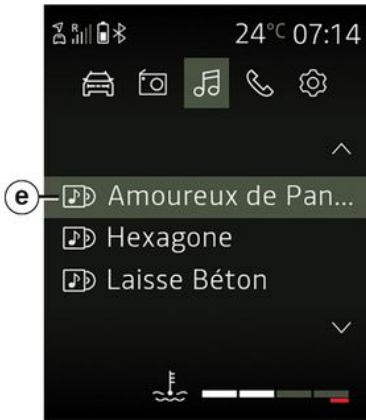

Press  on the steering wheel control to return to the playlist **e**.

 
Press  or  to scroll through the tracks.


To return to the playback screen **d**,

press  or wait a moment until the playlist disappears automatically.

 
Note: the availability of functions depends on the type of portable digital audio player and its compatibility with the audio system.

Shuffle " MIX »

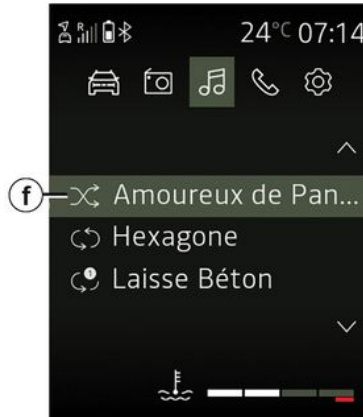 


Press and hold on  to shuffle all of the tracks in the folder.

 
The " MIX " warning light **f** appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly.

Press and hold again on  to deactivate the shuffle function: the " MIX " warning light **f** will disappear. Turning off the audio system deactivates the shuffle function.

 
Repeat "RPT"

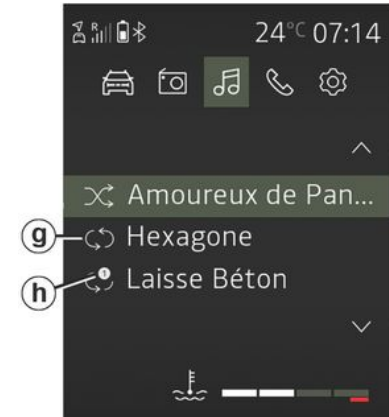 


This function enables you to repeat a playlist.

Press briefly on  to enable the repeat function across the entire playlist.

The " RPT " warning light **g** appears on the screen.

Press briefly again on  to repeat the current track: "1" **h** will appear on the symbol " RPT ».

Press briefly again on  to deactivate the repeat function, the " RPT " warning light **g** will disappear.

AUDIO/MULTIMEDIA


You can also use these playback options: from the main menu, select the "Media" world then the USB source.





Only operate the portable digital audio player when traffic conditions permit.

Store the portable digital audio player safely while driving (risk of it being thrown in the event of sudden braking or impact).

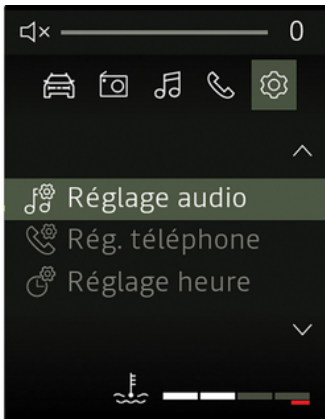Mute the sound/Pause



Press briefly on  to mute the sound or pause the audio track.

Press briefly again on  or perform an action on the volume bar to unmute or play the audio track.




 


 

The audio system sound is automatically activated when changing sources or during bulletin broadcasts.

PHONE

Pairing/unpairing a phone

Bluetooth® connection

To activate the audio system's Bluetooth® function:

- press  to access the main menu;
 - select the "Settings" world, then "Phone settings" followed by "Bluetooth®" by pressing  or ,
 - then  to confirm;
 - select "YES" using  or ,
- then confirm by pressing . The Bluetooth® symbol will then appear continuously in the status bar  on the screen.



For safety reasons, carry out these operations when the vehicle is stationary.

Pairing a phone

To use your hands-free system, pair your Bluetooth® mobile phone with the

vehicle. Check that your phone's Bluetooth® function is activated and set its status to "visible".

 
Pairing will enable the hands-free phone system to recognise and store a phone.

You can pair up to six phones, but only one can be connected at a time.

Pairing can be performed either via the audio system or via your phone.

Your audio system and phone must both be switched on.

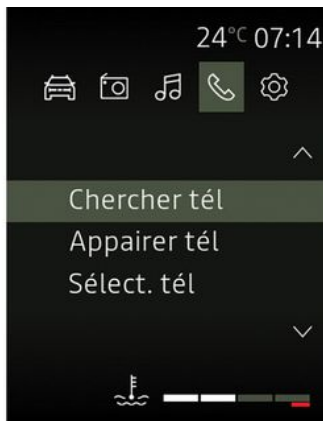


 


 
Note: if you pair a new phone while another phone is already connected to the audio system, it will be disconnected and replaced by the new paired phone.

 


Pairing a Bluetooth® phone with the audio system via the audio system



This method allows you to make a Bluetooth® search from the audio system.

 
To pair a phone, carry out the following operations:

- activate Bluetooth®;
 - press  to access the main menu;
 - select the "Settings" world, then the "Phone settings" menu by pressing  or  then  to confirm;
 - select "Search for phone" using 
- or , then  to confirm.
- A message is displayed on the screen.

Press  to start searching.

The search for Bluetooth® devices in the vicinity will begin (this search may take up to 60 seconds.)

Select the phone that which you wish to pair using  or , then

confirm by pressing .

From your Bluetooth® device, accept the pairing request.

PHONE

When the "Name of connected Bluetooth device" message is displayed on the audio system screen, this indicates that the Bluetooth® device is automatically stored and connected to the vehicle.

Your device is then visible in the list of recognised phones which can also be accessed in the "Select a phone" sub-menu.

If the pairing has not been successful after 60 seconds, the "Pairing failed" message appears. Repeat these operations to carry out the desired action.


Please refer to your telephone's user guide for further information.


Note: depending on your phone, it may be useful to accept the transfer of your phonebook and call history.


 
Pairing a Bluetooth® phone with the audio system via your phone



 
This method allows you to make a Bluetooth® search from your phone.

To pair your phone, carry out the following operations:

– press  to access the main menu;

– select the "Phone" world using 

or , then  to confirm;

– select "Pair a phone" using the 
or , then  to confirm.

The "Enter the code: XXXXXX" message appears on the audio system screen and a 60 seconds countdown starts.

The audio system is then visible to other Bluetooth® devices for approximately 60 seconds.

Search for the audio system using your telephone, then select it (see your telephone user manual) or accept the pairing code with your telephone.

The " MY CAR " or " Dacia Media Control Multimédia " message is displayed on the audio system screen to confirm that your phone is paired and connected to the audio system.

The " Dacia Media Control Multimédia " message appears on the screen only if the Dacia Media Control app is connected to the audio system and if the app is installed on your smartphone.

If pairing fails, the audio system display returns to the "Phone" world.

PHONE


Unpairing a telephone



 
3

 




Unpairing allows a phone to be deleted from the audio system memory.

 
To unpair and delete your phone from the audio system memory, perform the following steps:



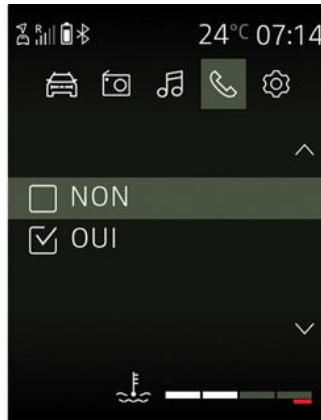 
- press  to access the main menu;
- select the "Phone" world, then

"Delete phone" by pressing  or  then  to confirm;

 


- select the phone that which you wish to unpair using  or ,


then  to confirm;



- select "YES" using  or ,
- then  to confirm.

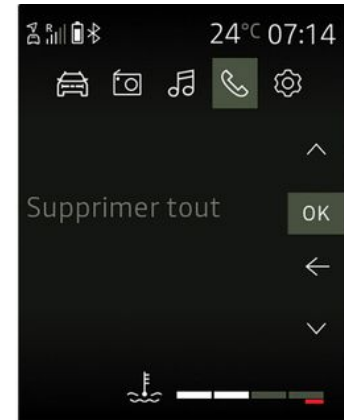
If six phones are already stored, the system offers to delete one of the devices. By selecting "YES", you will be redirected to the "Delete a phone" menu.



 


To unpair and delete all phones from the audio system memory:

- press  to access the main menu;
- select the "Settings" world, then the "Phone settings" menu followed by

"Delete all" by pressing  or ,

then  to confirm;

- select "YES" using  or ,
- then  to confirm.

Note: all contacts in the phonebook and the call log in the synchronised audio system will be deleted.

PHONE



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

PHONE

Connecting/disconnecting a phone

Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

A telephone cannot be connected to the hands-free telephone system unless it has previously been paired.

Please refer to the information on "Pairing a phone" in the "Pairing/unpairing a phone" section.

Note: your phone's Bluetooth® connection must be activated and set to "visible".

Automatic connection

As soon as the vehicle ignition is switched on, the audio system searches for paired telephones in the vicinity.

Note: the last phone to have been connected is given priority.

Searching will continue until a paired telephone is found (this may take several minutes).

Note: for more information on the list of compatible phones, please contact an approved dealer:

– you can use automatic telephone connection with the ignition switched

on. You may need to activate the automatic Bluetooth® connection function on your hands-free phone system. To do this, refer to your phone user manual;

– when reconnecting, if two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system;

– if a call is already in progress when your hands-free telephone system is connected, the telephone will connect automatically and the conversation audio will switch to the vehicle speakers.

 


Your hands-free phone system is only intended to facilitate communication by


reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



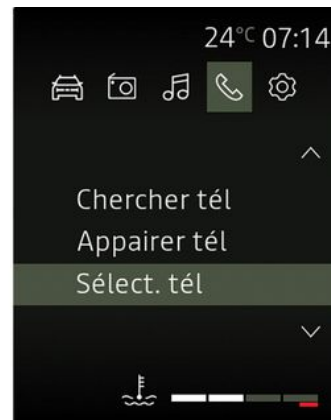


For safety reasons, carry out these operations when the vehicle is stationary.




Manual connection (changing the phone connected)

Press  to access the main menu, from the "Phone" world select the




"Select phone" menu by pressing 

on the steering column control,  or , then  to confirm.

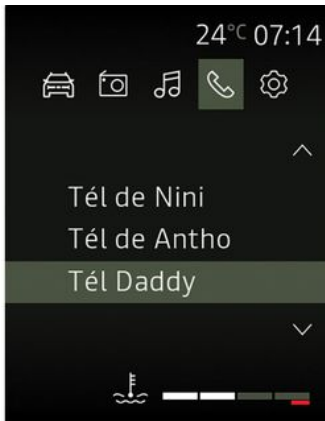PHONE



The list of phones already paired is displayed.

From the list, select the phone that you wish to connect by pressing  on the steering column control,  or , then to confirm.

A message will appear to confirm that the telephone is connected.

Note: if a phone is already connected when switching to another phone, the existing connection is automatically replaced by that of the new phone.

 
Connection failure

If connection fails, check that:

- your phone is switched on;
- your phone battery is not flat;
- your phone has already been paired to the hands-free telephone system;
- Bluetooth® is now enabled on your phone and on the audio system;
- the phone is configured to accept the audio system's connection request.

Note: using your hands-free telephone system for prolonged periods will discharge your phone's battery more quickly.

Telephone information

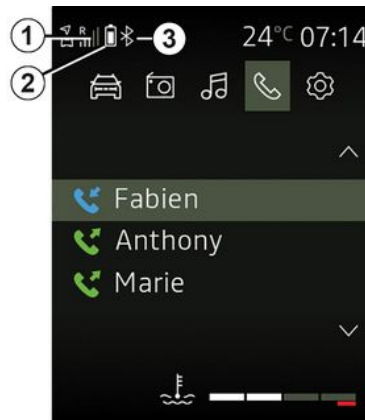

Once connected, the audio system displays telephone-related information:

- the telephone network status **1**;
- the telephone battery level **2**;
- the type of connection to the multimedia system **3**.

Disconnect a phone

To disconnect your telephone, you can:

- deactivate the Bluetooth® function on your audio system;
- deactivate your phone's Bluetooth® function;
- delete the paired phone via the audio system. Please refer to the information on "Unpairing a phone" in the "Pairing, unpairing a phone" section.

If the phone is switched off, the phone will be disconnected.

A message is then displayed on the audio system screen to confirm that the phone is disconnected.

Note: if a call is in progress when the phone is disconnected, the call will be automatically transferred to your phone.

To deactivate Bluetooth® on your audio system, refer to the information on the "Bluetooth® function" in the "General Description" section.

 
PHONE

To disable your smartphone's Bluetooth®, refer to your phone's user guide.

 
To unpair and delete the Bluetooth® phone, see the information under "Unpairing a phone" in the "Pairing, unpairing a phone" section.



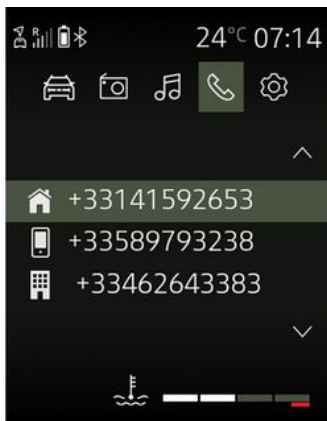

 
Making/receiving a call



Call a contact from your call log history

 


To display the call history:


– press  to access the main menu, select the "Phone" world, then

press  or  select "Calls" by pressing  or , then  to confirm;

- Select the contact or number you want to call by pressing  or ,

then  to make the call.

Receiving a call

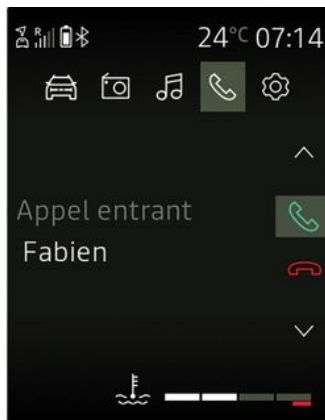


 


When receiving a call, the caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider).

If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.

If the caller's number cannot be displayed, the "Private number" message is displayed on the audio system screen.





To accept an incoming call:

- select the icon  using  or , then  to confirm;


or

- press briefly on .

To reject an incoming call:

- select the icon  using  or , then  to confirm;

or

- press and hold on .





It is recommended that you stop your vehicle before entering a number or searching for a contact.


PHONE

Receiving a second call



 

 
When receiving a second call, the second caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider). You can:




- accept the incoming call by selecting  ;
- reject the incoming call by selecting  ;
- put an incoming call on hold by selecting **1**.

To end a call during the conversation, press .



During a call

You can:

- adjust the volume by pressing  or  ;
- end the call by pressing .

Press  or , then  to confirm.


You can also:

- accept the incoming call/resume a call placed on hold by selecting  ;
- end a call by selecting  during the conversation;
- put a call on hold by selecting **1**;
- select **2** to use the audio system keypad to enter the digits.






 


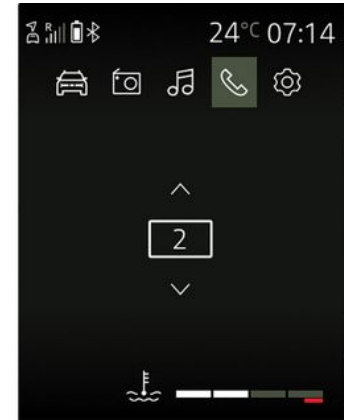
The system allows managing call waiting when your phone is connected (depending on your plan).

Using the keypad during a call




To use the audio system keypad during a call:



- select the audio system keypad using  or , then  to confirm;
- select the number or character using  or , then  to confirm your choice.

Note: to return to the previous screen, press .

SYSTEM SETTINGS

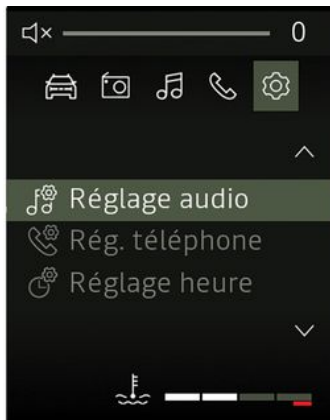3



From the main menu, browse by pressing  or  until you reach the "Settings" world.


The following settings are available:


- "Audio settings";
- "Phone settings";
- "Vehicle settings";
- "Time settings";
- ...



For safety reasons, carry out any adjustments while the vehicle is stationary.


Audio settings

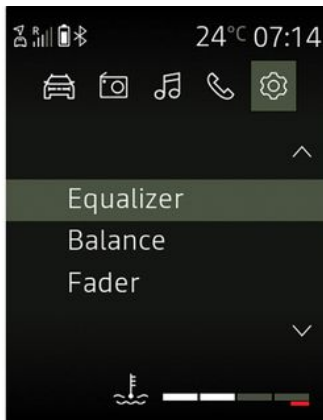



From the "Settings" world. Select the "Audio setting" menu, then "Audio settings" and  to confirm.

The following settings are available:

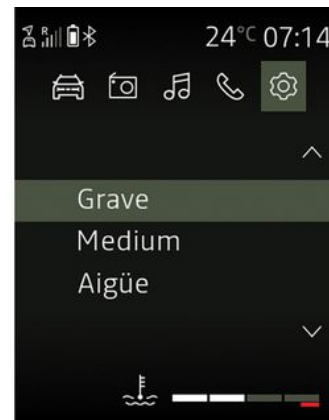- "Equaliser";
- "Spatialisation";
- "Volume mph (km/h)";
- « Bass boost » ;
- "Reset".



"Equaliser"

Select "Equaliser", then press  or  to access the various sections in the following order:



- « Bass » ;
- "Medium";
- « Treble ».


"Spatialisation" (sound distribution)

The "Spatialisation" function to adjust the sound distribution in the passenger compartment:

- "Balance" (left/right sound distribution);
- depending on the vehicle;
- "Fader" (front/rear sound distribution).

SYSTEM SETTINGS

You can change the value of each setting by pressing  or .

Press  to confirm and return to the previous selection.

"Volume sensitive to speed"

 
The volume of the audio system varies in relation to the vehicle speed.

Access the "Audio setting" menu, then confirm "Volume mph (km/h)" by

pressing once on .

To reach the desired setting, select one of the following:

- « OFF » ;
- "Very low";
- « Low » ;
- « Middle » ;
- "High";
- « Very high ».

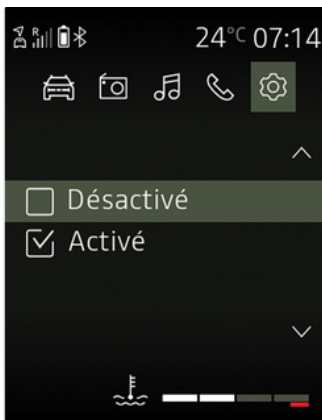 


« Bass boost »




The "Bass boost" function can be used to increase the bass when listening at low volume.

Access the "Audio setting", the confirm

"Bass boost" by pressing  or ,



then press  to confirm.

To activate/deactivate this function, select "Activated" or "Deactivated" by

pressing  or , then  to confirm.


"Default audio"

From the main menu, browse by


pressing  or  until you reach the "Settings" world. Display the "Audio setting" menu and select "Audio settings", then "Reset".

Select "YES" or "NO".

All the audio settings return to their default values.

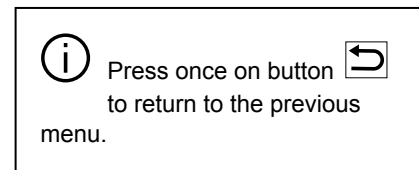


 


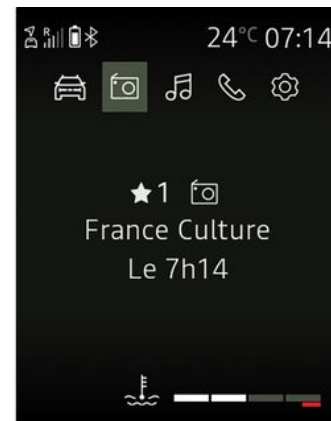Radio settings



SYSTEM SETTINGS

Display the settings menu by pressing

briefly on , select the "Settings" world, then "Audio setting" and "Radio settings" by pressing  or , then  to confirm.



 
The available functions are as follows:

- "Update FM list";
- "Update DR list";
- « Simulcast » ;
- "Priority to DR";
- « TA » ;
- « AF ».

"Update the "FM" list

This feature allows you to perform an update of all FM stations in the area where you are located.

From the "Settings" world, select the "Radio settings" menu, then "Update




FM list" by pressing  or , then  to confirm.

Automatic updating of the FM stations in the area will begin. The "Update FM list" message is displayed on the instrument panel.

Once the update is complete, the "FM list updated" message is displayed on the screen.

"Update the "DR" list

 
This feature allows you to perform an update of all DR stations in the area where you are located.

From the "Settings" world, select "Audio setting", "Radio settings", then "Update DR list" by pressing  or , then  to confirm.

Automatic updating of the DR stations in the area will begin. The "Update DR list" message is displayed on the instrument panel.

Once the update is complete, the "DR list updated" message is displayed on the screen.

Note: if another source is selected

with , the FM or DR list continues to be updated in the background.

« Simulcast »

Depending on the country, this function switches from a DR station to the equivalent FM station if the digital signal is lost.

If the "FM/DR simulcast" is activated, there may be lag of a few seconds when switching from FM to DR or from DR to FM. There may also be a difference in the sound volume.

The system will automatically switch back to DR as soon as the digital signal is received.

Note: during the simulcast, the station name is preceded by " FM> ».

"Priority to DR"

Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the equivalent DR station to obtain better sound quality.



 
Note: while DR is prioritised, the station name is preceded by " DR> ».


 
« TA »

When this feature is activated, your audio system searches for and automatically plays traffic bulletins as new reports are broadcast by some "FM" or "DR" radio stations.

To activate or deactivate this function:

– from the "Settings world", select the "Audio setting" menu, then "Radio

settings" by pressing  or , then  to confirm;

- select "TA" by pressing  on the steering column, then  to confirm;
- select "ON" or "OFF" to activate or deactivate the "TA" function.

"AF" (automatic retuning AF)

SYSTEM SETTINGS

The frequency of an FM station changes according to the geographical area.

 
Some stations use the RDS system, mainly for automatic retuning of "AF" while the vehicle is moving.

Phone Settings

Use this function to adjust the settings of the telephone connected to the audio system.

From the main menu, browse by


pressing  or  until you reach the "Settings" world. Select "Phone

settings", then  to confirm.

The following settings are available:

- "Search a phone";
- "Pair a phone";
- "Select a phone";
- "Delete a phone";
- "BT ON/OFF".

Please refer to the corresponding sections.

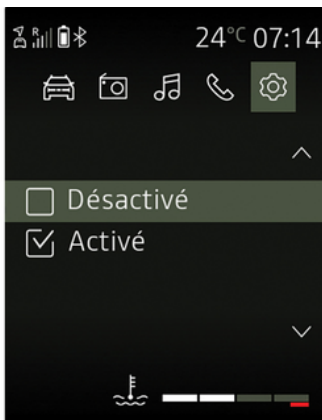



 
"BT settings" (Bluetooth®)

From the main menu, browse by



 
pressing  or  until you reach the "Settings" world. Select "Phone

settings", BT ON/OFF", then  to confirm.

To activate the audio system Bluetooth®, select "Activated" by

pressing  or , then  to confirm.


To deactivate the audio system Bluetooth®, select "Deactivated" by



 
pressing  or , then  to confirm.

Selecting a language

Use this function to change the audio system display language on the instrument panel.

Display the settings menu by pressing


. Select the "Settings" world, "Vehicle setting" and "Language", then select the desired language by



 
pressing  or  and press  to confirm.

Setting the time

 
This function allows you to set the time.



Display the settings menu by pressing

. Select the "Settings" world, then



"Time setting" by pressing  or  then  to confirm.

The "Clock" menu is displayed:

- press and hold on  to set the hour;

- set the hours by pressing  or , then wait for a moment until the selection automatically switches from the hour setting to the minute setting;

SYSTEM SETTINGS

– set the minutes by pressing  or , then wait a moment for the setting to be validated automatically.

3



Depending on the brand and model of your telephone, the hands-free functions may be partially or fully incompatible with your vehicle's audio system.



For safety reasons, carry out any adjustments while the vehicle is stationary.

SMARTPHONE APP DACIA MEDIA CONTROL : GENERAL DESCRIPTION

Introduction

« Dacia Media Control " is an application that can be downloaded via your smartphone. The home page provides access to four worlds:

- "Audio (Radio/Multimedia)";
- « Navigation » ;
- « Vehicle » ;
- « Phone » .

Note: from all screens, you have permanent access to the settings and sound volumes.

Note: from the home page you can:

- access your shortcuts and favourites by swiping left;
- access your widgets by swiping right.

Display




Home page

1. Information area (time, connectivity, exterior temperature);
2. Home page;
3. Page indicators;
4. "Audio": manage the radio source (radio or media);
5. "Navigation": manage navigation;
6. "Vehicle": manage your fuel consumption, Eco-driving, etc.
7. "Settings": manage the settings of the Dacia Media Control » ;
8. "Phone": manage the phone functions.

Connect

Check that your phone is paired to the audio system (refer to the paragraph on "Pairing a phone" in the "Pairing, unpairing a phone" section).

Note: your phone's Bluetooth® must be activated and set to "visible" (for more information, see the user manual for your device).

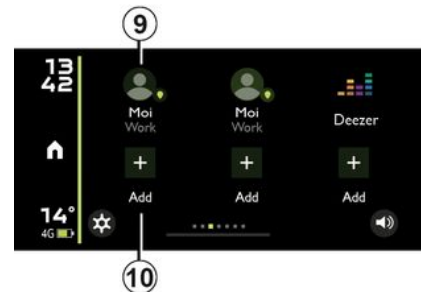

Favourites screen

The " Dacia Media Control " app enables you to add shortcuts to your favourite functions:

- apps;
 - contacts (addresses, phone, etc.).
- 9.** access a function previously designated as a favourite;

SMARTPHONE APP DACIA MEDIA CONTROL : GENERAL DESCRIPTION

10. add a favourite.

Managing favourites

To manage your favourites, press the button **10** to add one to an empty slot, or press and hold a favourite. You will be able to add or delete one.



We recommend that you keep your "Dacia Media Control" app up to date.



Your hands-free system is intended to facilitate communication by reducing risk factors, but does not remove them completely. Always comply with the laws of the country in which you are travelling.



Widget screens

The widget screens allow you to view a summary of the various functions that are available when using the Dacia Media Control. The display of widgets can be customised:

- Audio Player (media/radio);
- Eco-driving;
- Consumption;
- ...

 
Manage widgets

To manage your widgets, press and hold a widget to configure it or press the + button to add one.

You will be able to move it or change its size. You can open the list of available widgets by tapping on an empty slot.

To delete a widget, press and hold it. A bin will appear at the bottom of the screen and you will be able to move the app into this bin. The widget will be deleted.

"Audio world (radio/media)"

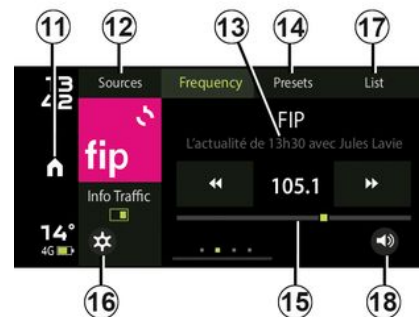

This world can be used to listen to radio stations and music from other media (music from your phone, Jack), USB port or audio/podcast apps. The content may vary according to your phone, car and country.

For the radio, the main functions are as follows:

11. return to the main menu;

SMARTPHONE APP DACIA MEDIA CONTROL : GENERAL DESCRIPTION

12. choose a radio band (FM, DR or AM) or another audio source;

13. see the currently playing radio station;

14. select radio presets/favourites.


Note: the " Dacia Media Control " app recalls the vehicle radio presets/favourites.

15. radio frequency band, radio frequency information;

16. access to the settings;

17. list of available stations;

18. manage the volume.

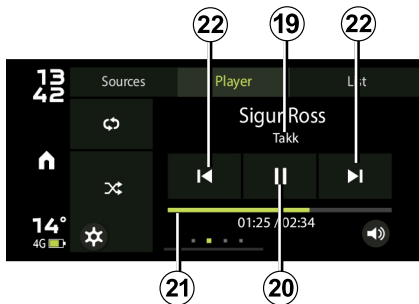

For the media player, the main functions are as follows:

 
19. see the multimedia file currently playing;

20. play/pause;

21. scroll bar, remaining time for the multimedia file currently playing;

22. next/previous file.

"Navigation world"

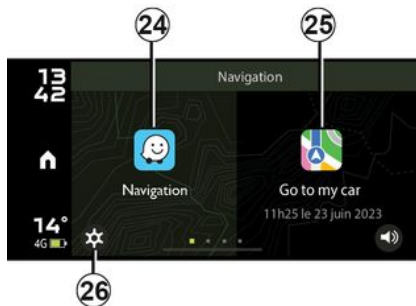

The "Navigation world" menu provides the following functions:

24. smartphone navigation app for planning your journeys;

25. app enabling you to geolocate your vehicle;

26. access to the settings.

"Vehicle world"



The "Vehicle world" can be used to manage some equipment, such as the Eco-driving and trip computer. It provides the following functions:

27. Eco-driving;

28. average and current fuel consumption indicators;

 
29. access to driving advice (coaching);

30. access to:

- your vehicle instrument panel;
- tyre pressure monitoring system.

SMARTPHONE APP DACIA MEDIA CONTROL : GENERAL DESCRIPTION

"Phone world"

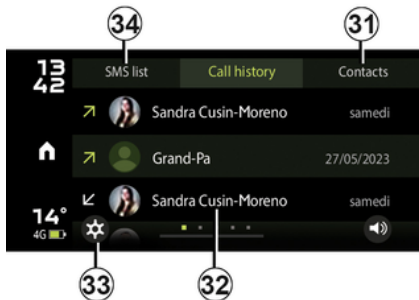

The "Phone world" enables hands-free use of your telephone and provides the following functions:

- 31.** access your phonebook;
- 32.** access your call log;
- 33.** access to the settings;
- 34.** access to your SMS.

Forgotten phone reminder

With the engine off and the audio system off, the "Dacia Media Control" app displays a warning message on your smartphone screen along with a beep to inform you that you have left your phone in your vehicle.

Note: on some phones, the "Text-to-speech" function can be used to listen to messages. The audio system reads the messages aloud.

Telephone holder



Depending on the equipment, while using the "Dacia Media Control" app your phone can be attached to the centre console thanks to its ergonomic shape **35**.

Charging using the USB port

By connecting your telephone's USB plug to the USB port, you can charge your battery or keep it charged during use.



Adjusting the audio volume

The volume can be adjusted by pressing the button **36** on the screen and then swiping vertically:

-swipe upwards to increase the volume,

-swipe downwards to decrease the volume.

 
Several sweeps may be required to reach the desired volume.



We recommend that you keep your "Dacia Media Control" app up to date.

SMARTPHONE APP DACIA MEDIA CONTROL : NAVIGATION WORLD

"Navigation world"

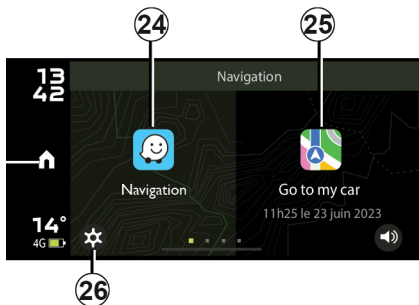

To access the "Navigation world", from the home page of the " Dacia Media Control " app, press the "Navigation" button.

The "Navigation world" consists of:

11. return to the home page;

24. access the navigation app to manage your routes;

25. access the "Go To My Car" app to find your vehicle;

26. Accessing settings

This feature allows you to launch your smartphone's navigation app.

Note: to hear the navigation application instructions on the vehicle speakers, select the Bluetooth® audio source.

For more information, see the paragraph on "Pairing a Bluetooth® phone with your audio system using your phone" in the "Pairing, unpairing a phone" section.



For safety reasons, carry out any adjustments while the vehicle is stationary.

"Find my vehicle" (Go To My Car)

This function allows you to see your vehicle's last recorded position, for example if you need to find it in a car park.

From the "Navigation" world, press **25** "Go To My Car".

To find your vehicle, press the "Go to my car" button to launch navigation to the pre-set address in pedestrian mode.

Note: this feature can only be used when not in the vehicle. If your vehicle has been moved by a third party between the time of saving its GPS

position and the time you wish to find it, the application cannot search for its current position.

"Navigation settings"

This function allows you to set your chosen default navigation application.

In the " Dacia Media Control " app settings menu, which you can access using button **25**, you can define the default navigation app by selecting it from the list of suggestions.

You can also define the navigation app to be used for the "Find my vehicle" function (Go To My Car).



When you use your smartphone's navigation app, the transfer of cellular data required for it to operate may lead to additional costs not covered by your phone plan.



For safety reasons, carry out any adjustments while the vehicle is stationary.

SMARTPHONE APP DACIA MEDIA CONTROL : AUDIO WORLD

"Audio world"



To access the "Audio world", from the home page of the " Dacia Media Control " app, press the "Audio" button.

This world can be used to manage the audio source (radio/media) being listened to and to change the audio source.

Note: to use all of the Streaming Audio/Media playback functions in the "Audio world", you must connect your Bluetooth® phone to the audio system.

Note: when playing a media file, the " Dacia Media Control " does not control external applications.

« Sources »



To access the multimedia file source selection menu, press button **37** "Sources". You can use this menu to select the source among those available:

- **The various radio bands:** "DAB", "FM" or "AM" (depending on availability);
- **The various media audio sources :** Bluetooth®, USB (depending on availability);
- **The audio apps** (music, podcast, web radio) installed on your smartphone (availability depends on the country);

– **The music apps** that are compatible and present on your smartphone.

« Audio : Radio »


The " Dacia Media Control " app enables you to listen to radio stations and offers the following features:

- select a station using one of three search modes ("Presets" (Favourites), "List" or "Frequency");
- search for a station using the integrated intelligent keypad;
- view text information from certain "FM", "DR" or "AM" radio stations while listening;
- update the list of radio stations.

For further information, please refer to the section on "Listening to the radio".

SMARTPHONE APP DACIA MEDIA CONTROL : AUDIO WORLD

"Audio: USB, Bluetooth® Audio streaming, External applications "

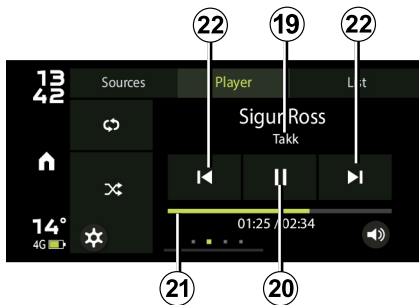

The "Dacia Media Control " can be used to listen to an audio source from your vehicle (USB, Bluetooth®) or smartphone (Jack audio streaming, audio application on your smartphone).

The content may vary according to your phone, vehicle and country.

The "Dacia Media Control " app offers the following functions:

19. see the multimedia file currently playing;

20. play/pause;

21. scroll bar, remaining time for the multimedia file currently playing;

22. next/previous file.

Note: content may vary according to the source selected.

"Audio settings"



In the "Dacia Media Control ", which can be accessed by pressing button **26**, you can access the audio settings.

This menu enables you to adjust the following settings:

- "Balance/Fader";
- « Bass/Treble » ;
- "Bluetooth®" volume;
- « AUX In » ;
- « TA » ;


- "DR alerts".



For safety reasons, carry out any adjustments while the vehicle is stationary.

SMARTPHONE APP DACIA MEDIA CONTROL : VEHICLE WORLD

"Vehicle world"

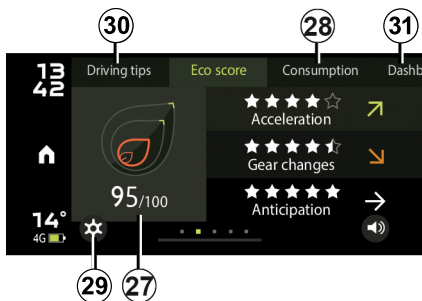

To access the "Vehicle world" from the home page of the " Dacia Media Control " app, press the "Vehicle" button.

The "Vehicle world" consists of:

- 27.** the Eco-driving menu;
- 28.** average and current fuel consumption indicators;
- 29** access to the settings;
- 30.** access to the Driving Tips;
- 31.** access the data on the instrument panel of your vehicle.

Note: to use all of the features available in the "Vehicle world", you must connect your Bluetooth® phone to the audio system.

"Eco-driving"

This function displays an overall score that reflects your driving style.

This score takes into account the following criteria:

- acceleration;
- the ability to anticipate braking;
- compliance with gear changes.

Personalised driving advice is offered.


You can also press the "Reset" button on the instrument panel to start a new journey.

A journey has to be more than 400 metres to be taken into account.



For safety reasons, carry out any adjustments while the vehicle is stationary.

"Average and current fuel consumption indicators"

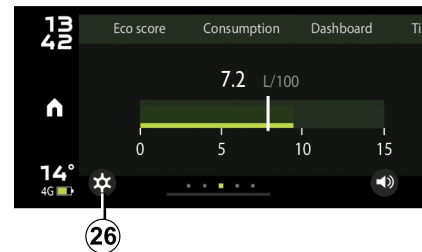

This function displays the current fuel consumption compared to the average consumption of your vehicle.

Note: the content may vary according to your phone, vehicle and country.

« Settings »

In the " Dacia Media Control " which can be accessed using button **26**, you can access the "Vehicle" settings.

"Driving Tips"

This function gives you access to the driving tips.

SMARTPHONE APP DACIA MEDIA CONTROL : VEHICLE WORLD

« Instrument panel »

This function allows you to access the various data displayed on your instrument panel, such as:

- average speed;
- average fuel consumption;
- total distance;
- distance travelled since last reset.

When your " Dacia Media Control " app is not connected to your vehicle, you can view the data recorded during the last connection.

"Tyre pressure monitoring"

This function allows you to access the tyre pressure status. The pressure of each tyre can be displayed.

Note: the content may vary according to your phone, vehicle and country.

SMARTPHONE APP DACIA MEDIA CONTROL : PHONE WORLD

"Phone world"



To access the "Phone world", from the home page of the " Dacia Media Control " app, press the "Phone" button.

The "Phone world" consists of:

- 31.** access the phonebook;
- 32.** access to your call log;
- 33.** access to the settings;
- 34.** access to the SMS received on your smartphone.

"Contacts"

This function allows you to access your phonebook contact list.

After connecting your audio system with your Bluetooth® phone, your phonebook numbers can be accessed via the " Dacia Media Control ».

Select the contact (if the contact has more than one number, you will be requested to select the number to call). The call will be started automatically after you press the contact's number.

Note: it is only possible to display the contacts if this option has been authorised on your smartphone.

"Call log"

Use the call log to see:

- outgoing calls;
- missed calls;
- incoming calls.

When you view the call history list, the contacts are displayed from the most recent to the oldest.

To make a call from the call history list, select the contact that you wish to call from the list.

"Phone settings"

In the " Dacia Media Control " which can be accessed by pressing button

33, you can access the Phone settings.

« SMS »


The "SMS" function enables you to listen to text messages received while using Dacia Media Control ».

SMARTPHONE APP DACIA MEDIA CONTROL : SETTING PARAMETERS

« Settings »



To access the settings menu, from the home page of the "Dacia Media Control", press the button 7.

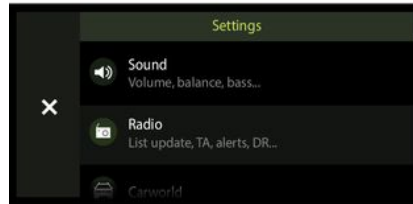

The "Settings" menu of the "Dacia Media Control" system can be used to adjust or view the following:

- the "Radio" settings;
- the "Sound" settings;
- the "Vehicle world" settings;
- the "Navigation world" settings;
- the "Phone world" settings;
- the "System" settings;
- « About » ;
- "Help and advice".

"Radio" settings

This function can be used to configure:

- the activation of traffic information alerts;

- the activation of additional alerts on digital radio;
- the prioritising of digital radio (depending on the country);
- automatic adjustment of a DAB radio station to FM (depending on country).

"Sound" settings

This function can be used to configure:

- sound balance between your vehicle speakers;
- sound equalisation (bass, treble) and amplification of bass sounds at low volume;
- adaptation of the sound volume according to the vehicle speed (adaptation to ambient noise);
- sensitivity of the auxiliary socket (availability depends on the vehicle).

"Vehicle world" settings

This function can be used to configure:

- activation of the parking aids information display (availability depends on the vehicle);
- activation of the tyre pressure monitoring system alerts.

"Navigation world" settings

This function can be used to configure:

- choosing a navigation app among those that are installed on your

SMARTPHONE APP DACIA MEDIA CONTROL : SETTING PARAMETERS

smartphone and compatible with the " Dacia Media Control » ;

– choosing a navigation app in pedestrian mode among those that are installed on your smartphone and compatible with the " Dacia Media Control " app, to guide you to your vehicle at the last saved location.

- launch the tutorial for the " Dacia Media Control » ;
- access Dacia Assistance;
- consult the personal data protection information;
- consult the help information on the various warning lights, indicator lights and icons displayed on your vehicle's instrument panel.

4 "System" settings

This function can be used to configure:

- the country (to enable assistance);
- the automatic launch of the app as soon as it connects to your vehicle's audio system;
- the automatic closing of your app once disconnected from your vehicle;
- the activation or deactivation of data feedback (for diagnostic and quality assurance purposes).


« About »

This function enables you to view:

- the version of the Dacia Media Control app installed on your smartphone;
- the terms and conditions of use;
- personal data protection information;
- information required for technical support of the app.

"Help and advice"

This function enables you to:

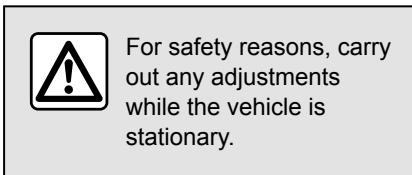

USING VOICE RECOGNITION


Voice recognition system

The audio system can be used to operate voice recognition via your smartphone (if compatible). This makes it possible to control the functions of your smartphone by voice, while keeping your hands on the steering wheel.

Note:

 
- your smartphone's voice recognition system only enables you to use the functions provided with your smartphone. It does not enable you to interact with the other audio system functions, such as the radio etc.
- when using voice recognition, the audio system will use the language set on your smartphone;
- if you try to use your vehicle's voice recognition system with a paired smartphone that is not equipped with voice recognition, a message will be displayed on the audio system screen to notify you.

Using voice recognition with your phone

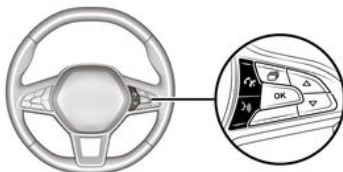 


Activation

To activate the voice recognition system, you must:

- have a 3G, 4G signal or WIFI on your smartphone;
- activate the Bluetooth® function on your smartphone and make it visible to other devices (refer to your smartphone user manual);
- pair and connect your smartphone to the audio system (refer to the section on "Pairing, unpairing a phone");
- press briefly on  to activate the function, then speak (a beep indicates that voice recognition is activated).

Deactivation

Press and hold on .

An audible signal indicates that voice recognition is deactivated.

OPERATING FAULTS

Description	Possible causes	Solutions
No sound can be heard.	The mobile phone is not plugged in or connected to the system. The volume is set to minimum or the audio is paused.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate pause.
The audio system does not work and the display does not light up.	The audio system is not switched on.	Switch the audio system on.
	The audio system fuse has blown.	Replace the fuse (see the section on "Fuses" in the vehicle user manual).
The audio system does not work but the display lights up.	The volume is set to minimum.	Press 19 or rotate 1 .
	Speaker short circuit.	Consult an approved dealer.
No sound comes from the left or right-hand speakers.	The sound balance setting (left/right) is incorrect.	Correct the sound balance setting.
	Speaker disconnected.	Consult an approved dealer.
Poor radio reception or no reception.	The vehicle is too far from the transmitter to which the radio is tuned (background noise and interference).	Search for another transmitter with a better local signal.
	The reception is disrupted by interference from the engine.	Consult an approved dealer.
	The aerial is damaged or not connected.	Consult an approved dealer.

Description	Possible causes	Solutions
The phone does not connect to the system.	<ul style="list-style-type: none"> – Your phone is switched off. – Your phone battery is flat. – Your phone has not yet been paired to the hands-free phone system. 	<ul style="list-style-type: none"> – Switch your phone on. – Recharge your phone battery. – Pair your phone to the hands-free phone system.

OPERATING FAULTS

Description	Possible causes	Solutions
	<ul style="list-style-type: none"> – The Bluetooth® on your phone and on the system are not active. – The phone is not configured to accept the audio system's connection request. 	<ul style="list-style-type: none"> – Activate the Bluetooth® on your phone and the system. – Configure the phone to accept the audio system's connection request.
<p>The Bluetooth® portable audio player does not connect to the system.</p>	<ul style="list-style-type: none"> – Your portable audio player is switched off. – Your portable player battery is flat. – Your portable audio player has not already been paired to the audio system. – The Bluetooth® on your portable audio player and on the audio system are not active. – The portable audio player is not configured to accept the audio system's connection request. – The music is not activated from your portable audio player. 	<ul style="list-style-type: none"> – Switch on your portable audio player. – Recharge the battery in your portable player. – Pair your portable audio player to the audio system. – Activate Bluetooth® on your portable player and the audio system. – Configure the portable player to accept the system's connection request. – Depending on your phone's compatibility, the music may have to be played from your portable player.
<p>The "Low battery" message appears.</p>	<p>Using your hands-free phone system for prolonged periods will discharge the phone's battery more quickly.</p>	<p>Recharge your phone battery.</p>

ALPHABETICAL INDEX

Symbols

4-wheel drive (4WD), [75](#)

B

Bluetooth®, [14](#)

C

Connect Bluetooth®, [52](#)

D

Dacia Media Control : general description, [65](#)

Dacia Media Control : introduction, [65](#)

Dacia Media Control : multimedia function, [65](#), [70](#)

Dacia Media Control : navigation function, [65](#), [69](#)

Dacia Media Control : setting parameters, [75](#)

Dacia Media Control : telephone function, [65](#), [74](#)

Dacia Media Control : vehicle function, [65](#), [72](#)

Deleting a phone, [52](#)

Disconnect a phone, [56](#)

H

Hands-free phone kit, [14](#)

I

I Traffic, [60](#)

L

Language: change, [60](#)

P

Pairing a phone, [52](#)

Pop-up menu, [42](#)

S

Screen: menu, [42](#)

Settings: audio, [60](#)

Soft buttons, [42](#)

T

Time: setting, [60](#)

U

Unpairing a telephone, [52](#)

USB : audio source, [14](#)

V

Voice recognition, [77](#)



RY

984500330R

Réf 984500330R / Edition anglaise

NX 1445-7 – 09/2023

