

R-LINK



Contents

User precautions	GB.3
General information	GB.4
General description	GB.4
Introduction to the controls	GB.5
SD card: use, initialisation	GB.14
operating principles	GB.15
Switching on, off.	GB.19
Add and manage favourites	GB.21
Using voice recognition	GB.22
Navigation	GB.28
Enter a destination	GB.28
Volume and voice.	GB.33
Reading a map.	GB.34
Guidance	GB.35
Preparing a route	GB.39
Traffic information.	GB.40
Displaying the map.	GB.43
Navigation services	GB.44
Connected Z.E. services	GB.46
Recharging station	GB.48
Range.	GB.50
Adding, managing saved addresses	GB.51
Navigation settings.	GB.52
Multimedia	GB.54
Listen to the radio.	GB.54

Media	GB.59
Photo reader	GB.60
Video playback	GB.61
Multimedia settings	GB.62
Phone	GB.64
Pairing, unpairing a telephone	GB.64
Connecting, disconnecting a telephone	GB.66
Managing the phone memory	GB.67
Making, receiving a call	GB.68
Call log	GB.70
During a call	GB.71
Phone Settings	GB.72
Vehicle	GB.73
Eco ² driving	GB.73
Parking distance control, reversing camera	GB.74
Electric vehicle	GB.76
Take care	GB.78
On-board computer, vehicle settings	GB.80
Services	GB.81
Introduction to the Services menu	GB.81
Install applications with R-Link Store	GB.83
Android Auto™	GB.89
My Renault	GB.91
Services settings	GB.96
System	GB.97
System settings	GB.97
Operating faults	
GB.100	

PRECAUTIONS DURING USE

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.



Precautions when operating the system

- Operate the controls and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation

- Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
- Depending on the geographical area, the map on the SD card may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning the equipment

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign objects or a damaged or dirty SD card into the reader.
- Always clean your screen with a microfibre cloth.
- Use an SD card which is suitable for your navigation system.

The prior acceptance of the General Conditions of Sale is mandatory before using the system.

The description of the models given in this manual is based on the specifications at the time of writing. **This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where they are sold. This manual may also contain information about functions to be introduced later in the model year. The screens shown in the user manual are not contractual.** Depending on the make and model of your telephone, some functions may be partially or completely incompatible with your vehicle's multimedia system. For more details, please consult an Authorised Dealer.

GENERAL DESCRIPTION




Welcome screen

- A** Audio information.
- B** System notifications.
- C** Phone menu access/Status of connected phone/Access to the voice recognition screen of connected telephone.
- D** Exterior temperature.
- E** Time.
- F** Instructions for navigation and distance to next change of direction.

- G** Pop-up menu.
- H** Current vehicle position.
- I** Favourites.
- J** Access to the “Android Auto™” menu of the connected telephone.
- K** Driving Eco/“Energy” for electric vehicles.
- L** Main menu.
- M** Information about the travel time remaining and the arrival time at your destination.
- N** Navigation map.

Note: You can change the configuration of the welcome screen. Please see the information on “Welcome screen” in the “System settings” section.


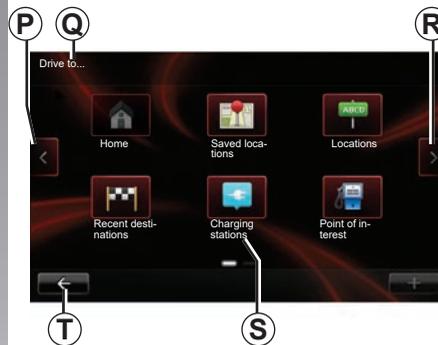


Menu screen

- P** Go to previous page.
- Q** Name of menu.
- R** Go to next page.
- S** Name of function or of sub-menu.
- T** Return to previous menu.

INTRODUCTION TO THE CONTROLS (1/9)

Screen controls

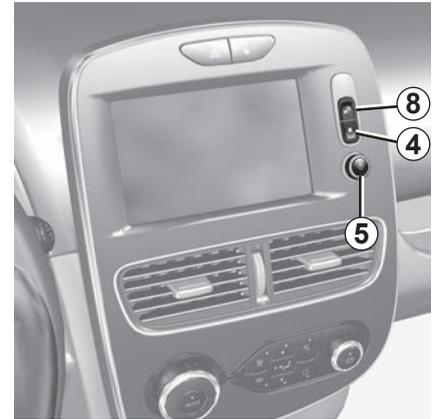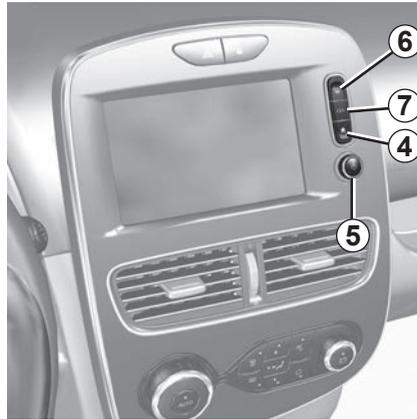


INTRODUCTION TO THE CONTROLS (2/9)

	Function
1	From a list: move upwards. From the map: change scale (ZOOM mode).
2	Confirmation button
3	From a list: move down. From the map: change scale (ZOOM mode).
4	Display the welcome screen. 5 consecutive presses: restart the system.
5	Press: on/off Rotate: adjust source volume while listening.
6	Quick access to "Easy park assist" function screen.
7	Access to the settings menu for driving assistance devices.
8	Accessing the user settings.

INTRODUCTION TO THE CONTROLS (3/9)

Multimedia screen

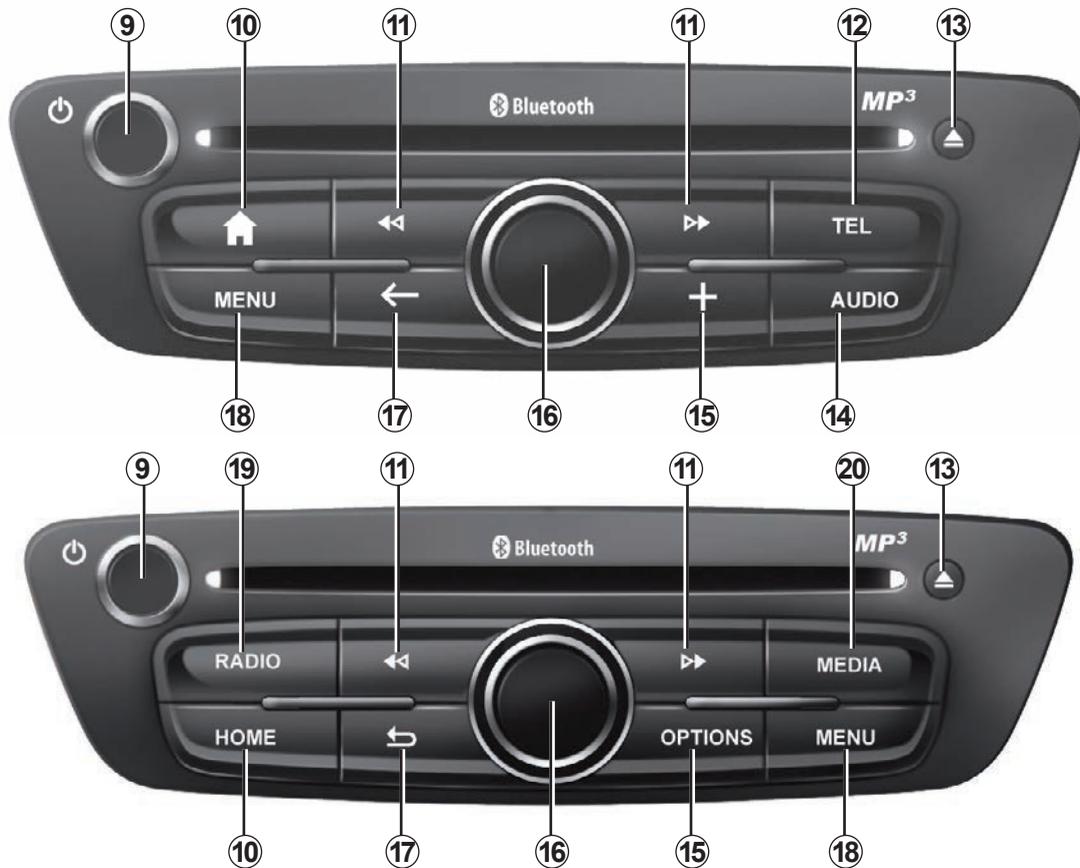


INTRODUCTION TO THE CONTROLS (4/9)

	Function
9	Short press: on/off Rotate: adjust the volume of the source currently in use.
10	Display the welcome screen.
11	Change a CD track or playlist.
12	Access the telephone menu.
13	Eject a CD.
14	Open the source screen while listening (radio, CD, etc.)
15	Open the pop-up menu.
16	Switching: – moving around the card; – up/down: move to different areas of the screen (upper bar, central zone, lower bar); – left/right: move to different parts of a menu. Rotate: – move around the various elements of a zone; – modify the scale (ZOOM mode). Press: – confirm.
17	Go back to the previous menu.
18	Go to the main menu.
19	Listen to the radio/change band.
20	Choose an external audio source.

INTRODUCTION TO THE CONTROLS (5/9)

Radio front panel


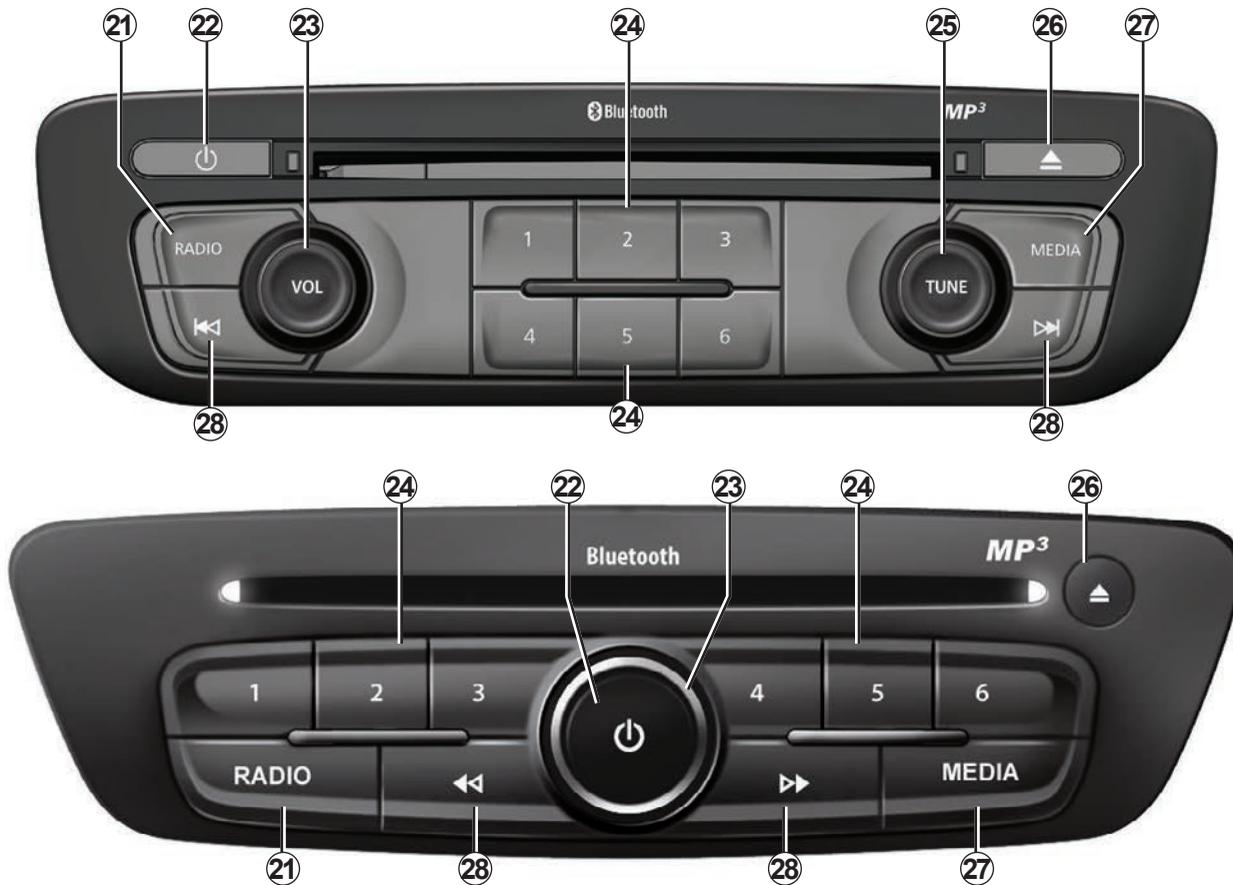


INTRODUCTION TO THE CONTROLS (6/9)

	Function
21	Listen to the radio/change band.
22	On/off
23	Rotate: adjust the volume of the source currently in use.
24	Short press: recall a stored radio station. Long press: store a radio station.
25	Rotation: search for radio stations, change a CD track.
26	Eject a CD.
27	Choose an external source.
28	Short press: change a CD track or playlist. Press and hold: fast forward/rewind to a track on a CD.

INTRODUCTION TO THE CONTROLS (7/9)

Steering column control

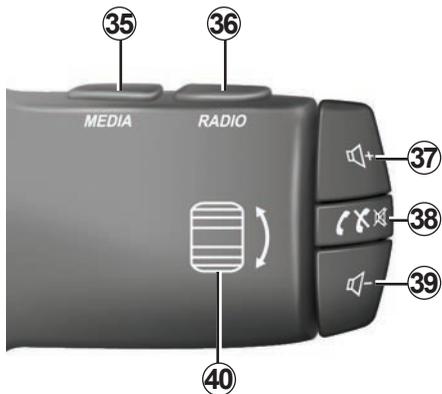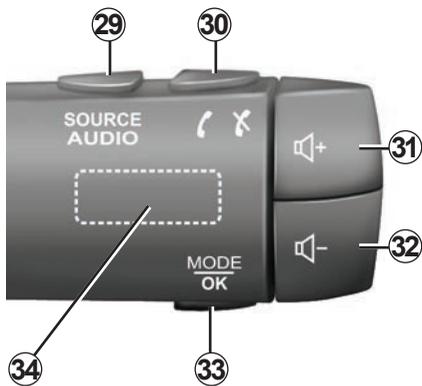

	Function
29	Select the audio source.
30	Answer/end a call (phone mode)
31, 37	Increase the volume of the audio source currently in use.
32, 39	Decrease the volume of the audio source currently in use.
31 + 32	Radio mute on/off. Pause/play an audio track.
33	Change radio mode (preset/list/frequency) or confirm an action.
34	Search for radio stations/change track or audio file.
35	Change media (CD/USB/etc).
36	Change radio band (AM/FM1/FM2/DR1/DR2).
38	Short press: – answer/end a call (phone mode); – mute on/off.
40	Search for radio stations/change track or audio file.

INTRODUCTION TO THE CONTROLS (8/9)


Control on the steering wheel with voice command



41	Rotate: search for radio stations/change track or audio file. Press: change radio mode (preset/list/frequency).
42	Activate/deactivate voice recognition.

INTRODUCTION TO THE CONTROLS (9/9)

Central control

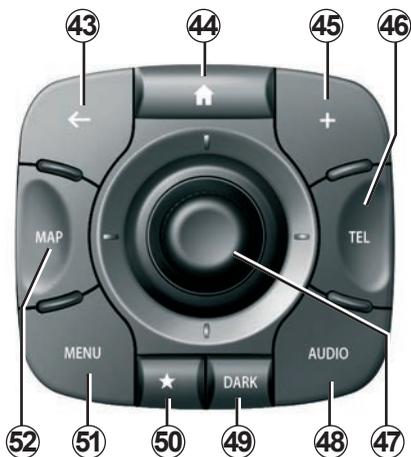

	Function
43	Go back to the previous menu.
44	Display the welcome screen.
45	Open the pop-up menu.
46	Access the telephone menu.
47	<p>Switching:</p> <ul style="list-style-type: none"> – move around the map or in a menu/page; – up/down: move around the various areas (top bar, central area, bottom bar) of a menu. <p>Rotate:</p> <ul style="list-style-type: none"> – move around the various elements of a zone; – move around a list; – modify the scale (ZOOM mode). <p>Press:</p> <ul style="list-style-type: none"> – confirm.
48	Open the screen for the audio source currently playing (radio, CD etc.).
49	Activate the standby screen to hide the map.
50	Access favourites
51	Go to the main menu.
52	Access the navigation page.

SD CARD: USE, INITIALISATION

SD card

A SD card is supplied with the navigation system. Amongst other things, this includes maps for your country or set of countries.

Before using the SD card, check that it is not locked.

Map updates are released regularly. They are **only** available for download by inserting the SD card of your navigation system into your computer's SD port, **online** at the "R-LINK Store".

Only use the SD card provided to operate and update your navigation system. Do not insert into any other device (camera, portable GPS etc.) or into any other vehicle.

The SD card provided does not recognise the multimedia system as an external source for playing music, videos or viewing photos.



Inserting the SD card

With the ignition off, insert the SD card in the SD **1** port of your vehicle.

Only use an SD card which is compatible with your vehicle's navigation system.

An SD card is fragile:
– do not bend it;
– insert it correctly;
– do not force insertion.



Removing the SD card

On the main menu, press "System", then "Remove SD card" to eject the SD card safely.

To remove the SD card from the SD **1** port, press the card, then release it. The card will jut out of the slot by a few millimetres. Pull the card to remove it completely.

You can also download maps covering more countries than your original map (e.g. Western Europe).



For safety reasons, carry out these operations when the vehicle is stationary.

OPERATING PRINCIPLES (1/4)



Multimedia screen 1

Navigating a menu

The multimedia screen **1** can be used to access to the system functions. Touch the multimedia screen **1** to scroll through the pages and open a menu.

Note: Use of the multimedia screen may be restricted while the vehicle is moving.

Confirming/cancelling a selection

Always confirm a change of settings by pressing the “Done” button.



Screen controls

Navigating a menu


Press **3** to enter a menu. Use the **2** buttons to scroll through telephone contacts, radio stations, etc.



Confirming/cancelling a selection

Press **4** to go back to the welcome screen.

OPERATING PRINCIPLES (2/4)

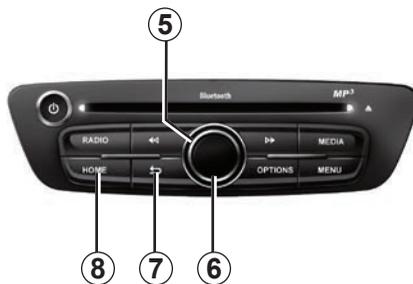

Multimedia screen

Navigating a menu

Use the rotating control **5** to move from menu to menu. Confirm by pressing the central **6** button to enter the menu.

Confirming/cancelling a selection

Press the central button **6** to confirm a change.

Press the **7** button to cancel a choice and return to the previous menu.

Press the **8** button to go back to the welcome screen.



For safety reasons, carry out these operations when the vehicle is stationary.

OPERATING PRINCIPLES (3/4)



Central control

Navigating a menu

Use the joystick **11** to move from menu to menu:

- Move the joystick **11** up or down to move around the different areas of the screen (upper bar, central zone, lower bar);
- turn the joystick **11** to move between different elements of a zone;


- press the joystick **11** to open the selected element;
- in the tabs menu, move the joystick **11** left or right to switch from one tab to another.

Confirming/cancelling a selection

Press the joystick **11** to confirm a change.

Press the **9** button to cancel a choice and return to the previous menu.

Press the **10** button to go back to the welcome screen.

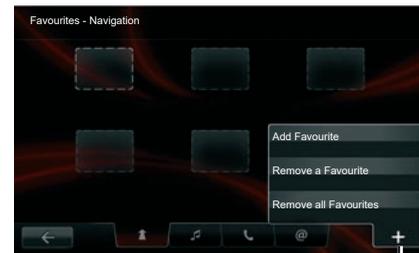

Pop-up menus

From most system menus, the pop-up menu **12** lets you quickly access current page functions.



For safety reasons, carry out these operations when the vehicle is stationary.

OPERATING PRINCIPLES (4/4)



Introduction to the welcome screen

The welcome screen is the default screen for your multimedia system. It is made up of a certain number of shortcuts to other functions, such as navigation and radio.

For a description of the welcome screen, please refer to the “General description” section.

Note: You can change the configuration of the welcome screen. Please see the information on “Welcome screen” in the “System settings” section.

Introduction to the main menu

To access the main menu, press “Menu” from the welcome screen.

The system is made up of six major sections, all of which can be accessed from the main menu:



Navigation

This function includes all the satellite navigation features, road maps, traffic information, services LIVE and warning areas.



Multimedia

This function enables management of the radio, and audio and video playback.



Phone

This function is used to pair the system with a mobile phone and to use the hands-free mode.



Vehicle

This function includes management of equipment such as the reversing camera, on-board computer and Driving Eco, and some items specific to electric vehicles.



Services

This function includes the R-Link Store and the applications.



System

This function is for adjusting various settings on the multimedia system, e.g. display, language, date and time.

ON, OFF (1/2)



Switching on

The multimedia system switches on automatically when the ignition is switched on. In other cases, press the start/stop button .

At start-up, the system displays a safety screen to show you the state of data sharing if connected. This screen lets you set certain functions:

- Press the “Change settings” **1** button to authorise or reject data sharing;



- Press the “Done” **2** button to begin using the multimedia system;
- Press the “Language” **3** button to change the system language;
- Press the “Help” **4** button to see more detailed information.

The system displays a screen to confirm the authorisation of data sharing after pressing the “Change settings” **1** button.

Switching off

With the ignition off, the system is deactivated automatically when the driver's door is opened.


With the ignition on, press the multimedia system on/off button .

ON, OFF (2/2)

Resetting the system

To reset all the system settings and/or delete all personal data, select “System” from main menu, then “Restore factory settings” and follow the on-screen instructions.

Note: Resetting the system means deleting all the applications.

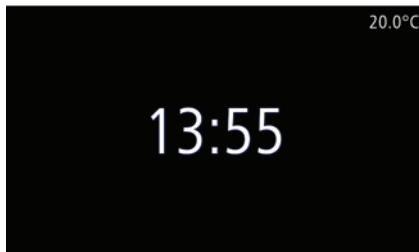

Exterior temperature/clock

This screen is displayed when the driver's door is opened, before the ignition is switched on.

It is displayed when the system is off: with the ignition on, press the on/off  button on your multimedia system. The system then stops the guidance and displays the clock and temperature.

ADD, MANAGE FAVOURITES




Add favourites

From the main screen, press **1**. The “Favourites” menu allows you to manage four types of favourites:

- “Navigation” **2**;
- “Radio” **3**;
- “Phone” **4**;
- “Applications” **5**.



For safety reasons, carry out these operations when the vehicle is stationary.

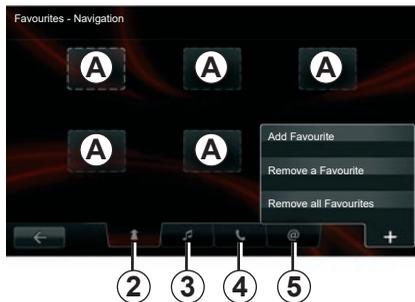

Add a navigation favourite 2

Select the first empty slot **A** or “+”, then “Add Favourite”. Choose the favourite from the list to add a saved destination to the favourites.

Note: to add a navigation favourite, you must first save an address in the memory. Please refer to the information on “Confirming a destination” in the section on “Entering a destination”.

Adding a favourite radio station 3

Select an empty slot **A** or “+”, then “Add Favourite”. Choose the favourite from the list to add a preset radio to the favourites.

Add a telephone favourite 4

Select an empty slot **A** or “+”, then “Add Favourite”. Choose the favourite from the list to add a contact. For more information, consult the “Managing the phonebook” section.

Note: A contact added as a favourite remains visible to any user of the vehicle, whichever phone is connected.

Adding an applications favourite 5

Select an empty slot **A** or “+”, then “Add Favourite”. Choose the favourite from the list to add an installed application to the favourites.


Delete favourites

To delete a favourite, press “+”, then select the favourite and press “Remove a Favourite”. A confirmation message is displayed, press “Delete” to confirm. You can delete all favourites by pressing “+”, then “Remove all Favourites”. A confirmation message is displayed, press “Delete” to confirm the deletion.

USING VOICE RECOGNITION (1/6)

Voice recognition system

Your multimedia system has a voice recognition system which allows voice control of some functions and applications of the multimedia system and your phone. This enables you to use your multimedia system or your phone while keeping your hands on the steering wheel.

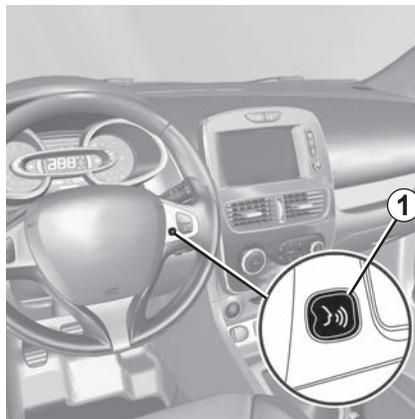

Activation of the multimedia system's voice recognition

You can use voice control to call a contact in your phonebook, enter a destination, change radio station etc without touching the screen. Briefly press the voice recognition button **1** on the steering wheel or **2** on the steering column control of your vehicle. The multimedia screen will display the main voice control menu.




From the main voice control menu, you can use voice control to control three functions of your multimedia system:

- navigation;
- telephone;
- installed applications.

Note: the position of the voice recognition button varies (control on steering wheel or column). Please refer to the vehicle user manual for further information.

USING VOICE RECOGNITION (2/6)

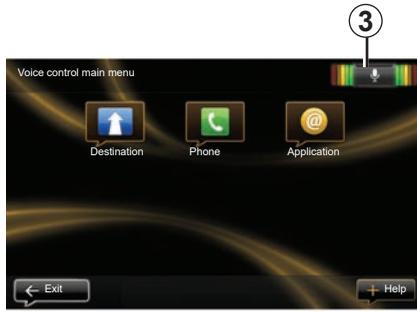

Voice recognition indicator 3

The voice recognition indicator **3** is made up of colour markers and a central icon.

Colour markers

The colour markers are used to optimise voice recognition:

- green marker: optimal voice recognition;
- orange marker: good voice recognition;
- red marker: average voice recognition.

Central icon

Depending on the system status, different central icons can be displayed:

- “Micro” icon: the system is ready to receive your voice commands;
- “Loading” icon: the system is loading data;
- “Loudspeaker” icon: the system is giving you information via its voice synthesizer.

USING VOICE RECOGNITION (3/6)



Controlling navigation with your multimedia system's voice recognition

You can enter a navigation address using the voice control integrated into your multimedia system. To do this:

- press the voice control button to display the main voice control menu;
- when the system beeps, say “Destination”;



- say “Locations” then give the full destination address (number, street name, destination town/city);
- the system will give you the address it has understood - confirm your destination to begin guidance.

Note: speak loudly and clearly. Use the voice recognition indicator to optimise voice recognition.

Note: you can also enter an address or recent destination from the voice control main menu. To do this, press the voice control button, then say “Locations” or “Recent destinations”, and give an address or select your destination.



Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

USING VOICE RECOGNITION (4/6)



Dialling a contact/number using voice recognition

You can call a contact in your phonebook or call a number using the voice control integrated into your multimedia system. To do this:

- check that your phone is connected to the multimedia system (refer to the section on “Connecting, disconnecting a telephone”);



- press the voice control button to display the main voice control menu;
- when the system beeps, say “Phone”;
- state the contact name you wish to call, or dictate the telephone number you wish to contact;

Note: it is recommended to say the numbers one by one.

- the system will show the number given, say “Call” to call the number or “Delete” to give another number.

Note: you can also call a stored contact or a number from the main voice control menu. To do this, press the voice control button then say the name of the contact or the number you want to call.

Note: You can say the contact's name or their number directly from the main page. To cut off the synthetic voice during playback of the contact's name or phone number, press the mute button  on the steering column control.

USING VOICE RECOGNITION (5/6)

Launching a multimedia system application using voice recognition

You can launch an multimedia system app using the voice control integrated into your multimedia system. To do this:

- press the voice control button to display the main voice control menu;
- when the system beeps, say “Application”;
- say the application name you wish to launch to begin using it immediately.

Note: you can also run the R-Link Store application from the voice control main menu. To do this, press the voice control button and say “Run the R-Link Store application”.


USING VOICE RECOGNITION (6/6)

Activating the phone's voice recognition with the multimedia system

To use your phone's voice recognition system with your multimedia system, you should:

- connect your telephone to the multimedia system (refer to the section on “Connecting, disconnecting a telephone”);
- ensure that your phone has a voice recognition function compatible with your multimedia system.

Note: If the voice recognition from your phone is compatible with the multimedia system, the **4** pictogram appears from the “Manage devices” menu. For more information, please refer to the sections on “Connecting, disconnecting a telephone” and/or “Pairing, unpairing a telephone”.

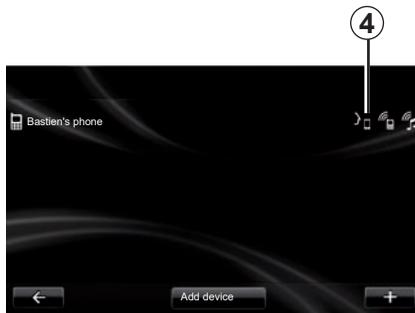

Note: if you wish to use your phone's voice recognition with the multimedia system, make sure that you are located in a network coverage area.

To activate your phone's voice recognition system with the multimedia system, press and hold your vehicle's voice recognition button. The multimedia screen displays your phone's main voice control menu.

To restart your phone's voice recognition system, briefly press your vehicle's voice recognition button.

To deactivate your phone's voice recognition system with the multimedia system, press and hold your vehicle's voice recognition button.

From the main voice control menu, you can use voice control to control some functions and applications of your phone.

Voice recognition is disabled:

- when reversing your vehicle;
- during a call.

Note: the voice recognition session is automatically deactivated after several seconds of inactivity.

When using your phone's voice recognition with the multimedia system, the transfer of cellular data required for its operation can generate additional costs not included in your phone service contract.

ENTERING A DESTINATION (1/5)



“Navigation” menu

From the main menu, press “Navigation”.

From the “Navigation” menu, press the button “Drive to...” to enter your destination.



“Drive to...” menu

This menu offers several ways to enter a destination:

- enter an address from the “Locations” section using one of the following methods:
 - enter a full address (town/city, street and number);
 - search by postcode;
 - Select a City Centre,
 - select a crossing or junction;
- select a “Home”;
- select an address from the “Saved locations”;

- select a destination from the “Recent destinations”;
- select a destination by “Charging station” (electric vehicle);
- select an address from a “Point of interest” (POI);
- select a “Point on map”;
- select a “Latitude” and a “Longitude”.



“Home”

This menu can be used to start navigating your way home.

To store the address of your home location, use “Settings” menu, then “Change home location”.



“Saved locations”

The “Saved locations” section contains the favourite stored destinations such as your place of work, etc.

- Select the “Navigation” section from the “Drive to...” menu;
- Choose “Saved locations” and confirm;
- Select the required destination address in the list of stored addresses to start guidance.

You can manage your saved addresses within the “Settings” menu; select “Manage saved locations”.

Note: the “Saved locations” icon is for accessing stored addresses and the “+” button is for adding addresses as required.



For safety reasons, carry out these operations when the vehicle is stationary.

ENTERING A DESTINATION (2/5)




Enter an “Locations”

This section enables you to enter a full or partial address: country, town, street and number.

On first use, the system asks you to choose the destination country.

Depending on the various version, you can enter the name of the desired town or its postcode using the keypad **3**. The system may suggest several town names in the area **1**.

- Press on the name of the town/city displayed to confirm;
- access the full list of matches for your search by selecting “List” **2**;
- select the town or city;
- follow the same procedure for the “street” and “house” fields.

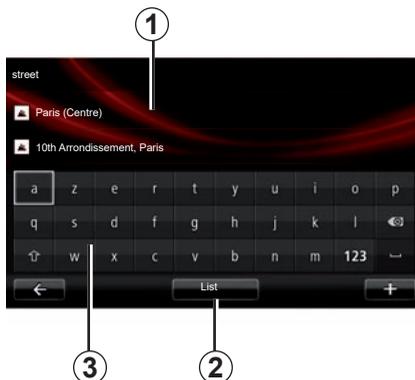

Note: The system will store the last towns/cities entered in its memory. You may directly select one of these towns by pressing the **1** zone.

Note: only addresses known to the system through the digital map are authorised.



For safety reasons, carry out these operations when the vehicle is stationary.



“Recent destinations”

This item enables you to select a destination from the list of addresses last used.

These are automatically stored.

- Select the “Drive to...” section from the “Navigation” menu, then choose “Recent destinations”;
- from the list of stored destinations, select an address to begin guidance.

ENTERING A DESTINATION (3/5)



“Charging station”

This menu enables you to find a charging station for your electric vehicle and to plan your route to this location.

Note: You can manage your personal stations via the “EV settings” menu. For further information, please refer to the section on “Navigation settings”.

Note: Personal recharging stations are stored in the navigation system, whereas the generic list of recharging stations is stored on the SD card.

Only the list on the map SD can be updated and only the personal recharging stations can be managed from the navigation system.



“Point of interest” (POI)

A point of interest (POI) is a service, establishment or even a tourist area close to a location (start point, destination city, en route, etc.).

POIs are classed in different categories, e.g. restaurants, museums, car parks, etc.

There are several options to find a point of interest:

- category;
- the name of the desired POI.

Select the “Drive to...” section from the Navigation menu, then “Point of interest” and confirm.

Search by POI category

- Select the “Drive to...” section from the “Navigation” menu, then choose “Point of interest”;
- Select the search area: “Near my location”, “In city” or “Near Home”;
- select your desired category type;
- select the desired POI from the list suggested, then press the “Select” button on the multimedia system screen to begin navigation to this location.

Search by POI name

Enter the name of a POI you want to find. The system will start the search automatically.

ENTERING A DESTINATION (4/5)



“Point on map”

This function allows you to define a destination from the map. From the “Navigation” menu, select “Drive to...”, then “Point on map”.

Move around the map to position the cursor on your destination, then confirm: the system calculates the route.



“Latitude Longitude”

This function allows you to define a destination using latitude and longitude values.



For safety reasons, carry out these operations when the vehicle is stationary.

Confirming the destination

Once the destination information has been entered, the system displays a route summary for confirmation. Once you have confirmed the route, the system will calculate the itinerary. By default, the calculation is done by selecting the fastest route.

Note: The calculation criterion can be changed in the settings.

At the end of the calculation, the system displays the navigation summary and suggests two options:

- “+” enables you to view the route details in various forms. For more information, refer to the information on “Route details” in the “Guidance” section, change the route and save the route.
- “Done” activates guidance.

Note: if you do not confirm, this page will close after ten seconds and guidance will start automatically.

Note: depending on the vehicle charge level, if you can reach your destination, guidance is launched – if the charge level is too low, the system offers to search for a recharging terminal on the way.

Note: “IQ Routes™” is a function which optimises the journey time using statistical data and calculates routes based on the average traffic levels on that day and time. To activate or deactivate this function, refer to the “Navigation settings” section.

Latest map guarantee

After delivery of your new vehicle you have about 60 days in which to update the map free of charge.

Once this time has elapsed, you will need to pay for updates.

For more information, please see an Authorised Dealer.

ENTERING A DESTINATION (5/5)



Summary of selected route

The summary is displayed after calculation of the route and the selection of a destination.

The screen has two tabs:

- the “journey” tab **4** allows a summary of your route to be displayed;
- The “Live” **5** tab displays traffic information in real time (subject to subscription).

Note: press one of the tabs to view its content.

Note: the source of the traffic information received is automatically selected by the multimedia system (LIVE if you have taken out a subscription).

Specific features for electric vehicles

The map shows the part of the journey that can be completed in green, and the part of the journey that cannot be completed without recharging in red.

If your vehicle charge level is high enough, a chequered flag is displayed in the journey tab **4**.

If your vehicle charge level is too low, a chequered flag with a lightning symbol on a red background is displayed in the journey tab **4**.

VOLUME AND VOICE



Sound levels

Changing the volume

To change the audio volume, use the multimedia system volume control during a voice instruction or from the “System” menu, “Sound settings”, then “Sound levels” and adjust the following audio volumes:

- main volume;
- hands-free;
- telephone ringtone;
- navigation;
- synthetic voice;
- Park Assist;
- events.

Press “Done” to save the audio volumes.



Volume sensitive to speed

This function enables the multimedia system to automatically adjust the volume according to the vehicle speed.

You can adjust the sensitivity using the “+” and “-” buttons.



Playback

Playback is generated by your navigation system. It gives verbal instructions while you are driving. It can give road directions (e.g. turn right) and traffic sign information.

Note: Voice recognition only operates with playback.

Recorded human voices

Recorded human voices are voices recorded by an actor (male or female).

Note: human voices only give you simplified guidance instructions.



Voice

Your system allows you to select either a synthesised or a recorded human voice.

This voice is used to give the voice instructions.

To change the voice used on your navigation system, go to the main menu and select “Navigation”, “Settings”, then “Voice”.

Select a voice from the list.

READING A MAP



Map key

- A** Sign giving the speed limit (the speed given depends on the unit chosen). Please refer to the "System settings" section for more information on the choice of units.
Note: the sign turns red and flashes if you drive faster than the speed limit
- B** Zoom, touch the magnifying glass to display the zoom in and out buttons.
- C** Name of the next main road or road sign information, if applicable.

- D** Outside air quality.
- E** Telephone information.
- F** Outside temperature (Weather).
- G** Current time.
- H** Pop-up menu.
- I** Distance to and indication of next turning / Adjustment of guidance instruction volume.
- J** Audio system information.
- K** Current vehicle position.
- L** Back to previous page.
- M** Traffic information bar: displays incidents on the route, traffic info reception indicator, access to traffic map.
- N** Journey information such as arrival time, total distance remaining and whether you will reach your destination (chequered flag or chequered background)/Journey summary
- O** Compass/ 2D/3D mode.

Note: Access to the full navigation page is only possible from the "Navigation" tab in the main menu.



Map colours

You can change the colours on the map: from the main menu select "Navigation", "Settings" then "Change map colours"

Map icons

The navigation system uses **Q** symbols to display points of interest (POI).

Recharging stations

(electric vehicle)

The navigation system uses the **P** symbol to display recharging stations.

GUIDANCE (1/4)



Lane images

When approaching a road change (on major roads), the system may switch to “Show lane images” mode: an 3D image provides a close-up view of the junction with a turn arrow and road signs.

To deactivate lane images, please refer to the information on “Advanced Settings” in the section on “Navigation settings”.



Guidance screens

Intersection map

During guidance, before each change of direction, the system will gradually zoom into the junction.

To deactivate automatic zoom, please refer to “Advanced” in the “Navigation settings” section.

Guidance Voice

During guidance, before each turning, the system will give voice instructions.

To deactivate or reactivate voice guidance, please refer to the “Navigation settings” section.



Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

GUIDANCE (2/4)

Route details

This function allows you to view your route before guidance begins. Press the “+” button, then “Route details” after entering a destination.

The following choices will be available:

- “Display instructions”;
- “Display route map”;
- “Display route demo”;
- “Route summary”;
- “Display destination”;
- “Display traffic on route”.



“Display instructions”

This function makes it possible to view the route plan.

Several details of the route will appear:

- direction-change arrow;
- road types;
- road names;
- miles/kilometres before a fork in the road.



“Display route map”

This function makes it possible to view the map of the route.



“Display route demo”

This function makes it possible to view a demonstration of the route.



“Route summary”

This function is used to return to the previous screen. The details of the journey time, the miles and the type of journey (“IQ Routes™” activated/deactivated) are displayed.

Note: to directly access this page from the navigation map, press the information block set for your trip.



“Display destination”

This function lets you see changes in direction as an image.



“Display traffic on route”

This function gives you an overview of all the traffic incidents affecting your journey.

GUIDANCE (3/4)



Change route

To modify your route, from the “Navigation” menu, select “Change route” then one of the options proposed.

The system calculates the route taking the detour into account.

Note: you can add several waypoints to your route.



Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.



“Calculate alternative”

Select this menu to make the system stop the current guidance.

To start guidance again, select “Drive to...”, then “Recent destinations”.



“Cancel route”

Select this menu to make the system stop the current guidance.

To start guidance again, select “Drive to...”, then “Recent destinations”.



“Travel via”

Select this menu to change your route so that it passes by a particular location, to pick someone up on the way, for example. You choose the location you want to pass in the same way as you choose a destination.

You have the same set of options: “Locations”, “Saved locations”, “Point of interest” and “Point on map”.

Your system will calculate a new route to your destination that passes the location you chose.

GUIDANCE (4/4)



“Avoid roadblock”

Select this menu if you see a roadblock or a line of traffic ahead which was not indicated by the “Traffic info” service.

You then have to choose how much of the route ahead you want to avoid.

Choose among these different options: “100 metres”, “500 metres”, “2,000 metres”, “5,000 metres”.

Your system will recalculate your route avoiding the section of the route for the distance you selected.



“Avoid part of route”

Select this menu to avoid a part of the route. Use this option if you see that your route includes a road or a junction that you wish to avoid. Then choose the road that you wish to avoid from the list of roads on your route.



“Minimise delays”

Select this menu for your to plan your route based on the latest traffic information.

PREPARING A ROUTE



Routes

You can use the navigation system to plan a journey in advance.

To do this, select at least three points, including the starting point, one or more points en route and your destination.

For example, to find out how long a journey is going to take before you start, or to check the route of a journey you are planning.

To plan a route:

- from the main menu, select “Navigation”, then “Itineraries”;
- select a point of departure, just as you would for a destination;
- select one or more points en route;
- select an arrival point;
- With the route entered, save it, then start the journey by pressing “+”, then “Go”. The system plans the route and allows you to view the details.

TRAFFIC INFORMATION (1/3)



“Traffic Information Service”

Traffic information is a service available on your multimedia system which enables you to receive up-to-date traffic information from the best local sources. The “Traffic” service uses TMC information transmitted over FM wavebands. “TomTom Traffic” uses LIVE services information. These services show events in the form of dots on the map. It covers the main roads and is updated regularly.

Note: the menu title can be “Traffic” or “TomTom Traffic”.



Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

“Traffic Information Service” options

To access the “Traffic Information Service” options, from the main menu press “Services”, “Navigation services”, then “TomTom Traffic”.

“Minimise delays”

Select this option to alter your journey based on the latest traffic information.

“Read traffic information”

This menu enables you to activate the audio reading of traffic information.

“View map”

This menu enables you to explore the map and keep up-to-date with the traffic situation in your area. To access the map, from the main menu select “Traffic Information Service”, then “View map”. The map displays the last searched location. Press the icon for an incident to get more detailed information.

“Traffic settings”

This menu allows you to set the desired default calculation method.


“Display traffic on route”

This menu allows you to see an overview of all traffic incidents on your route. Press the icon for an incident to get more detailed information.

“TomTom Traffic” service

This service is accessible free of charge during a trial period. You can extend your subscription at a later stage. The “TomTom Traffic” service offers more frequent updates (approximately every three minutes), covering main and secondary roads.

TRAFFIC INFORMATION (2/3)

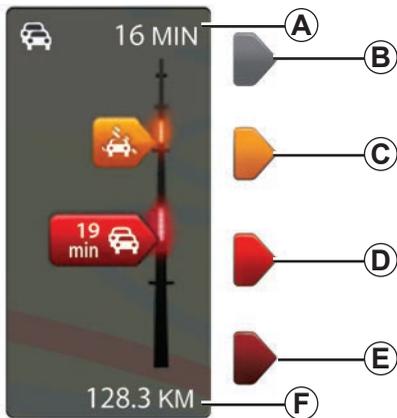

Traffic bar

The traffic bar is available for the “Traffic Information Services”.

The side traffic bar displayed in guidance mode, shows the latest traffic information for your route.

Traffic display

The navigation system indicates traffic incidents:

- by displaying symbols on the map (list of icons at the end of the section);
- with voice messages if the route is recalculated.

Depending on the operating status of the “Traffic Information Service”, the following icons are displayed on the traffic sidebar:

- A** Heavy delays on the route.
- B** Unknown or indeterminate situation.
- C** Slowdown.
- D** Traffic jam.
- E** Stationary traffic or road closed.
- F** Distance before next incident.

“Traffic preferences”

To access this menu, from the “Traffic Information Services” menu, press “Traffic Settings”.

You can automatically minimise delays after every traffic update.

To select your preference, tick the box to the right of your choice using the central confirmation button.

Once you have made your choice, select “Done”.




Precautions regarding navigation

Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.

TRAFFIC INFORMATION (3/3)

Symbol	Meaning	Symbol	Meaning
	Accident		Heavy rain
	Traffic jams		Snow
	One or more closed roads		Strong wind, storm
	Road closed		Fog
	Traffic incident		Ice
	Road works		

VIEW MAP

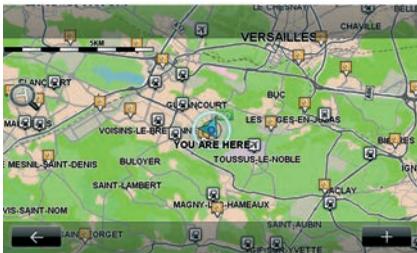

To access the map explorer, from the main menu, press "Navigation" then select "View map". To move around the map, use the multimedia screen or the central control on equipped vehicles.



For safety reasons, carry out these operations when the vehicle is stationary.

Pop-up menu "+"

Press "+" to access the following menus:

- "Use this location to...";
- "Find";
- "Edit information on the map";
- "Add to saved locations".

"Use this location to..."

This menu enables the selected position to be used to:

- centre the map on the vehicle's location;
- navigate to a point on the map;
- search for a point on the map;
- add a point on the map to the favourites;
- add a point on the map to the POI;
- correct the position of your vehicle.

"Find"

This menu allows you to centre the map on:

- your home;
- a saved address;
- an address;
- a recent destination;

- a recharging station search;
- a point of interest;
- your position;
- latitude and longitude.

"Edit information on the map"

This menu enables you to activate/deactivate map settings such as:

- traffic;
- names;
- points of interest;
- charging stations for your electric vehicle;
- the satellite image map background;
- GPS coordinates GPS.

"Add to saved locations"

This menu enables you to add the position selected on the map to the saved addresses.

Give your Favourite a name that is easy to remember. Your navigation system will always suggest a name - usually a favourite address. To enter a name just start typing on the multimedia screen.

NAVIGATION SERVICES (1/2)

Your system includes navigation services. You can add to these services by subscribing to the paid TomTom LIVE services.

- Navigation services include traffic information and fixed speed camera locations (depending on local regulation).
- LIVE services (paid, by subscription) include traffic information, location and updates on fixed/mobile speed cameras as well as weather updates.

Note: the “TomTom Traffic” service is called “Traffic” if the LIVE service subscription is not activated.

A trial period for LIVE services is offered. At the end of the trial period, you can extend your subscription to these services LIVE online at www.myrenault.com.

A current subscription is required to access LIVE services. The content of LIVE services may vary.

Accessing the navigation services

To access the “Navigation services”:

- from the main menu, press “Navigation”;
- select “Navigation services”.



“TomTom Traffic”

Please refer to the “Traffic Information” section.



In certain countries it is illegal to download and activate the speed camera warnings and this could lead to prosecution.



“Speed Cameras”

This service allows you to display the location of mobile speed cameras in real time, accident black spots and fixed speed cameras.

The latest updates for speed cameras are installed automatically if a LIVE subscription is valid.

“Speed Cameras” shows you mobile speed camera alerts as well as fixed speed camera alerts. Information is obtained in real time using information from other users.

You can deactivate this function by going to the “Speed Cameras” menu for LIVE services.

Note: for mobile speed cameras, information is provided when a member of the community sends the information to the database.

Note: depending on local restrictions, speed cameras may not be displayed.

NAVIGATION SERVICES (2/2)



“MyTomTom LIVE”

This service lets you see the expiry date of the subscribed services.

Subscription to services can be renewed via the R-LINK Store or at www.myrenault.com, by selecting the desired service(s).

You must enter a valid e-mail address for this service. An e-mail detailing the subscription methods for the chosen services will be sent to this address. For further information, please refer to the section on “Downloading and installing applications”.

Note: to find out more about the availability of LIVE services in your country, please see an Authorised Dealer.



“Weather”

This service provides access to five-day weather forecasts for the location of your choice.



“Connected Services Z.E.”

Connected Services Z.E. are reserved for electric vehicles. Refer to the section on “Connected Services Z.E.” for more information.

CONNECTED SERVICES Z.E. (1/2)

Z.E. “Connected Services Z.E.”

Reserved for electric vehicles, these services allow you to locate a recharging terminal, view its availability and the specifications of the recharging stations.

They include on-board vehicle services and other services accessible from outside the vehicle (mobile phone and Internet).

For further information, please contact an Authorised Dealer of brand.

From your vehicle

Your R-LINK multimedia system is compatible with your telephone for listening to music, monitoring traffic information in real time, using your apps, displaying your contacts and many other services...

Note: some apps are not available on some vehicle models. For further information, please contact an Authorised Dealer of brand.



“Z.E. Trip”

This app in your vehicle’s R-LINK multimedia system can be used to locate a recharging terminal, view its availability in real time and the specifications of the recharging stations. Refer to the “Charging Station” section.



For safety reasons, carry out these operations when the vehicle is stationary.

CONNECTED SERVICES Z.E. (2/2)



“MY Renault”

From your mobile app you can:

- check the status of your battery;
- programme charging;
- start and programme the air pre-conditioning;
- find available recharging terminals nearby;
- plan a route, identifying the recharging terminals along your route;
- and many other services...

Note: for more information on compatible telephones, contact an authorised dealer or visit <https://renault-connect.renault.com>.



For safety reasons, carry out these operations when the vehicle is stationary.

Note: Charge programming is only available on ZOE fitted with the R-LINK multimedia system.

Air pre-conditioning management is only available on KANGOO Z.E. fitted with the R-LINK multimedia system.

For further information, please contact an approved dealer or view the Renault Connect offer at <https://renault-connect.renault.com>.



The screens shown in the user manual are not contractual and may vary depending to the make and model of your telephone.

RECHARGE STATION (1/2)



“Charging station” from the navigation system

From the “Navigation” menu, select “Drive to...”, then “Charging stations”.

This menu can be used to identify a recharging terminal and its availability and to view the specifications of recharging stations.



“Near my location”

This option enables you to find the recharging stations closest to your current position.



“In city”

Select this service to find recharging stations in the town/city you are visiting.



“Near Home”

This option provides a list of recharging stations close to your home.



“Along route”

This option shows a list of recharging stations that you can use during your trip.



“Near destination”

This option gives a list of recharging stations near your destination.

“Last recharging station”

This option enables you to find the coordinates of the last recharging station used.

Saving new recharging stations

When you recharge your vehicle at a new recharging terminal, it will be automatically saved in the system.

You can also create and manage your own recharging stations in the “Settings” menu by selecting “EV settings”. Please refer to the “Navigation settings” section.



For safety reasons, carry out these operations when the vehicle is stationary.

RECHARGE STATION (2/2)



“Z.E. Trip”

From the “Services” menu, select “Z.E. Trip”.

This app is reserved for electric vehicles and allows you to consult:

- the charging points around your position or around your destination;
 - the number of charging points per station;
 - the availability status of the terminals (free/occupied);
 - the sockets or connections available;
 - access times;
 - the type of access to the charge (free/by subscription);
- and many other services...



At the first connection, select the cables fitted to your vehicle.

Use the (+) button to display the various charging sockets to help your selection.

Z.E. Trip finds the closest stations that match your charging socket.

Various types of information is displayed:

- terminal availability **1**;
 - green dot: at least one terminal available;
 - red dot: all the terminals are occupied;

- white dot: no information available;
- key: terminal requires a Z.E. Pass subscription;
- recharge speed: standard, fast, extra-fast.

- name and address of the station **2**;
- distance remaining **3** to the station.

Use the button (+) **4** to:

- add the terminal(s) to your favourites;
- configure your search;
- display the terminal(s) on a map;
- obtain help for the app.

From the “At destination” **5** button, you can view a list of charging stations for a future destination, detailed information for each station (compatibility with your vehicle, run navigation to the station, the connection types, recharging speed and opening times).

RANGE

The range distance is only available for electric vehicles.

Attainability of the destination

The classic map display indicates whether the battery level of your electric vehicle is sufficient to reach your destination:

- chequered flag: the vehicle can reach your destination at the current battery level;
- chequered flag with lightning symbol on red background: look for a recharging station to avoid running out of power.

Range view

- In guidance mode, from the route summary screen: you can see the route portions (zones) that are attainable (in green) and non-attainable (in red);
- when not in guidance mode, from the “attainable zone” main menu: your range distance is shown as a radius around your vehicle’s current position.

Low battery warning

When the charge level reaches the minimum alert level on the instrument panel, the system automatically proposes a list of recharging stations near your current location.

Deactivating the low battery warning

This option enables you to deactivate the automatic proposal of recharging stations when the battery level is low:

- from the “Navigation” menu, select “Settings”, then “EV settings”.
- select the “Disable low battery warning” option.

Select this option again to reactivate the low battery alert.

Note: if the ongoing guidance is indicating an attainable charging point, the low battery alert will not be triggered.

ADDING, MANAGING SAVED ADDRESSES



Accessing saved addresses

To access saved addresses, from the main menu press “Navigation”, then “Drive to...”, then “Saved locations”.

Save an address from a recent destination

- In the “Drive to...” menu, select “Recent destinations”.
- select the recent destination you wish to save;
- press “+” on the map screen then “Add to saved locations”;
- give a name to an address, then press “Next”;
- If the “Home” address is not registered, the system asks if the saved address is your home, select “Yes” or “No”. A message confirms that the address has been saved.
- If the “Home” address is registered, the system offers to select this address.

Renaming a saved address

- From the main menu, press “Navigation”, then “Settings” then “Manage saved locations”;
- select an address saved in the memory that you wish to remember;
- on the screen/map, press “Rename”;
- enter the new name for the saved address, then press “Next” to confirm.

Deleting a saved address

- From the “Manage saved locations” menu, select the saved address you wish to delete;
- on the screen/map, press “Delete”;
- a message asks you to confirm the deletion - press “Yes” to confirm or “No” to cancel.

NAVIGATION SETTINGS (1/2)

Accessing the navigation settings

From the “Navigation” menu, press “Settings”, then select the element you wish to modify:

- “Turn off voice guidance”;
- “Route planning”;
- “Show POI on map”;
- “Manage POIs”;
- “Voice”;
- “EV settings”;
- “Set home location”;
- “Manage saved locations”;
- “Switch map”;
- “Change map colours”;
- “Car symbol”;
- “Advanced” (Settings).



“Turn off voice guidance”

This menu enables you to activate or deactivate voice guidance.



“Route planning”

Use this menu to define your route preferences:

Type of journey

Select a journey type. The recommended journey criterion is “Quickest”.

Toll roads

Include toll roads (toll gates or similar).

Ferries


Include ferries (including railway ferries).

High-occupancy vehicle lanes

Include lanes reserved for vehicles occupied by more than one passenger.

Unpaved roads

Include unpaved roads.



“Show POI on map”

This menu lets you display or hide Point of Interest (POI) categories on the map.



“Manage POIs”

A point of interest (POI) is a service, establishment or tourist area close to a location (start point, destination city, en route, etc.). POIs are classed in different categories, e.g. restaurants, museums, car parks, etc. There are several options to find a point of interest:

- category;
 - the name of the desired POI.
- This menu allows you to add, change or delete POIs or POI categories.



“Voice”

This menu lets you choose the synthetic or stored voice.

NAVIGATION SETTINGS (2/2)



“EV settings”

Use this menu to add and manage your own recharging stations as well as those detected automatically by the system, to disable the low battery warning and select a power supply cable.



“Set home location”

This menu lets you set or change your home address.



“Manage saved locations”

This menu lets you add, delete or rename your saved addresses.



“Switch map”

This menu allows you to switch between the maps saved on your SD card.



“Change map colours”

This menu enables you to change the colours of the map displayed on your multimedia system screen. You can download new colours.



“Car symbol”

This menu allows you to change the vehicle icon on the navigation map 3D.



“Advanced”

This menu enables you to change the following advanced settings:

- “Map information”;
- “Map behaviour”;
- “Traffic source”.



Map information

This menu enables you to display or hide details such as the address number before the street name, the street names, the name of the street after the current street, and the current street name on the map.



Map behaviour

This menu enables you to set the following behaviour:

- show lane views;
- to pivot the map in the direction of the journey when in 2D mode;
- to switch to 3D mode while the journey is in progress;
- to activate automatic zoom in 2D mode;
- to activate automatic zoom in 3D mode.



Traffic source

This menu displays the various traffic information services available on your navigation system.

LISTENING TO THE RADIO (1/5)



Accessing the radio

Multimedia screen

From the main menu, press “Multimedia”, then “Radio”.

Radio front panel / Multimedia front panel

Press the “Radio” button on the panel to select the radio source.

Selecting a wavelength

Select the required waveband (AM, FM or DR) by pressing **1**:

- AM;
- FM;
- DR.

You can also select the waveband using the steering column control (refer to the control details).

Choose an FM or AM radio station


There are different modes for choosing a radio station.

After having selected the wavelength, select the mode by pressing tabs **3**, **4** or **5**.

Three search modes are available:

- “Frequency” mode (tab **3**);
- “List” mode (tab **4**);
- “Preset” mode (tab **5**).

These modes can be changed with the steering column control.

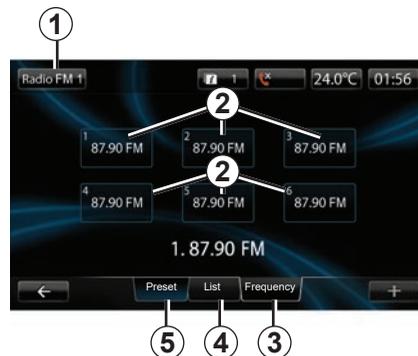

“Preset” mode

This operation mode allows you to recall on demand those stations which you have already stored (refer to information on “Storing a station” in this section).

Press the buttons **2** (numbered 1 to 6) to select your stored stations.

You can also change a saved station using the steering column control.

LISTENING TO THE RADIO (2/5)




“List” mode

This mode displays a list of available radio stations. These are listed alphabetically (FM band only).

Press **6** or **7** to scroll through all the stations or slide your finger across the multimedia screen.

To update this list, please see the following pages.

The names of the radio stations that do not use the RDS system will not appear on the screen. Only their frequency is displayed and sorted at the beginning of the list.

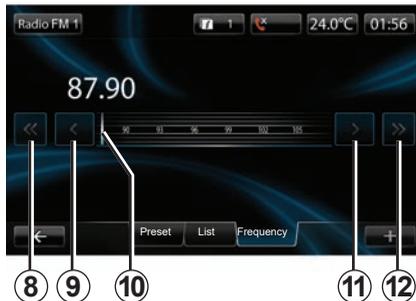

“Frequency” mode

This mode allows stations to be searched for either manually or automatically by scanning the selected range of frequencies.

To scan the frequency range:

- manually run through the frequencies in steps by repeatedly pressing **9** or **11**;
- automatically go to the next station by pressing **8** or **12**;
- move the cursor **10** to find the required frequency.



To select a radio station DR (terrestrial digital radio)

There are different modes for choosing a radio station.

After selecting the waveband, select the mode by pressing the tabs **15** or **16**.

Two search modes are available:

- “List” mode (tab **15**);
- “Preset” mode (tab **16**).

These modes can be changed with the steering column control.

LISTENING TO THE RADIO (3/5)

“List” mode

This mode displays a list of available radio stations.

Press **13** or **14** to scroll through all the stations or slide your finger across the multimedia screen.

To update this list, please see the following pages.

“Preset” mode

This operating mode allows you to recall the radio stations that you have previously stored on demand. For more information, refer to “Storing a station” in this section.

Press the buttons (numbered 1 to 6) to select your stored stations.

You can also change a saved station using the steering column control.

Pop-up menu “+”.

FM or AM

From one of the three modes, press “+” to:

- change the source (Radio, USB, SD, etc.);
- add a station to your favourites;
- store a station as a preset;
- display text information;
- access the radio settings.

Storing a station

From “Frequency” mode or “List” mode, press “+” then “Save as preset”. You can also press one of the preset buttons until you hear a beep.

You can store up to six stations per band.

Text information (Radio text)

Some FM radio stations broadcast text information relating to their programmes (e.g. song titles).

Note: this information is only available for certain radio stations.

DR (terrestrial digital radio)

From one of the two modes, press “+” to:

- change the source (Radio, USB, SD etc.) ;
- Save as preset ;
- display radio text;
- Accessing the digital radio services;
- Accessing settings

Storing a station

From “List” mode, press “+”, then “Save as preset”.

You can also press and hold one of the preset buttons until you hear a beep.

You can store up to six radio stations.

LISTENING TO THE RADIO (4/5)

Text information (Radio text)

Some DR radio stations broadcast text information relating to their programmes (e.g. song titles).

Note: this information is only available for certain radio stations.

Digital radio services

From the pop-up menu, press “Digital radio devices” to access the following services:

- “EPG”;
- “Intellitext”;
- “Slideshow”.

EPG (DR) program guide

When this feature is activated, your audio system will display the station’s upcoming programs of the day.

Note: This information is only available for the selected station’s next three time slots.

Intellitext (DR) function

This feature allows access to text information recorded on some radio stations. You can scroll through the text to display new updates on business, politics, health, weather and sports.

Slideshow

This function runs through all the photos as a slideshow.

Radio settings

FM

From one of the three modes, press “+” then “Radio” to access the radio settings menu. From the radio settings, you can set the following elements:

- following an FM station;
- activate/deactivate traffic information;
- activate/deactivate the programme type search;
- update the list of radio stations.

Following a station FM (RDS-AF)

The frequency of an “FM” radio station may change depending on the geographical area.

In order to keep listening to the same radio station when driving, activate the “RDS-AF” function so that your audio system can automatically retune the frequency.

LISTENING TO THE RADIO (5/5)

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate the automatic frequency retuning.

To activate/deactivate this function, refer to the section on "Audio settings".

Traffic information (i Traffic)

When this function is activated, the source is interrupted automatically to receive the traffic bulletins broadcast by some FM radio stations.

Programme type search (PTY)

When this function is activated, your audio system allows you to display the type of programme (news, sport etc.) currently being broadcast.

Update radio list

Select this menu to update the list of radio stations.

DR (terrestrial digital radio)

From one of the two modes, press "+" to access the radio settings. From the radio settings, you can set the following elements:

- "AF" (Alternative frequency);
- "i-Traffic" (Traffic Programme);
- "PTY" (Programme type);
- "Simulcast"
- "i-Announcement"
- "Update the list" (DR).

Following a radio station DR (AF)

A DR radio station can change according to the geographical area. In order to keep listening to the same radio station when driving, activate the AF function so the audio system can retune the frequency automatically.

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes. In this case you should deactivate the automatic frequency retuning.

Traffic information (i Traffic)

With this function activated, the source is interrupted automatically to receive the traffic bulletins broadcast by some DR radio stations.

Programme type search (PTY)

With this function activated, the audio system lets you display the type of programme (news, sport etc.) currently broadcast.

Simulcast

This function lets you switch from one DR station to the same FM station on signal loss.

i-Announcement

This function lets you display information (weather, etc.).

Updating the list (DR)

This feature allows you to perform an update of all stations in your area.

MEDIA



Accessing media

This menu enables you to listen to music from an external source (audio CD, USB, SD card etc.).

From the main menu, press “Multimedia”, then “Media”. Select an input source connected to the system to access the audio files from the following list:

- CD audio;
- USB;
- SD card;
- auxiliary socket;
- Bluetooth® connection.

The SD card provided does not recognise the multimedia system as an external source for music playback. Remove the SD card provided and insert a new SD card containing your music. Using an external SD card makes it impossible to use the navigation system.



From the main menu, you can:

- access the audio files directly;
- access files, music, genres, artists, albums and reading lists;
- access files and/or audio files.

Note: only available sources can be selected. Unavailable sources will be greyed out.

Playback

You can choose between playing all the tracks or playing a single track.

When playing a track, you can:

- access the previous track by pressing **1**;
- pause by pressing **2**;
- access the next track by pressing **3**;
- view the scroll bar **4**;
- access the current playback list **5**;
- make a new music selection **6**.

Pop-up menu “+”

During playback, the pop-up menu “+” enables you to:

- change source;
- search for a new device;
- access sound settings.

PHOTO READER



Accessing photos

From the “Multimedia” menu, press “Pictures” then select the connected source (SD card or USB, etc.) to access the photos. The system offers you two options:

- “read all photos”;
- “Read a photo”.

Note: Some formats may not be readable by the system.

Options from folders

From the list of folders/photos, press “+” to:

- change the source;
- access photo settings.

Note: For more information on compatible photo formats, please consult an Authorised Dealer.

The SD card provided is not recognised by the multimedia system as an external source for viewing photos. Remove the SD card provided and insert a new SD card containing your photos. Using an external SD card makes it impossible to use the navigation system.



Playback

You can choose between reading all the photos in a slideshow or viewing a single photo.

When viewing a photo, you can:

- access the previous photo by pressing **1**;
- access the next photo by pressing **2**;

- alternate between miniature and fullscreen modes by pressing **3**;
- make a new photo selection by pressing **4**.

Pop-up menu “+”.

When viewing a photo/slideshow, press “+” to:

- change the source;
- access photo settings.

Photo settings

From the pop-up menu, use the “Picture settings” to:

- change the display time for each photo in the slideshow;
- change the type of display (normal or fullscreen).

Press “Done” to save your changes.

Note: the display is in normal mode by default.

Photo playback is only possible when the vehicle is stationary.

VIDEO PLAYBACK



Accessing videos

From the “Multimedia” menu, press “Video” then select the source connected (SD card, USB, etc.) to access videos. The system offers you two options:

- “play all videos”;
- “play a video”.


Note: Some formats may not be readable by the system.

Options from folders

From the list of folders/videos, press “+” to:

- change the source;
- access video settings.

Note: For more information on compatible video formats, please consult an Authorised Dealer.

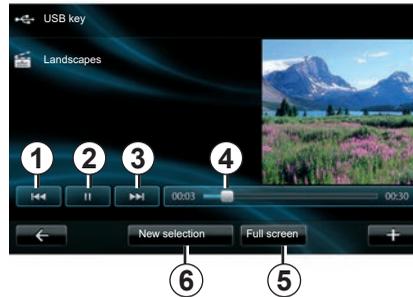

Playback

You can choose between playing all the videos or playing a single video.

When playing a video, you can:

- access the previous video by pressing **1**;
- pause by pressing **2**;

- access the following video by pressing **3**;
- view the scroll bar **4**;
- view the video in fullscreen **5**;
- “New selection” videos by pressing **6**.

Pop-up menu “+”.

During video playback, press “+” to:

- change the source;
- access video settings.

Settings

From the settings, you can choose the type of display, normal (half-screen) or fullscreen.

Press “Done” to confirm.

Note: the display is in normal mode by default.

The SD card provided is not recognised by the multimedia system as an external source for video playback. Remove the SD card provided and insert a new SD card containing your videos. Using an external SD card makes it impossible to use the navigation system.

Video playback is only possible when the vehicle is stationary.

MULTIMEDIA SETTINGS (1/2)



Accessing multimedia settings

From the “Multimedia” menu, press “Settings”, then select the element you wish to modify:

- “Sound”;
- “Radio”;
- “Media”
- “Pictures” ;
- “Video”.



“Sound”

This menu allows you to configure different sound settings:

- “**Spatialisation**”, for setting sound distribution in the vehicle;
- “**Bass Treble**”, to adjust the treble and bass levels. Once you have made the adjustments, press the “Done” button to confirm your changes;
- “**AGC Arkamys**”, to equalise the sound volume between two audio tracks;
- “**Bass Boost Arkamys**”, to activate/deactivate bass amplification.



“Radio”

This menu enables you to adjust the radio settings:

- activate/deactivate searching for alternative frequencies;
- Activate/Deactivate the i-traffic;
- activate/deactivate programme type;
- update list of saved radio stations.



“Media”

This menu allows you to adjust the multimedia settings:

- activate/deactivate album image display;
- manage Bluetooth® devices connected.

MULTIMEDIA SETTINGS (2/2)



“Pictures”

This menu allows you to adjust the multimedia settings:

- set the timing of each picture in the slideshow;
- configure the default view for pictures.



“Video”

This menu enables you to set the type of video display:

- “Normal view”;
- “Full screen”.

PAIRING AND UNPAIRING A TELEPHONE (1/2)



Accessing the Telephone menu

From the main menu, press “Phone”.

Note: if no telephones are paired to the system, “Settings” will be the only section you can access.

Pairing the first telephone

To pair your phone with the R-Link navigation, there are two pairing methods.

First method of pairing from R-LINK

Activate the Bluetooth® connection on your telephone and set its status to “visible”.

For a list of compatible telephones, consult the <https://renault-connect.renault.com> site.



A screen message offers a device search.

Press “Yes”, the multimedia system will search for telephones.

Select your telephone from the list. Depending on the model, and if the system so requests, enter the Bluetooth® code on your telephone to pair it to the multimedia system, or confirm the pairing request. Your telephone can ask you for authorisation to share contacts and call logs. Accept the sharing to get this information on the multimedia system.

Second method of pairing from a phone

Activate the R-LINK connection on your phone and set its status to “visible”.

Run the Bluetooth® device search on your phone.

Select “Renault R-Link” on your phone list.

PAIRING, UNPAIRING A TELEPHONE (2/2)

Pairing another telephone

From your telephone, activate the Bluetooth® connection.

From the “Telephone” menu, press “Settings”, then “Manage devices”.

From the list of paired phones in the “Manage devices” menu, press the “Add device” button to add a phone to the list.

Unpairing a phone

From the main menu, select “Telephone”, “Settings”, then “Manage devices”.

From the list of paired telephones in the “Manage devices” menu, press the button on the pop-up menu, then “Delete device(s)”. Select the device you want to unpair on the multimedia system screen, then press “Delete”.




For safety reasons, carry out these operations when the vehicle is stationary.

CONNECTING, DISCONNECTING A TELEPHONE

Connecting a paired phone

No phone can be connected to the hands-free phone system if it has not first been paired. Please refer to the information on “Pairing a telephone” in the “Pairing,unpairing a telephone” section.

Your phone must be connected to the hands-free phone system in order to use all its functions.

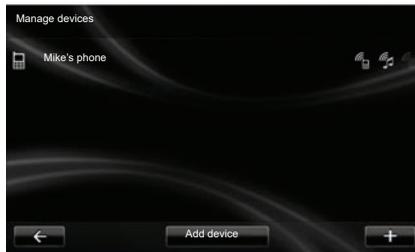

Automatic connection

Once the ignition is switched on, the hands-free phone system searches for paired phones in the vicinity (if the Bluetooth® connection is activated).

Searching starts with the last paired telephone.

Note: It is recommended that you accept automatic device recognition.

Manual connection (changing the phone connected)

From the “Phone” menu, press “Settings”, then “Manage devices”. You will find the list of phones already paired.

Select the phone from the list to be connected, then press “Add device”.

Disconnect a phone

From the “Phone” menu, press “Settings”, then “Manage devices”.

Select the phone to be disconnected from the list.

Switching off the telephone will also cause it to be disconnected.

Note: if a call is in progress when the phone is disconnected, the call will automatically be transferred to your phone.

MANAGING THE PHONEBOOK



Downloading the phone memory

By default, when pairing and connecting a telephone, the contacts are synchronised automatically. The multimedia system will warn you that your mobile device data will be updated when synchronisation is complete.

To deactivate automatic synchronisation, please refer to the “Telephone settings” section in this document.

The system memory is restricted and it is possible that all your contacts may not be imported from your phone.

Note: the contacts saved on the SIM card SIM on your phone are not visible. Only contacts saved on the phone are visible.

Note: to access the phonebook from the multimedia system, you will need to authorise data sharing on your telephone. Please refer to the “Pairing, unpairing a telephone” section, and your telephone instructions.



Updating the phonebook

You can transfer your phone contacts into the handset memory of your hands-free phone system via Bluetooth® (if your phone allows this).

From the “Phone” menu, select “Phonebook”, then the “+” menu, and press “Update phone data”.

Adding a contact to the Favourites page

From the “Phone” menu, select “Phonebook”, then the contact to be added using the multimedia screen. Then press the “+” menu and “Add to Favourites”.

Note: From the welcome page, press the “Favourites” button to access your favourite numbers.

Confidentiality

The contact list of each phone is stored in the memory by the hands-free system.

For reasons of confidentiality, each downloaded contacts list can only be viewed when the corresponding telephone is connected.

MAKING, RECEIVING A CALL (1/2)



From the “Phone” menu, you can make a call by selecting:

- a contact from the phonebook;
- a number from the call log;
- the keypad to dial the number.

Note: on the home page, press “Favourites” to access your favourite numbers.

Note: For safety reasons, favour the voice recognition system . Refer to the Section entitled “Using voice recognition”.



Making a call from the phonebook

With the telephone connected to the system, from the “Phone” menu, press “Phonebook”.

Select the contact (if the contact has more than one number, you will be requested to select the number to call). The call will be started automatically after you press the contact’s number.




Making a call from the log

With the telephone connected to the system, from the “Phone” menu, press “Call logs”.



Press one of the four tabs, then select the contact/number to call to start the call.

MAKING, RECEIVING A CALL (2/2)

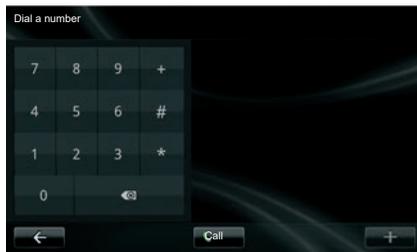

Making a call by dialling a number

With the telephone connected to the system, from the “Phone” menu, press “Dial a number”.

Dial your number using the digital keypad, then press “Call”.

Receiving a call

When receiving a call, the reception screen is displayed with any information available on the caller:

- the name of the contact (if the number is present in your handset memory or the phonebook list);
- the caller’s number (if the number is not present in your handset memory);
- “No Caller ID” (if the number cannot be viewed).

Pick up

To pick up a call, press “Pick up”.

Press “End call” to end the call.

You can also pick up or hang up using the steering column control.

Reject a call

To reject an incoming call, press “Refuse”, the person calling you will be redirected to your voicemail.

Place a call on hold

Please refer to the “During communication” section.



Using voicemail

With the telephone connected to the system, from the “Phone” menu, press “Voice mail configuration”.

Configure voicemail

If the voicemail box is not configured, the configuration screen will be displayed. Enter the voicemail number for your telephone operator.

Calling the voicemail box

With the telephone connected to the system, from the “Phone” menu, press “Voice mail configuration”. The system will call the configured voicemail account.



For safety reasons, carry out these operations when the vehicle is stationary.

CALL LOG



Accessing the call log

With the telephone connected to the system, from the “Phone” menu, press “Call logs”.

The call log places the various calls in four tabs:

- 7** All calls (incoming, outgoing, missed);
- 6** incoming calls;
- 5** missed calls;
- 4** outgoing calls.

For each list, the contacts are listed from the most recent to the oldest.



Browsing the call log

Press a tab to view its content.

Press the “Up” **2** and “Down” **3** buttons to scroll through the list of calls.

You can search for a contact by pressing the “Find” button **1**. If the contact has several numbers, you are asked to select the number to call. The call is made automatically by pressing the contact’s number.

Press a call log entry to call the relevant contact.

For more information please consult the “Making, receiving a call” section.

Updating the call log

Press “+” and select “Update telephone data”. A message will notify you that the data has been updated.

DURING A CALL



During a call you can:

- adjust the volume by pressing the control buttons on the steering wheel of your vehicle;
- end communication by pressing “End call” or by pressing the steering column control buttons;

- place a call on hold by pressing “+” then select “On hold”. To pick up a call on hold, press “Continue”;
- switch the call to the phone by pressing “+” then select “Handset”.

Note: some telephones disconnect from the system during a call transfer.

During a call, you can return to other system functions (navigation, etc.):

- by pressing the button to return to the previous menu,
- or
- by pressing the button to return to your multimedia system welcome screen, then “NAV”.

For more information, refer to the “Introduction to controls” section.

PHONE SETTINGS



Accessing telephone settings

From the “Phone” menu, press “Settings”.

The following choices are offered:

- “Manage devices”;
- “Sound levels”;
- “Voice mail configuration”;
- “Activate Bluetooth”;
- “Automatically download phone data”.



“Manage devices”

Refer to the information on “Pairing/unpairing a phone”.

“Sound levels”

This option allows you to adjust the audio level of the hands-free system and the ringtone.

“Voice mail configuration”

Please refer to the information on “Configuring voicemail” in the “Making, Receiving a call” section.

“Activate Bluetooth”

Tick this option to activate or deactivate the Bluetooth® on the hands-free system.

“Automatically download phone data”

Tick this option to activate or deactivate the automatic download of data from the telephone to the multimedia system.

DRIVING ECO



Access the Driving Eco menu

From the main menu, press “Vehicle”, then “Driving Eco”.

The “Driving Eco” menu grants access to the following information:

- “Trip report”;
- “My preferred trips”;
- “Eco-coaching”.



“Trip report”

This menu shows you the data saved from your last journey:

- “Average consumption”;
- “Average speed”;
- “Total consumption”;
- “Energy saved” or mileage driven;
- “Average Eco-driving performance”;
- “Braking anticipation”;
- “Ability to manage vehicle speed”.

To save your data, press “Save”, then select the type of journey taken from the following list:

- “Home-Work”;
- “Vacation”;
- “Weekends”;
- “Tour”;
- “Personal”.

To reset your data, press “Reset”. A message will ask you to confirm the data reset. Press “Yes” to confirm or “No” to cancel.



“My preferred trips”

Once you have saved a specific journey (see information on “Trip report”), this menu will display changes in your driving style in the following categories:

- “Last trip saved”;
- “Home-Work”;
- “Vacation”;
- “Weekends”;
- “Tour”;
- “Personal”.




“Eco-coaching”

This menu monitors your driving style, and provides you with advice to best reduce your fuel consumption, as necessary.

To access this menu, press “Eco-coaching” and carefully read the advice, scroll through the pages by pressing the scroll arrows.

PARKING DISTANCE CONTROL, REVERSING CAMERA (1/2)

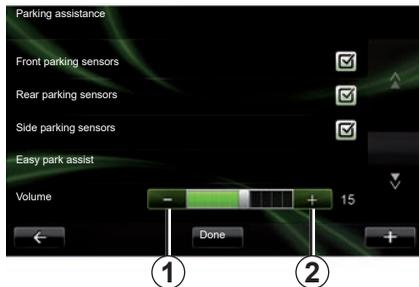

Parking aids

Activation/deactivation

You can activate or deactivate the parking distance control from the multimedia screen.

From the main menu, press “Vehicle”, “Settings”, “Parking assistance”, then select the aid(s) you wish to activate or deactivate among the following choices:

- “Front parking sensors”;
- “Rear parking sensors”;
- “Side parking sensors”.

Save and confirm your selections by pressing the “Done” button.

Adjusting the audio volume

From the “Vehicle” menu, select “Settings”, press “Parking assistance”, then “Volume” and adjust the parking distance control volume by pressing “-” 1 or “+” 2.

Save and confirm your selections by pressing the “Done” button.



Reversing camera

Settings

From the “Settings” menu, press “Parking assistance”, then “Rear camera view settings”. From this menu you can:

- activate/deactivate the reversing camera;
- activate/deactivate the various guides (fixed and/or mobile);

Save and confirm your selections by pressing the “Done” button.

For further information on the reversing camera, please see your owner’s handbook.


PARKING DISTANCE CONTROL, REVERSING CAMERA (2/2)

Display settings

From the “Vehicle” menu, go to “Settings”, press “Rear camera view”, then adjust the following settings:

- brightness;
- colour;
- contrast.

Save and confirm your selections by pressing the “Done” button.

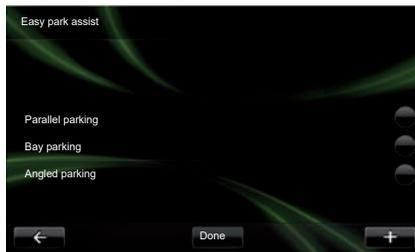

“Easy park assist”

This menu allows you to set the default parking manoeuvre from amongst the following choices:

- “Parallel parking”;
- “Bay parking”;
- “Angled parking”.

For further information on the “Easy park assist” function, please refer to your vehicle user manual.

ELECTRIC VEHICLE (1/2)



Access the Electrical vehicle menu

From the main menu, press “Vehicle”, then “Electrical vehicle”.


This menu shows the following information for electric vehicles:

- “Energy flow”;
- “Consumption details”;
- “Charge scheduler”;
- “Comfort timer”.



“Energy flow”

This menu shows you a diagram of the vehicle, and indicates the points where the vehicle is consuming energy or is generating energy to recharge the traction battery.

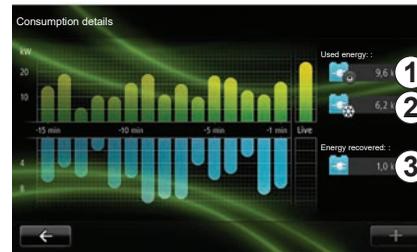

“Consumption details”

This menu can be used to display a diagram of the vehicle indicating the points where the vehicle is consuming energy (when the vehicle is consuming energy or generating energy to recharge the traction battery) and compares it to the last fifteen minutes of driving.

The following appear on the right-hand side of the screen:

- 1** energy consumed;
- 2** energy consumption of accessories (air-conditioning, radio, etc);
- 3** recovered energy.

ELECTRIC VEHICLE (2/2)



“Charge scheduler”

This menu enables you to set the time to start charging.

You can choose:


- immediate charge;
- a daily schedule;
- a weekly schedule.

Note: Charging starts at the programmed time if the engine is switched off and the vehicle is plugged into a power source (subject to subscription).



To modify the charging programmer (by week), press the “Change” button located underneath the “Calendar”. Press “Add a charge schedule” and a window will open to adjust the charge start time and end time.

Confirm your choice by pressing “Done”.

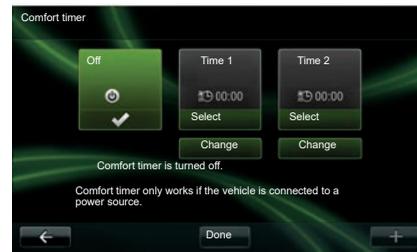

“Comfort timer”

This menu allows you to:

- deactivate the air preconditioning;
- set the start time for air preconditioning.

Press one of the buttons to activate or deactivate it.

You can set up to two air preconditioning times. To set the start time, press “Change”.

Set the time and press “Done” to confirm.

TAKE CARE (1/2)



Access the “TAKE CARE” menu.

There is an air ioniser and a system to check the quality of the outside air.



You can activate/deactivate automatic running by ticking the “Start ioniser at each vehicle start” option. Press “Done” to confirm your choice.


“Ioniser”

The air ioniser uses two modes:

- “Clean”: helps to reduce bacteria and allergenic particles present in the air;
- “Relax”: Creates a healthy and relaxing driving atmosphere through ion-emission;
- “Off” (Stop emission).

Once the mode has been selected, it will automatically stop after thirty minutes.

TAKE CARE (2/2)

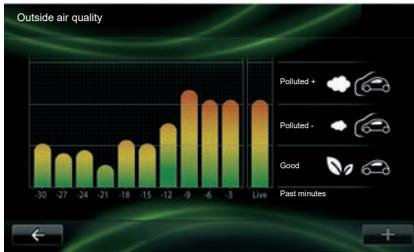

“Outside air quality”

This menu shows you the air quality graph.

The graph gives an estimate of the outside air quality over the last fifteen minutes of use.

The three pictograms indicate the quality level (respectively from the healthiest to the most polluted air):



For safety reasons, carry out these operations when the vehicle is stationary.

ON-BOARD COMPUTER/VEHICLE SETTINGS



Onboard computer

From the “Vehicle” menu, select, “Onboard computer” to access the following information since the last reset:

- date of starting calculation;
- total distance;
- average speed;
- average fuel consumption;
- total fuel or energy consumption.

To reset the on-board computer and instrument panel information, press “Reset” and confirm by pressing “Yes”.



Settings

From the “Vehicle” menu, select “Settings”. Depending on the equipment level, the following settings are available:

- parking aids;
- activating/deactivating the blind spot warning on the door mirrors;
- lane departure warning;
- automatic door mirror folding on locking the vehicle;
- automatic central locking/unlocking when driving;
- activating/deactivating the rear screen wiper when switching to reverse gear;
- activating/deactivating the daytime running lights;



- unlocking of the driver’s door when a door is opened;
- activating/deactivating easy access when you get into or out of your vehicle;
- configuration of the driving style indicator on the instrument panel;
- switching off the instrument panel when charging;
- activating/deactivating the Driving Eco route plan;
- activating/deactivating automatic lighting of the main beam headlights.

INTRODUCTION TO THE SERVICES MENU (1/2)



Access the “My services” menu.

From the main menu, press “My services”.

The “My services” menu grants access to the following elements:

- “R-LINK Store”;
- “Navigation services”;
- “Settings”;
- “E-Guide R-LINK”;
- “Email”;
- “User profiles”;
- “Renault Assistance”;
- your apps.

Some services can be accessed without charge during the trial period, after which the subscription can be extended via the R-LINK store or at www.myrenault.com.

The pop-up menu “+” can be used to access the following functions:

- “Add application”;
- “Check for updates”;
- “Settings”.



Presentation of “R-LINK Store”

R-LINK Store is the applications store for your multimedia system. Here you can buy applications or subscriptions to services through a secure online system.

Please refer to the “Downloading and installing applications from R-LINK Store” section for more information.



“Navigation services”

Please refer to the “Navigation services” section.



“Settings”

This menu brings together the management tools for applications and connections. Please refer to the “Services Settings” section for more information.

INTRODUCTION TO THE SERVICES MENU (2/2)



“E-Guide R-LINK”

This menu brings together all the instructions. They can be consulted from your multimedia system.



“Email”

This menu allows you to view your emails, only with the vehicle stationary.



“User profiles”

This menu enables you to customise your user profile.



“Renault Assistance”

This menu gives you access to Renault assistance.

INSTALLING APPLICATIONS WITH R-LINK STORE (1/6)

R-LINK Store

R-Link Store is an online store enabling you to buy applications, services and content. R-LINK Store can be accessed directly from your multimedia system or from a computer connected to the Internet.

You must install R-LINK Toolbox software on your computer to be able to download applications and map updates on the SD card. Please refer to “Downloading and installing applications from a computer” in this section.

Note: some products can only be purchased via a computer connected to the Internet on the R-LINK Store. If so, a message will be displayed to notify you. Please refer to “Downloading and installing applications from a computer” in this section.

Note: Some services and applications are paid. For more information, please see the general conditions of sale.



Downloading and installing applications from your vehicle

From the main menu, press “Services”, then “R-LINK Store”.

The available applications and services are classified in three tabs:

- “**Selection**” presents a selection of applications;
- “**Top Apps**” classes the applications by order of popularity;
- “**Categories**” displays the Apps by theme (entertainment, maps, etc.)

Select an application to get a description.

The pop-up menu “+” **1** can be used to access the following functions:

- “**My products**” displays a summary of the products bought along with the expiry dates for the products concerned;
- “**Search**” can be used to search for a product using key word(s);
- “**Update**” can be used to search for available updates for the applications, services and content installed;
- “**Legal information**” displays the legal information about R-LINK Store.

Press “Purchase” to choose the type of payment.

For more information, depending on your country, please consult the <https://renault-connect.renault.com> site.

The availability of the services described may vary.

INSTALLING APPLICATIONS WITH R-LINK STORE (2/6)



Downloading and installing applications from your vehicle (continued)

The multimedia system offers two types of payment: by MY Renault account or by credit or debit card. Select one of the two options, tick the box to accept the general conditions of sale for R-LINK Store, then go on to payment.

Note: it is mandatory to enter an e-mail address. An invoice will be sent to this address, along with the user and installation instructions, depending on the application purchased.

Note: if the application you wish to download is too large for the memory available, the “Purchase” button will be replaced by “Purchase not authorised”. This product can only be purchased R-LINK Store using your computer. Please refer to “Downloading and installing applications from a computer” in this section.



For safety reasons, carry out these operations when the vehicle is stationary.

INSTALLING APPLICATIONS WITH R-LINK STORE (3/6)

Pay using MY Renault account

To make a payment using your MY Renault account:

- Enter the e-mail address and password for your account, then press “OK”.
- Choose a credit or debit card from those already linked to your account, or add a new one.
- Enter your bank card details, then press “Done”.

Your app download will begin immediately. Once the application is downloaded, its icon is displayed in the “My Apps” menu.

Note: the download time for the application can vary depending on the size of the application and on the reception quality on the mobile network.

Note: to use this type of payment, you must first create a MY Renault account. Please see the information on “Creating an account in MY Renault” in this section.

Paying by credit or debit card

Enter a valid email address, then press “OK”.


Enter your bank card details, then press “Done”.

Your application download will begin immediately. Once the application has been downloaded, its icon will be displayed in the “Services” menu.

Note: the download time for the application can vary depending on the size of the application and on the reception quality on the mobile network.

Note: The card details you enter in the system when making a purchase may be stored. To delete them from the system, please see the information on “Deleting bank card details” in this section.

INSTALLING APPLICATIONS WITH R-LINK STORE (4/6)

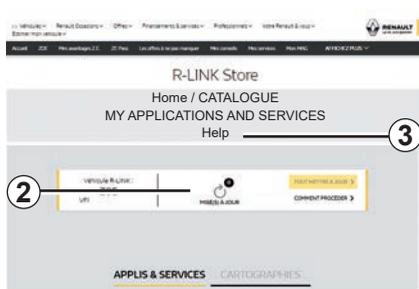

Downloading and installing applications from a computer

You can also download applications from a computer connected to the Internet (particularly useful for large files). You can also manage your products from your computer and transfer them to your multimedia system via the system SD card.

Note: some products can only be purchased from a computer connected to the Internet, from the www.myrenault.com website.

Create an account for MY Renault

To buy and download applications from a computer connected to the Internet from www.myrenault.com, you must first create an account MY Renault:

- from a computer connected to the Internet, open your browser, go to www.myrenault.com and select your country;
- Click on the “Register” button and follow the steps indicated on the website to create your account MY Renault.

Note: When creating your MY Renault account, you will need your VIN and multimedia system serial number.

Once you have created an account, you can explore the catalogue of applications and search for product updates.

The screens shown in the user manual are not contractual.

Searching for updates

- Log in to your account MY Renault then select the “Updates” **2** menu.

The website displays the updates available for your multimedia system, Apps, map data, etc.

- Select the updates you want to install, then follow the procedure displayed on the screen to save them on the SD card.

Note: during synchronisation, the installation of R-Link Toolbox software is proposed. You should install this software to be able to download products and updates to the SD card.

Note: The R-Link Toolbox software can be downloaded to a computer from the “Help” menu **3** of the R-Link Store.

Depending on your computer brand and model, the software R-Link Toolbox may not install correctly.

INSTALLING APPLICATIONS WITH R-LINK STORE (5/6)

Note: internal software updates for the multimedia system are only available from a computer connected to the Internet.

Note: For more information, click on the “Help” menu **3** or consult an Authorised Dealer.

Downloading Applications

- From the main menu on the MY Renault site, select the application you wish to purchase then select “Buy”;
- Accept the general conditions of sale to download the application;
- Press the “Cancel” button to cancel the downloading process and return to the application description page;
- Follow the instructions displayed on the screen to finalise your purchase.


Note: During the finalisation of your purchase, installation of the R-Link Toolbox software is recommended. You must install this software in order to download products and updates purchased and saved on the SD card.

Installing applications to your system using the SD card

Insert your vehicle’s multimedia system SD card into the SD port on your computer.

R-Link Toolbox Installs the updates for your navigation system.

Once the updates are saved, you can insert the SD card into your vehicle’s multimedia system.

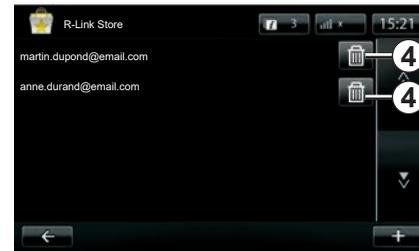

Managing personal data

The system stores e-mail addresses and card details in the memory.

Deleting an e-mail address

When purchasing on the R-Link Store, upon entering your email address, press the button at the far right of the “Email” line. The list of e-mail addresses saved in the system is displayed.

Press **4** opposite the address you wish to delete.

The address is immediately deleted.

INSTALLING APPLICATIONS WITH R-LINK STORE (6/6)



“Restore factory settings”


From the main menu, press “System”, then “System settings”.

This menu lets you reset all the system settings and/or delete all personal data.

Data sharing

You can authorise or reject data sharing from the moment the system is started. Please refer to the “Starting, Stopping” section.

Refusing to share data stops the connections of applications and services.

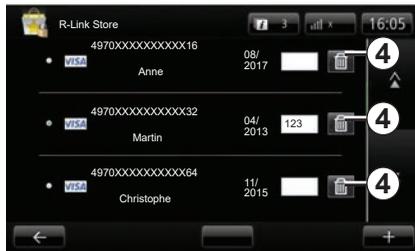

Deleting credit or debit card data

When you make a purchase with a credit or debit card, press “Pay with a card already saved in the memory” on the purchase confirmation form.

The list of credit or debit cards saved in the system is displayed.

Press **4** opposite the card data to be deleted.

The credit or debit card data is immediately deleted.

Note: the vehicle must be connected to a mobile network to be able to delete card data.

ANDROID AUTO™ (1/2)

Introduction

“Android Auto™” is an application that can be downloaded from your smartphone which enables you to use some applications on your phone from your multimedia system screen.

Note: to find out if your smartphone is compatible with the “Android Auto™” application, refer to the manufacturer's website if there is one.

The functions of the “Android Auto™” application depend on the make and model of your telephone. For further information, please refer to the manufacturer's website if there is one.



First use

- Download and install the “Android Auto™” application from the application download platform on your smartphone;
- connect your telephone to your multimedia system's USB port;
- a window is displayed on your multimedia system screen;
- Accept the request by pressing the “Yes” button;
- press the **1** button on your vehicle's multimedia system screen;


- a window is displayed on your multimedia system screen informing you that you need to accept the confidentiality clauses of the application on your smartphone in order to use the “Android Auto™” application;
- confirm by pressing “Accept” on your phone;
- press the **1** button on your vehicle's multimedia system screen once more.

The application is launched on the multimedia system.

If the procedure described above fails, repeat the operation.

Note: the “Android Auto™” application will only operate if your smartphone is connected to your vehicle's USB port.

ANDROID AUTO™ (2/2)

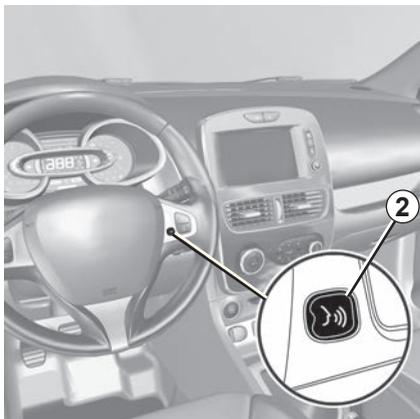

Once the “Android Auto™” application is activated on your multimedia system, you can use the voice recognition button in your vehicle to control some functions of your smartphone by voice. To do this, press and hold (for approximately three seconds) button **2** on the steering wheel or **3** on the steering column control for your vehicle (for more information, refer to the section on “Using voice recognition”).



Note: when you use “Android Auto™”, you can access navigation and music applications on your smartphone. These applications will replace similar applications integrated in R-Link which are already launched. For example, only one navigation application, Android Auto™, or the application integrated into your multimedia system can be used.

Note: when you are using the “Android Auto™” application, certain functions of your multimedia system will continue to be carried out in the background. For example if you start “Android Auto™” and use the navigation on your smartphone while the radio on the multimedia system is currently playing, the radio will continue to be broadcast.

Returning to the R-Link interface

To return to the R-Link interface, press the button to return to the multimedia system welcome screen (for more information, consult the “Introduction to the controls” section).

When you use the “Android Auto™” application, the transfer of cellular data required for it to operate may lead to additional costs not included in your phone plan.

MY RENAULT (1/5)

Introduction

“MY Renault” is an application that can be downloaded from your smartphone which allows you to receive and send information relating to your vehicle, such as:

- the remaining range of your vehicle in kilometres (miles);
- the log of your daily, weekly and annual mileage (kilometrage);
- a record of journeys since the last reset (mileage (kilometrage), average speed, distance travelled, average fuel consumption, fuel consumed and your eco scores);
- a summary of your eco scores;
- your vehicle’s tyre pressures;
- the place where your vehicle is parked;
- a log of the journeys in the last thirty days (date, duration, consumption, distance);

- sending your vehicle’s multimedia system a destination already set on the application;
- consult your contracts and the information on your vehicle at any time;
- access the history and schedule of services;
- locate the dealerships in your area and make an appointment;
- discuss with experts at the approved dealer;
- contact 24/7 assistance;
- etc.

Downloading and installing the “MY Renault” application on your smartphone

To download the “MY Renault” application, you need:

- to open the application download platform on your smartphone;
- to search for the “MY Renault” application from the search bar of the application download platform on your smartphone;
- to click on “Download” once the “MY Renault” application has been found.

Once the download is complete, a new icon, “MY Renault”, appears on your smartphone. The “MY Renault” application is installed on your smartphone.

Note: if you do not have a “MY Renault” account, refer to the information below on creating an account.

MY RENAULT (2/5)

Creating a user account with the “MY Renault” application.

To use the “MY Renault” application, you need to create a user account. To do this:

- open the “MY Renault” application on your smartphone;
- select “Create my account” from the main menu of the application;
- fill the fields with the information required for creating your account then confirm by selecting “Create my account” at the bottom of the screen.

A confirmation message appears on the screen on your smartphone confirming the creation of the account. A confirmation e-mail has been sent to you via the e-mail address you have provided.

- Confirm and activate your account by clicking on the link displayed in the e-mail confirming the creation of your “MY Renault” account.

Note: if an error message appears on the screen on your smartphone, make sure that you have correctly completed the fields with the information required.

Save and synchronise your “MY Renault” account with your vehicle

From the “MY Renault” application:

- log in to your account, then click “Add a vehicle”;
- add the VIN (vehicle identification number) or the vehicle registration number;
- press the “Synchronisation” button to start synchronising your smartphone to your vehicle in order to benefit from your connected services.

Note:

- if you want to synchronise the “MY Renault” app with your vehicle, you must be present in your vehicle with the multimedia system switched on and parked in an area with network coverage;
- even if you do not synchronise the “MY Renault” app with your vehicle, you will still be able to access your service contracts.

When you use the “MY Renault” application, the transfer of cellular data required for it to operate may lead to additional costs not included in your phone plan.

MY RENAULT (3/5)

Main functions of the “MY RENAULT” application:

“Range”

This function allows you to view the remaining range of your vehicle in miles (kilometres).

“Trip computer”

This function allows you to check the record of the journeys since the last reset (“Average Speed”, “Distance travelled”, “Average Fuel Consumption” etc.).

“Mileage (kilometrage) monitor”

This function allows you to consult the daily, weekly and annual log of the mileage (kilometrage) travelled with your vehicle.

“Tyre pressures”

This function allows you to check the pressure or the condition of your vehicle's tyres.

“Driving Eco”

This function allows you to view your eco scores.

“Journeys”


This function allows you to view the log of your journeys for the last thirty days.

“My card”

This function enables you to:

- to find the place where your vehicle is parked;
- to set a destination to be sent to your vehicle's multimedia system;
- to complete your journey on foot to the final destination from the place where you park your vehicle.

MY RENAULT (4/5)

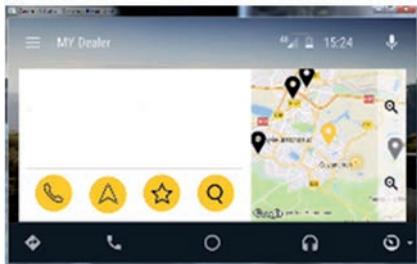

MY Renault in Android Auto™

This function can be used to access the MY Renault app in Android Auto™ and to display the following information on your multimedia system screen:


- Manage your vehicle;
- View your contracts and information;
- Access the history and schedule of services;
- Locate the approved dealers in your area and make an appointment;
- ...



Activating the MY Renault application in Android Auto™

To activate the MY Renault application in Android Auto™:

- download and install the MY Renault application. See the paragraph on “Creating a user account”;
- make sure that you have added your vehicle to the MY Renault account. See the paragraph on “Linking your MY Renault account to your vehicle”;
- press the **1** button on the Android Auto™ screen;

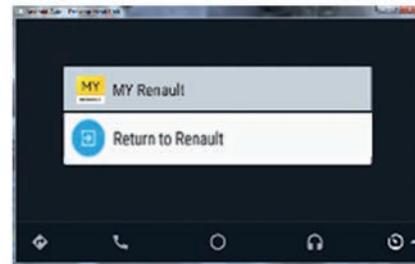

- click on the MY Renault menu;
- confirm the connection by pressing “OK”.

For safety reasons, you may only consult the MY Renault information while the vehicle is stopped. When the vehicle is being driven, an information screen is displayed for 5 seconds before automatically switching to the navigation screen.

MY RENAULT (5/5)

Renewing a service

MY Renault enables you to access various services: warranties, maintenance, connected services (depending on the equipment).

You can renew them directly from your MY Renault account using:

- the <https://renault-connect.renault.com> website;
- the MY Renault app.

From the MY Renault website

To renew one of your services as it approaches expiry, click the “Renault CONNECT” tab, then select “My services”.

Then click “Renew” and follow the step-by-step instructions.

From the MY Renault app

To renew one of your services as it approaches expiry, click on the “Contracts” tab from the home page.

Then click “Access the store” and follow the step-by-step instructions.

SERVICES SETTINGS



Accessing the services settings

From the main menu, press “Services”.

The “Settings” menu enables you to adjust the following elements:

- “Applications manager”;
- “Navigation services”;
- “Update applications”;
- “Data sharing settings”.



“Applications manager”

The applications manager enables you to delete application data, uninstall applications and view the following information:

- “About”;
- “System usage”;
- “Confidentiality”.

Delete application data

Select the application from which you wish to delete data, select the first tab, press “+” then “Delete application data”.

Deleting an application

Select the application you want to delete, select the first tab, press “+” then “Delete application”.

Note: the original multimedia system applications cannot be removed. You can only delete the user data. Select “+”, then “Clear user data”.



“Navigation services”

For further information, please refer to the section on “Navigation services”.



“Update applications”

This menu lets you search for installed application updates, but requires a valid subscription.



“Data sharing settings”

This menu enables you to activate or deactivate data sharing.

Note: in the event of deactivating data sharing, certain applications may not operate correctly.

SYSTEM SETTINGS (1/3)



Accessing the system settings

From the main menu, press “System”.

The “System settings” menu enables you to adjust the following elements:

- “Language”;
- “Display”;
- “Sound”;
- “Clock”;
- “Safety warnings”;
- “Home screen”;
- “Keyboards”;
- “Set units”;
- “Status & Information”;
- “Remove SD-card”;
- “Restore factory settings”;
- “Android Auto Settings™”.



“Language”

This menu enables you to select a language to apply to the system. Select the desired language, then a voice.



“Display”

This menu enables you to adjust the following settings:

- “Daytime brightness”;
- “Nighttime brightness”;
- “Automatic day/night mode”: select this option to enable the display to switch automatically from Night mode to Day mode. The system switches to Night mode when the external light is low or when the headlights are lit;
- “Force night mode”: select this option to force the display to switch to Night mode.



“Sound”

This menu enables you to adjust the following settings:



“Sound levels”

This function allows you to set the main sound levels:

- traffic information;
- hands-free system;
- phone ringtone;
- navigation instructions;
- synthetic voices;
- application alerts.

SYSTEM SETTINGS (2/3)



“Speed sensitivity volume”

This function allows you to automatically increase the volume based on vehicle speed.



“Voice output settings”

Use this option to choose the type of information dictated by the Navigation system voice.



“Voice”

This function allows you to choose the system voice. Please refer to the “Volume and voice” section for further information.




“Clock”

This menu lets you set the system clock and the format of the time display. It is recommended to keep the automatic setting.



“Safety warnings”

This menu lets you activate or deactivate the alerts provided by the system. Tick the alert boxes you wish to activate.

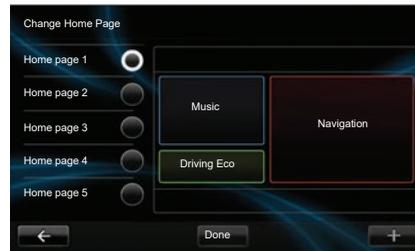

“Home screen”

This menu lets you adjust the layout of the home screen.

Choose one of the configurations from the left-hand list. The right section of the screen gives a preview of the changes. According to the equipment of your vehicle, the number of configurations may be reduced.

Once you have chosen a configuration, press the “Done” button to confirm your choice.

SYSTEM SETTINGS (3/3)



“Keyboards”

This menu lets you choose the type of virtual keypad used by the system:

- choose an alphabet type from Latin, Greek and Cyrillic, then press next;
- choose a keypad type from the choices on offer, then press “Done” to confirm your selection.



“Set units”

This menu allows you to choose the type of unit for various elements:

- “Distance units”;
- “GPS co-ordinate display”;
- “Temperature units”;
- “Barometer units”.



“Status & Information”

This menu gives you various pieces of system information:

- version information;
- status of the GPS;
- network status;
- licences;
- copyright.



“Remove SD-card”

This menu enables you to eject the SD card safely.

To remove the SD card from the SD port, please refer to “SD card: use, initialisation”.



“Restore factory settings”

This menu allows you to delete all information from the system.

Note: after resetting, the system will restart in English. To change the language, please refer to the information on “Language” in this section.



Android Auto Settings™

This menu allows you to set the preferences for the “Android Auto™” application and access the instruction tutorial for the application on your vehicle's multimedia system.

OPERATING FAULTS (1/3)

System		
Description	Causes	Solutions
The multimedia screen does not light up.	The interior temperature is lower than -20°C.	Switch on the ventilation so that a temperature above -20°C is reached.
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
No sound can be heard.	The volume is set to minimum or pause.	Increase the volume or deactivate pause.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.
No map is displayed.	The SD card is missing or damaged.	Check the SD card is present.

Phone		
Description	Causes	Solutions
No sounds or ringtone can be heard.	The mobile phone is not connected to the system. The volume is set to minimum or pause.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate pause.
Impossible to make a call.	The mobile phone is not connected to the system.	Ensure that the mobile phone is connected to the system. Unlock the phone keypad.

OPERATING FAULTS (2/3)

Navigation		
Description	Causes	Solutions
The vehicle position on the screen does not match its actual location or the GPS warning light on the screen remains grey or yellow.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
The directions on the screen do not correspond to the actual road.	The SD card is out of date. The map is not up to date.	Download updates from www.myrenault.com .
Traffic flow information is not displayed on the screen.	Guidance has not been activated. The subscription is not active.	Ensure guidance is activated. Select a destination and begin the guidance.
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	
Voice guidance is unavailable.	The navigation system does not include the intersection. Voice guidance or guidance is deactivated.	Increase the volume. Ensure voice guidance is activated. Ensure guidance is activated.
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.
The system calculates a detour automatically.	Prioritising avoid area settings or traffic restrictions will affect the calculation of the route.	Deactivate the "avoid area settings" function.

OPERATING FAULTS (3/3)

Voice recognition		
Description	Causes	Solutions
The system does not recognise the voice command stated.	The voice command has not been recognised. The voice recognition time delay has expired. The voice recognition cannot operate properly due to a noisy environment. The user spoke after the beep.	Check that the spoken voice command exists (refer to the “Using voice commands” section). Speak within the voice recognition time delay. Speak in a quiet environment.

ALPHABETICAL INDEX (1/2)

A

address..... GB.28 → GB.32, GB.51
air ioniser..... GB.78 – GB.79
Android Auto™..... GB.89 – GB.90, GB.94
answering a call..... GB.68 – GB.69

B

buttons..... GB.5 → GB.13, GB.15

C

call history..... GB.70
colours..... GB.97
communication..... GB.71
compass..... GB.34
connect a telephone..... GB.66
connected services..... GB.44 – GB.45, GB.81 → GB.88
controls..... GB.5 → GB.13, GB.15 → GB.18

D

destination..... GB.28 → GB.32
detailed route..... GB.35 → GB.39
detour..... GB.37 – GB.38, GB.40 → GB.42
dialling a number..... GB.68 – GB.69
disconnect a telephone..... GB.66

E

ECO driving..... GB.73
electric vehicle
 charging..... GB.48 – GB.49, GB.76 – GB.77
 vehicle range..... GB.76 – GB.77
electric vehicle..... GB.46 – GB.47, GB.50
ending a call..... GB.68 – GB.69
energy consumption..... GB.76 – GB.77
energy-saving..... GB.73
environment..... GB.73

F

fascias and steering wheel controls..... GB.5 → GB.13
favourite
 add..... GB.21
 delete..... GB.21
fuel
 consumption..... GB.80
fuel economy..... GB.73

G

guidance
 activation..... GB.28 → GB.32, GB.35
 cancellation..... GB.37
 voice..... GB.35 → GB.38

L

language
 change..... GB.97

M

map
 display..... GB.34, GB.43
 map symbols..... GB.34
 scale..... GB.34
MENU..... GB.15 → GB.18
MP3..... GB.59
MP3 player..... GB.59
My Renault..... GB.91 → GB.95

N

navigation..... GB.28 → GB.32, GB.40 → GB.42
navigation system..... GB.3

O

operating faults..... GB.100 → GB.102
operation..... GB.19 – GB.20

ALPHABETICAL INDEX (2/2)

P

- parking distance control..... GB.74 – GB.75
- personal data
 - delete GB.87 – GB.88
- precautions during use GB.3

R

- radio
 - automatic mode GB.54 → GB.58
 - automatic station storage..... GB.54 → GB.58
 - choosing a station GB.54 → GB.58
 - manual mode GB.54 → GB.58
 - station pretuning GB.54 → GB.58
- rear view camera GB.74 – GB.75
- receiving a call..... GB.68 – GB.69
- rejecting a call..... GB.68 – GB.69

S

- screen
 - monitor GB.19 – GB.20
 - navigation display GB.35 → GB.38
- SD card..... GB.3, GB.14, GB.59 → GB.61, GB.83 → GB.88, GB.99
- second route..... GB.37 – GB.38, GB.40 → GB.42
- settings
 - audio GB.62 – GB.63, GB.97 → GB.99
 - brightness GB.97
 - customising GB.97 → GB.99
 - navigation GB.52 – GB.53
- settings GB.72, GB.80, GB.96 → GB.99
- soft button..... GB.4, GB.15 → GB.18
- sounds
 - activate GB.33
 - deactivate GB.33
- stage..... GB.39
- switching off..... GB.19 – GB.20

system

- initialisation GB.14
- update GB.86 – GB.87

T

- telephone contacts list GB.67
- traffic information GB.40 → GB.42
- trip computer and warning system..... GB.80

U

- unpairing a telephone GB.64 – GB.65
- USB GB.59 → GB.61, GB.89

V

- voice
 - activate GB.33
 - deactivate GB.33
- voice control GB.22 → GB.27, GB.90
- voice recognition..... GB.22 → GB.27, GB.90
- volume GB.33



RENAULT S.A.S. SOCIÉTÉ PAR ACTIONS SIMPLIFIÉE AU CAPITAL DE 533 941 113 € / 13-15, QUAI LE GALLO
92100 BOULOGNE-BILLANCOURT R.C.S. NANTERRE 780 129 987 — SIRET 780 129 987 03591 / TÉL. : 0810 40 50 60

NX1048-12 - 77 11 413 921 - 10/2021 - Edition anglaise



7 7 1 1 4 1 3 9 2 1